
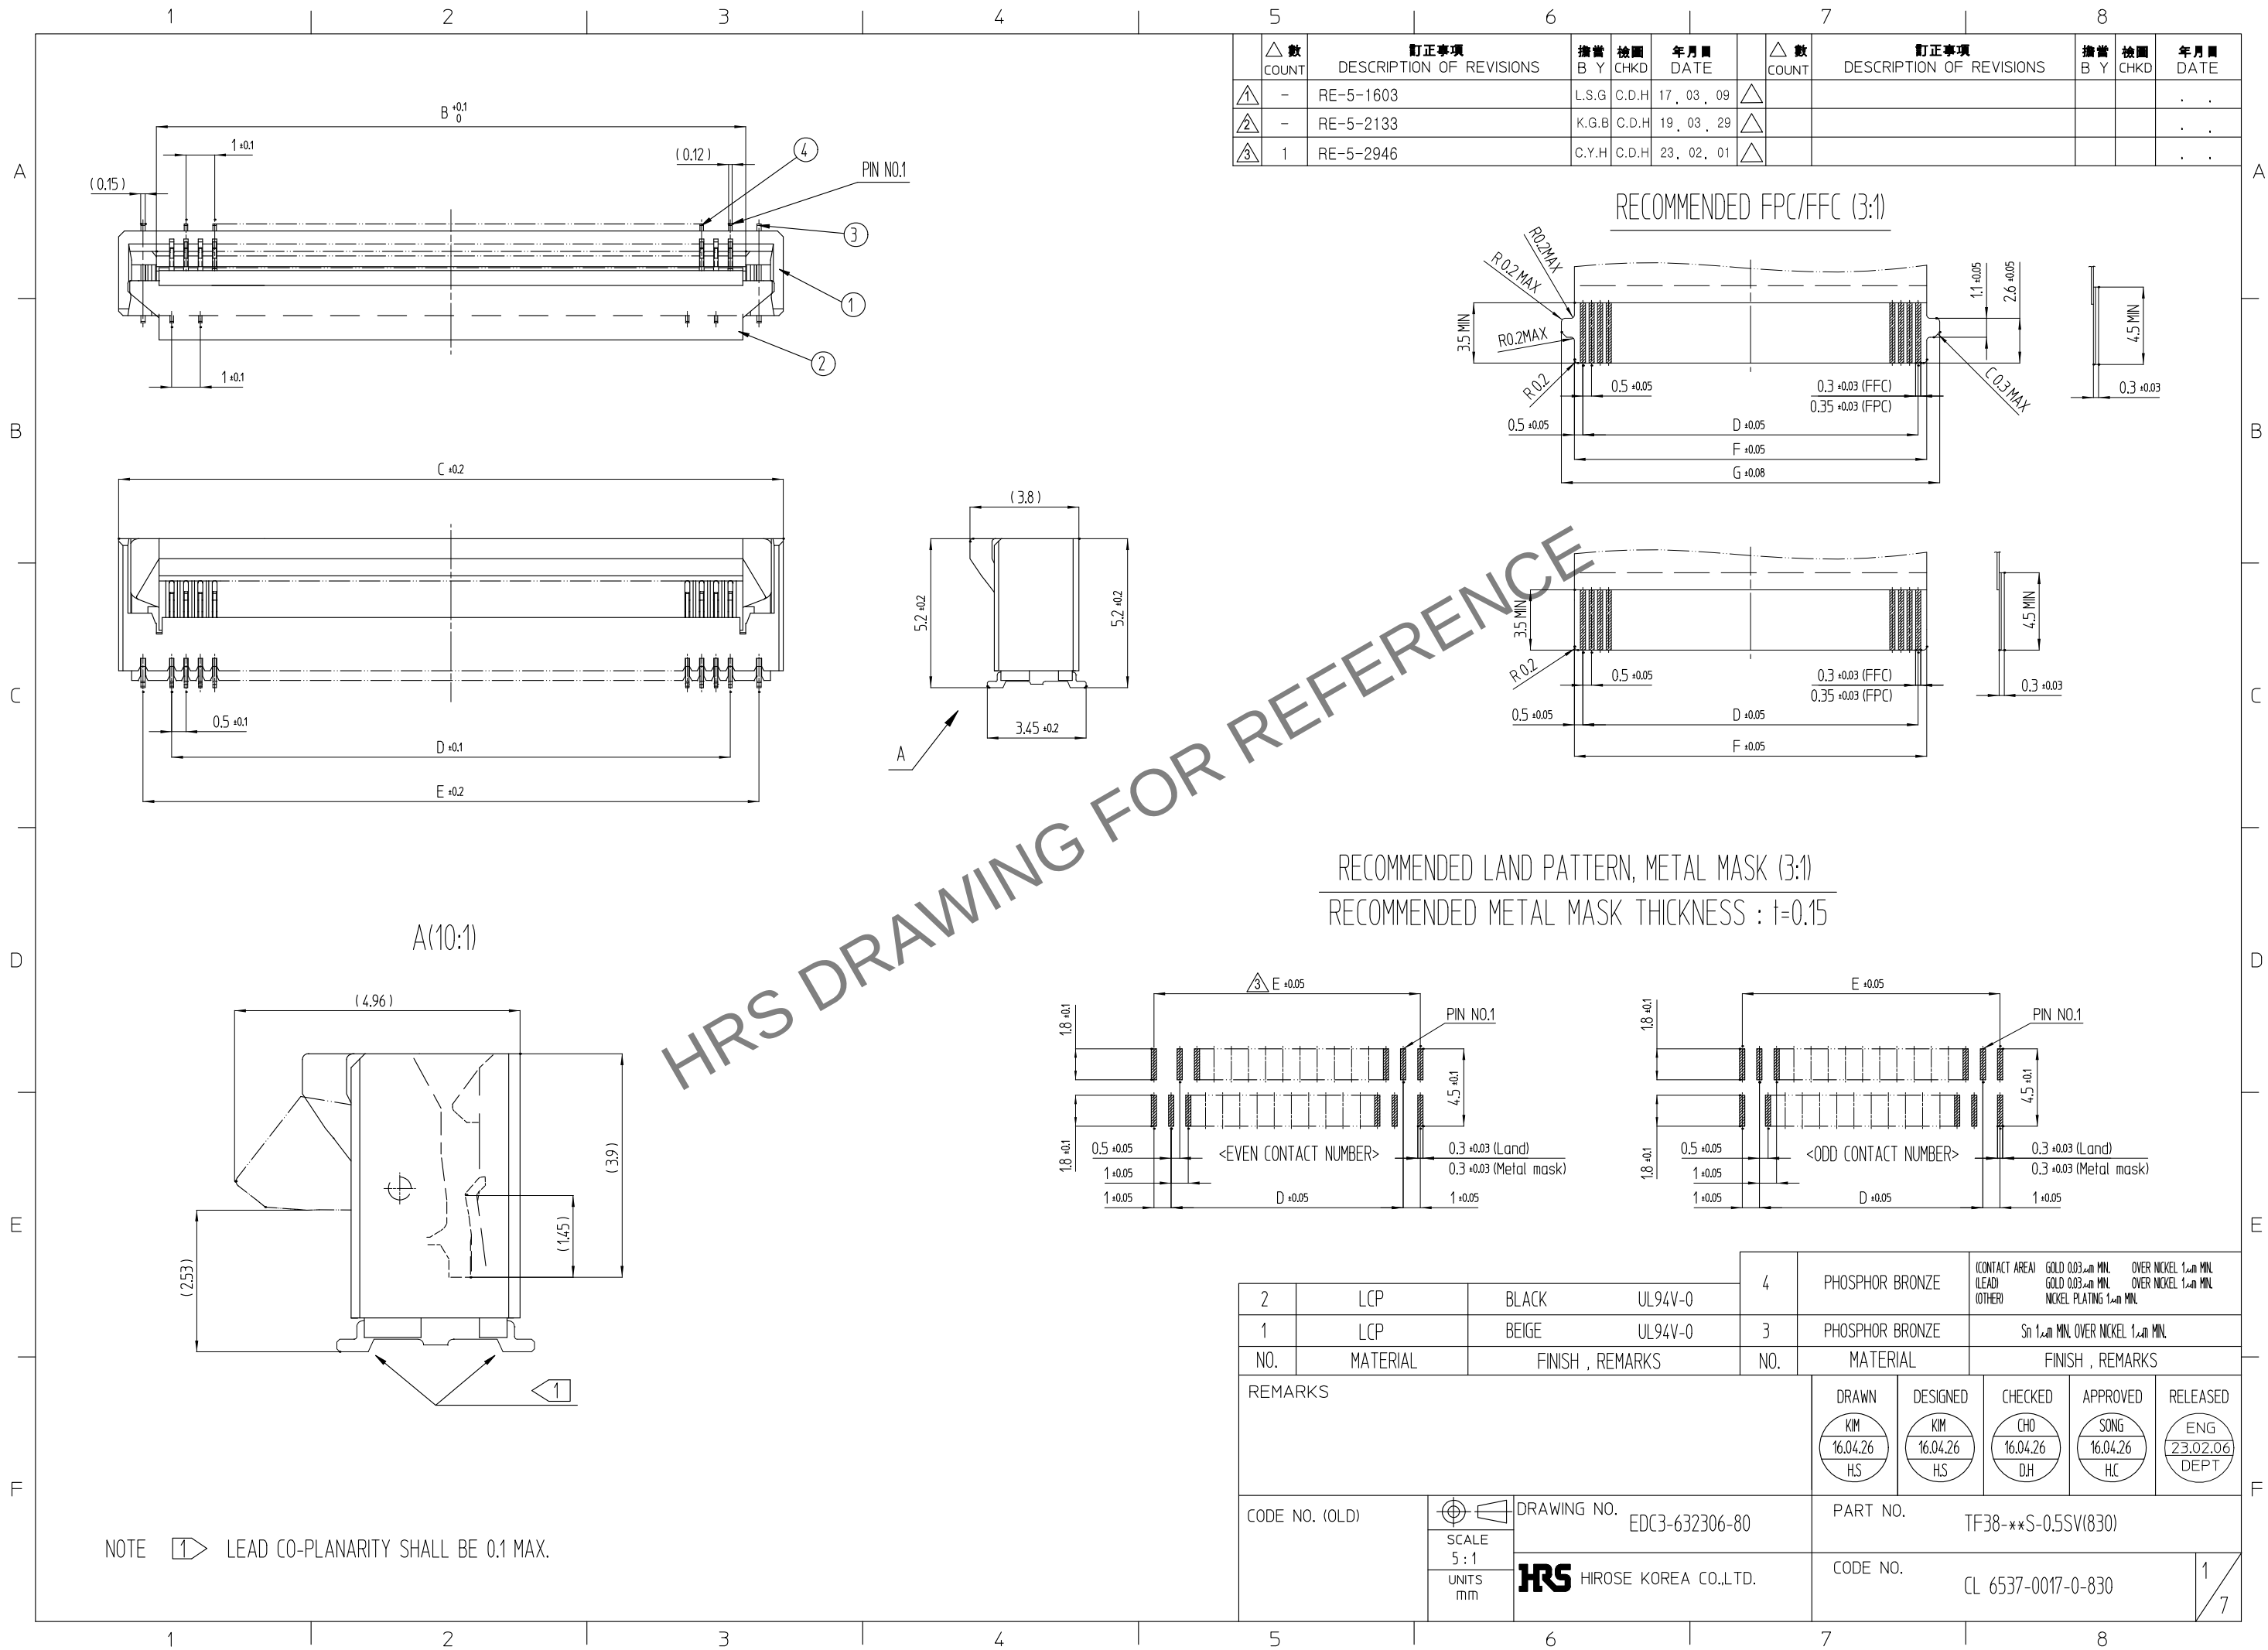


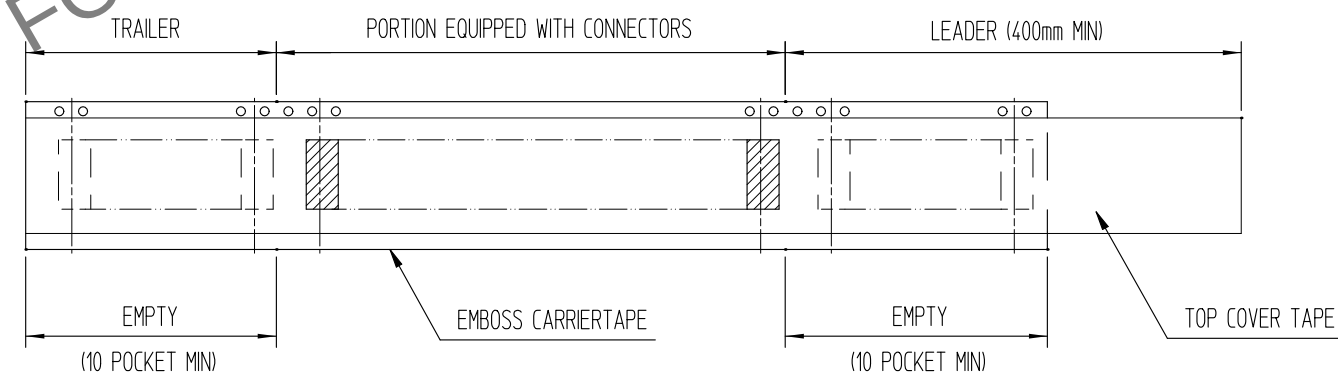

EMBOSSSED CARRIER TAPE DIMENSION (TAPE WIDTH TO 32mm MIN)

NOTE 2 PER REEL : 1000 CONNECTORS.

NO.	MATERIAL	FINISH , REMARKS		NO.	FINISH , REMARKS
REMARKS				DRAWN KIM 16.04.26 H.S	DESIGNED KIM 16.04.26 H.S
				CHECKED CHO 16.04.26 D.H	APPROVED SONG 16.04.26 H.C
				RELEASED ENG 23.02.06 DEPT	
CODE NO. (OLD)		DRAWING NO. EDC3-632306-80		PART NO. TF38-**S-0.5SV(830)	
	SCALE 2 : 1				
	UNITS mm	HRS HIROSE KOREA CO.,LTD.		CODE NO. CL 6537-0017-0-830	2 / 7

Mar.1.2024 Copyright 2024 HIROSE ELECTRIC CO., LTD. All Rights Reserved.
In case of consideration for using Automotive equipment / device which demand high reliability, kindly contact our sales window correspondents.


1					2		3		4		5		6			7			8						
												△ 數 COUNT	訂正事項 DESCRIPTION OF REVISIONS			擔當 B Y	檢圖 CHKD	年月日 DATE	△ 數 COUNT	訂正事項 DESCRIPTION OF REVISIONS			擔當 B Y	檢圖 CHKD	年月日 DATE
												△ 1	RE-5-1603			L.S.G	C.D.H	17, 03, 09	△						. . .
												△ 1	RE-5-2133			K.G.B	C.D.H	19, 03, 29	△						. . .
												△ 1	RE-5-2946			C.Y.H	C.D.H	23, 02, 01	△						. . .

△	PART NUMBER	NUMBER OF CONTACTS	DIMENSION OF CONNECTOR, FPC/FFC, PCB PATTERN					DIMENSION OF PACKING					
			B	C	D	E	F	G	H	J	K	L	M
△	TF38-16S-0.5SV(830)	16	8.57	11.2	7.5	9.5	8.5	10	24	—	11.5	11.5	24.5
	TF38-18S-0.5SV(830)	18	9.57	12.2	8.5	10.5	9.5	11	24	—	11.5	12.5	24.5
	TF38-20S-0.5SV(830)	20	10.57	13.2	9.5	11.5	10.5	12	24	—	11.5	13.5	24.5
	TF38-22S-0.5SV(830)	22	11.57	14.2	10.5	12.5	11.5	13	24	—	11.5	14.5	24.5
	TF38-24S-0.5SV(830)	24	12.57	15.2	11.5	13.5	12.5	14	24		11.5	15.5	24.5
	TF38-26S-0.5SV(830)	26	13.57	16.2	12.5	14.5	13.5	15	32	28.4	14.2	16.5	32.5
	TF38-30S-0.5SV(830)	30	15.57	18.2	14.5	16.5	15.5	17	32	28.4	14.2	18.5	32.5
	TF38-32S-0.5SV(830)	32	16.57	19.2	15.5	17.5	16.5	18	44	40.4	20.2	19.5	44.5
	TF38-36S-0.5SV(830)	36	18.57	21.2	17.5	19.5	18.5	20	44	40.4	20.2	21.5	44.5
	TF38-38S-0.5SV(830)	38	19.57	22.2	18.5	20.5	19.5	21	44	40.4	20.2	22.5	44.5
	TF38-40S-0.5SV(830)	40	20.57	23.2	19.5	21.5	20.5	22	44	40.4	20.2	23.5	44.5
	TF38-45S-0.5SV(830)	45	23.07	25.7	22	24	23	24.5	44	40.4	20.2	26	44.5
	TF38-50S-0.5SV(830)	50	25.57	28.2	24.5	26.5	25.5	27	44	40.4	20.2	28.5	44.5
TF38-60S-0.5SV(830)	60	30.57	33.2	29.5	31.5	30.5	32	56	52.4	26.2	33.5	56.5	

NO.	MATERIAL		FINISH , REMARKS		NO.	MATERIAL		FINISH , REMARKS						
REMARKS									DRAWN KIM 16.04.26 HS	DESIGNED KIM 16.04.26 HS	CHECKED CHO 16.04.26 DH	APPROVED SONG 16.04.26 HC	RELEASED ENG 23.02.06 DEPT	
CODE NO. (OLD)				DRAWING NO. EDC3-632306-80		PART NO. TF38-**S-0.5SV(830)								
		SCALE 1:1		 HIROSE KOREA CO.,LTD.		CODE NO. CL 6537-0017-0-830			3 / 7					
		UNITS mm												

This connector requires delicate and careful handling.
To prevent connector/FPC breakage and contact failure (mating failure, FPC Pattern breakage, etc),
read through the instruction shown below and handle the connector properly.
This instruction manual is applicable to uasge with FPC/FFC.

[Connector part nomenclature]

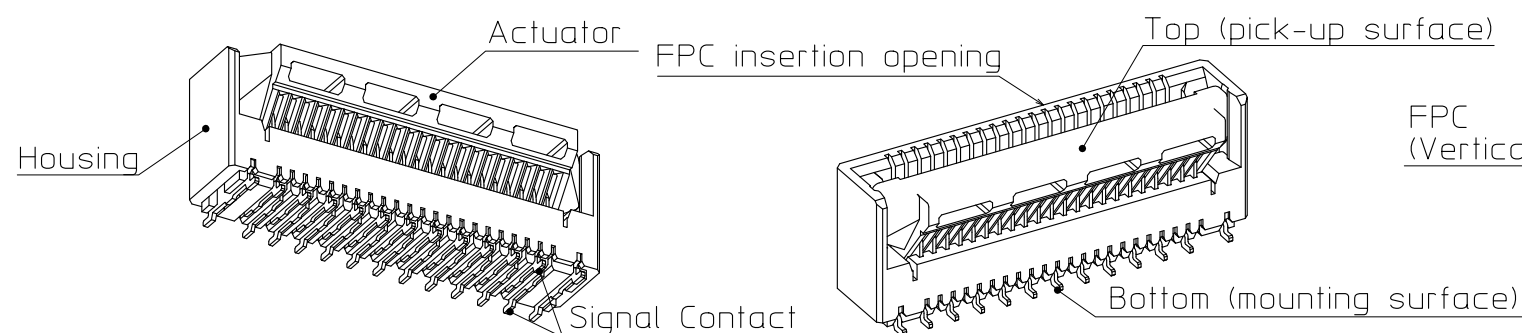

[Operation and precautions]


1. Initail condition

The product is supplied with the actuator closed.
Actuator does not have to be operated before inserting FPC.


[Caution]

- Do not open the actuator when the FPC is not inserted (Example 1).
- Do not insert FPC or operate actuator before mounting (Example 1).


- When deliverd -

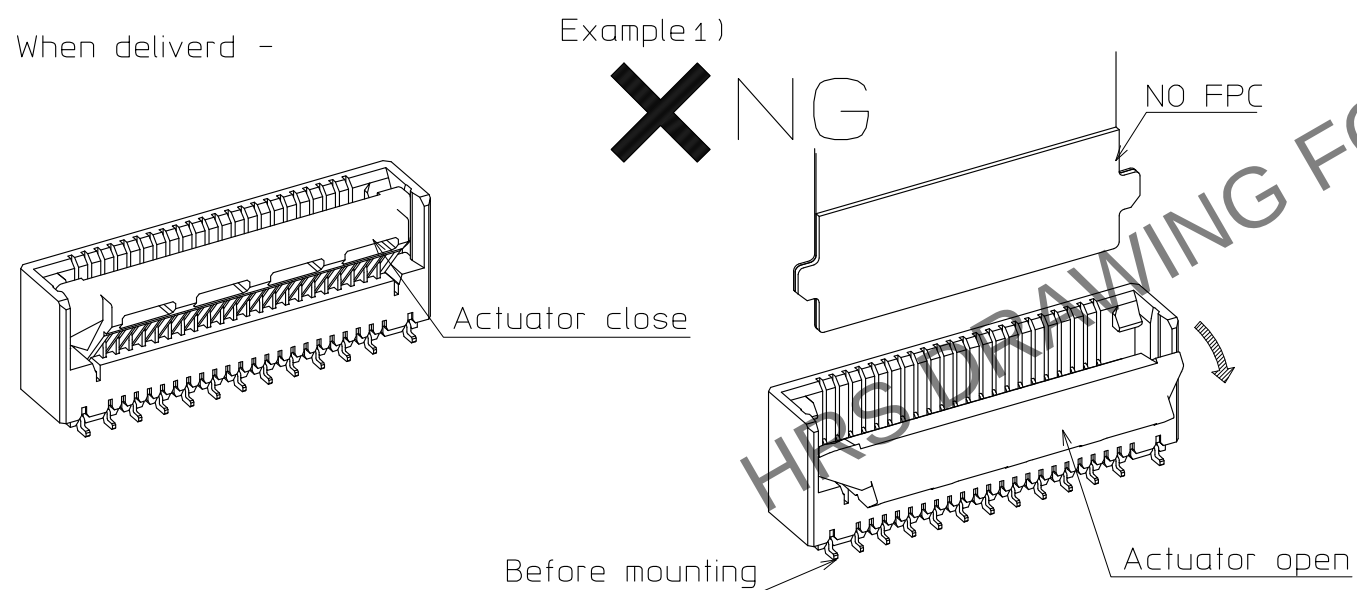


Example2)
OK

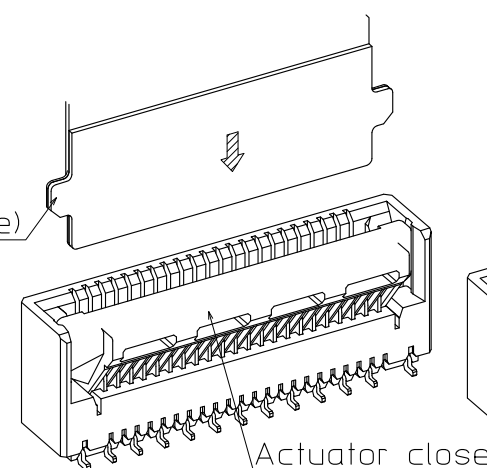


Example3)
NG

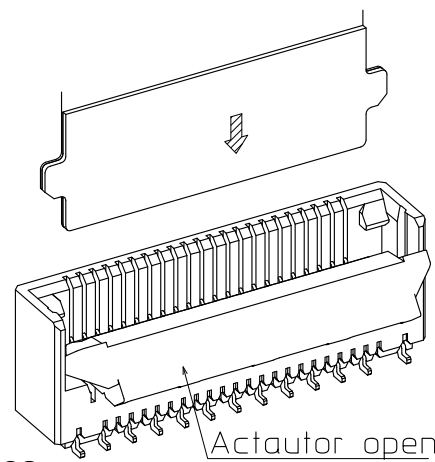


Example4)
NG

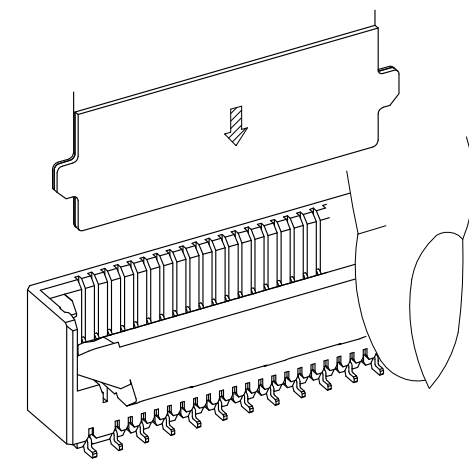

Example5)
OK

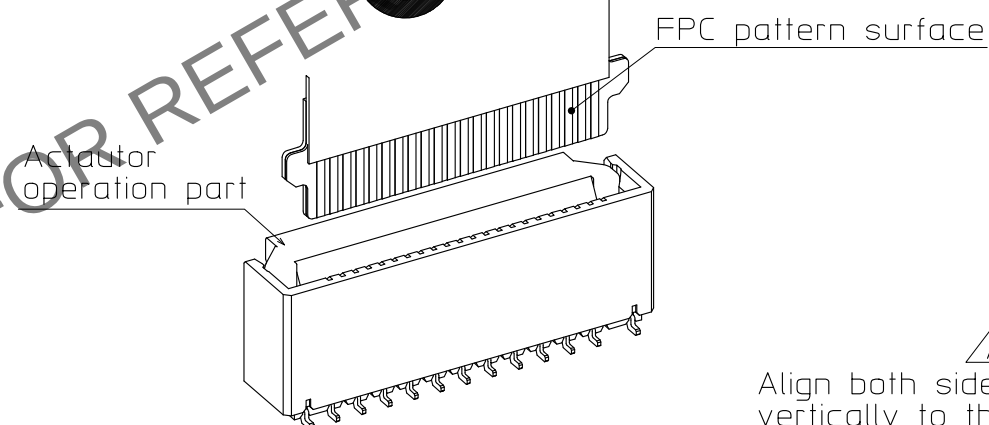


Example6)
OK

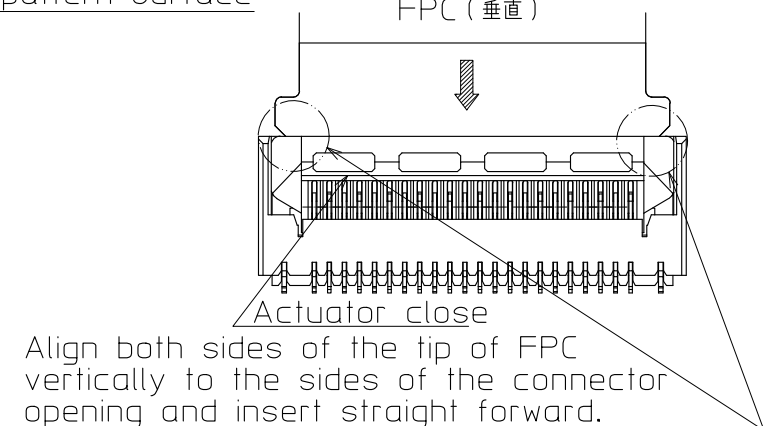


Align both sides of the tip of FPC vertically to the sides of the connector opening and insert straight forward.


Example7)
NG

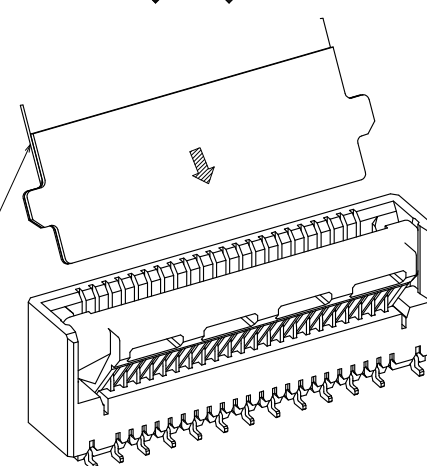

Example8)
NG

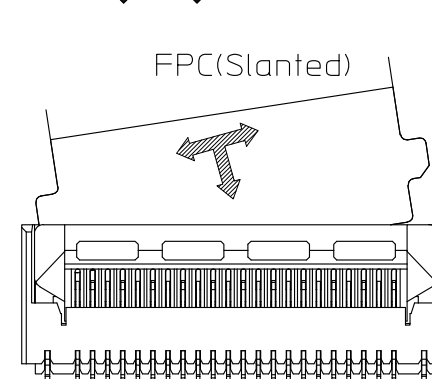

Example9)
NG

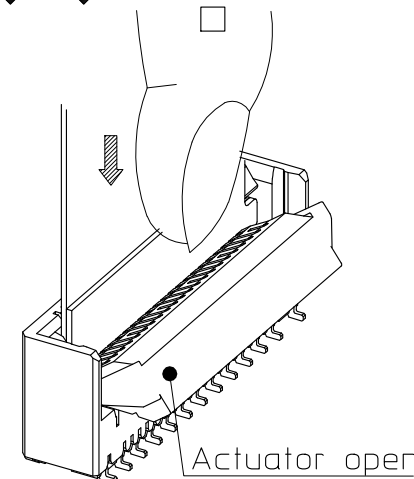

2. How to insert FPC

Insert the FPC into the connector opening verically to the PCB surface (Example 2).
Insert it properly to the very end.

[Caution]

- Make sure the actuator is closed when insertion FPC.
- Do not insert the FPC when the actuator is open (Example 3).
- While actuator is open, it is structured so that FPC can't be inserted, but if it is forced to insert FPC it will cause breakage.
- Do not insert the FPC when the actuator is pressed from above a finger (Example 4).
- Insert the FPC pattern surface on the opposite side of the actuator operation part (Example 5).
- Align both sides of the tip of FPC vertically to the side of the connector opening and insert straight forward (Example 6).
- Do not twist the FPC to up and down or right and left or an angle (Example 7 ,8).
- Do not open actuator with fingers when insert FPC (Example 9).

<Instruction manual (1)>

HRS HIROSE KOREA CO.,LTD.

PART NO.

TF38-SERIES

4/7

Mar.1.2024 Copyright 2024 HIROSE ELECTRIC CO., LTD. All Rights Reserved.
In case of consideration for using Automotive equipment / device which demand high reliability, kindly contact our sales window correspondents.

3. FPC insertion check


Make sure that the FPC tabs are located in proper position after FPC insertion (Example 10).
(The FPC position is to be aligned by the protrusion the housing.)

[Caution]

- Do not insert the FPC at an angle and/or stop it before insertion is completed (Example 11, 12).

Example 10)


○ OK

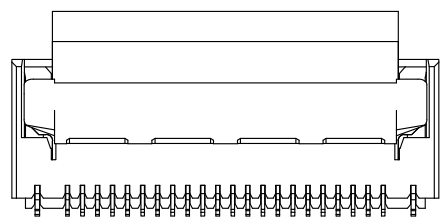

FPC is completely inserted to the end.

Example 11)


✗ NG

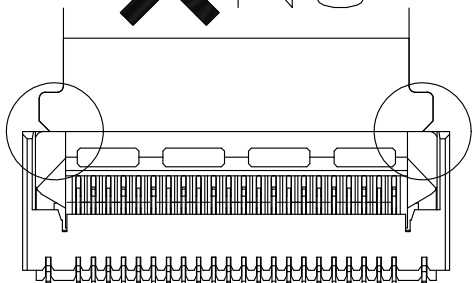

Insertion of FPC is shallow and not fully inserted to the end.

Example 12)

✗ NG

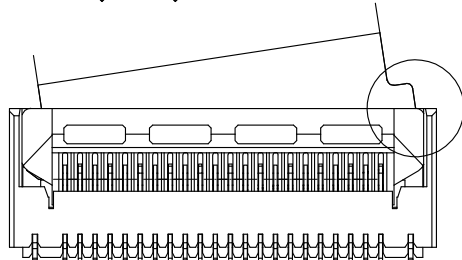

FPC is inserted in slanted angle and not fully inserted to the end.

4. Use of the actuator(open/close)


Slowly flip down the actuator to the lock (Example 13).
Slowly flip up the actuator to release the lock (Example 14).

[Caution]

- To open/close the actuator, operate at the center of the actuator (Example 15).
- To open/close the actuator, do not operate the actuator at one end only (Example 16).
- The actuator is opened up to the movable limit, 90 degree. Do not open the actuator beyond the specified degree or apply excess force to the actuator (Example 17).
- Do not pick the actuator to lift and pull it (Example 18).
- Operate the actuator by hand without using sharp tool such as Tweezers (Example 19).
- Do not apply excess force to the actuator during the operation (Example 20).




Example 13)

○ OK

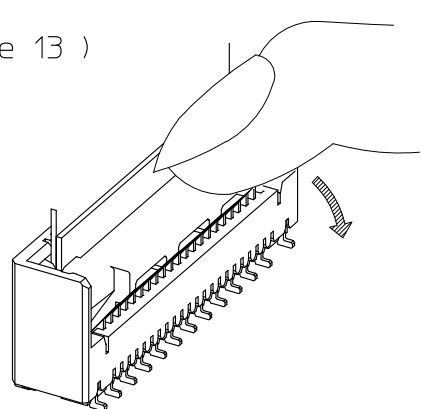

Example 14)


○ OK

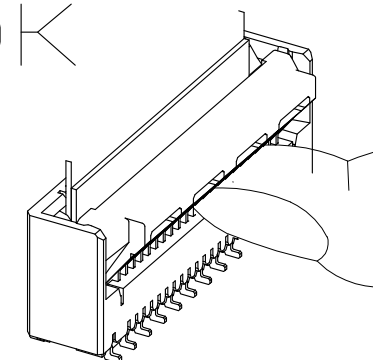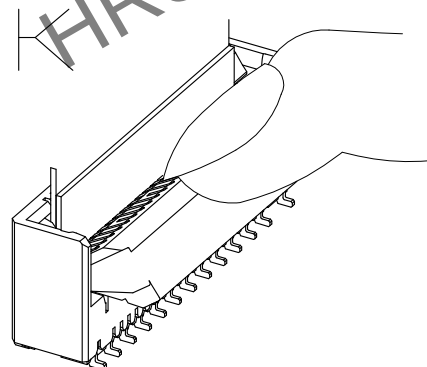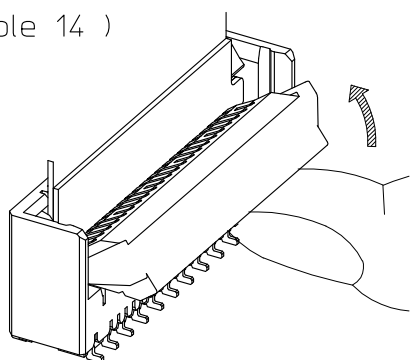

Example 15)


○ OK

Operate the actuator at the center

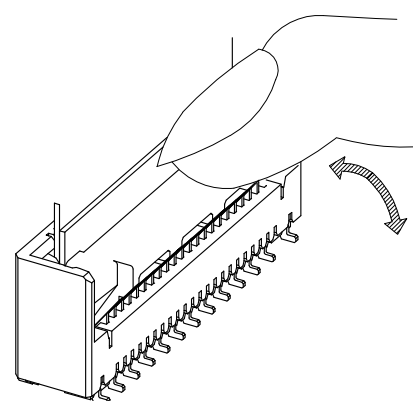


Example 17)

✗ NG

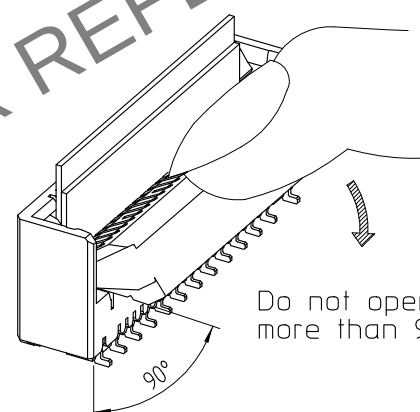

Example 19)


✗ NG

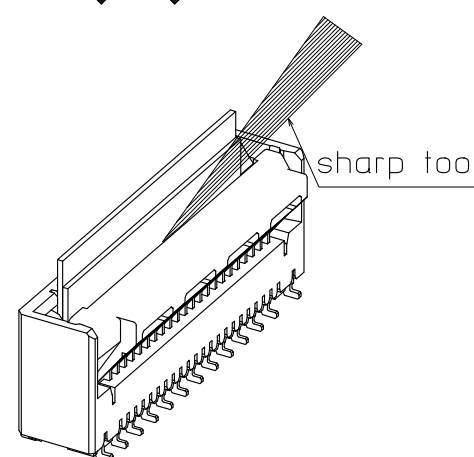

Example 16)


✗ NG

Do not operate the actuator at one end only

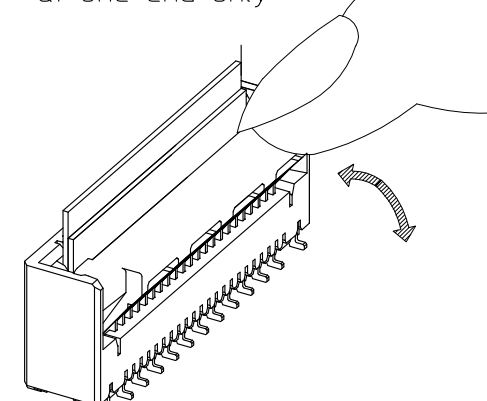


Example 18)

✗ NG

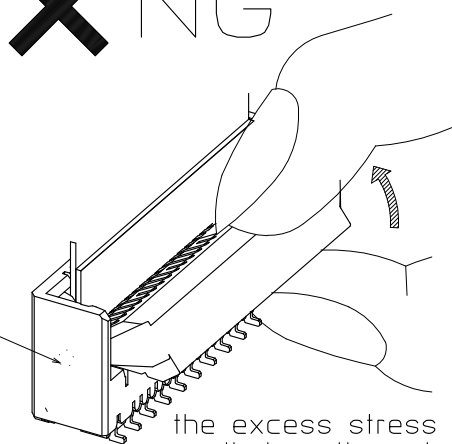

Example 20)

✗ NG

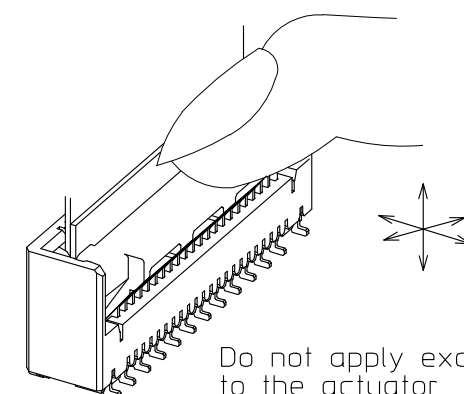

<Instruction manual (2)>

Mar.1.2024 Copyright 2024 HIROSE ELECTRIC CO., LTD. All Rights Reserved.
In case of consideration for using Automotive equipment / device which demand high reliability, kindly contact our sales window correspondents.


5. How to remove FPC

After flip up the actuator to the fully opened position vertically
withdraw the FPC (Example 21).


[Caution]

- Do not attempt to pull the FPC without unlocking the housing (Example 22).
- After forcibly remove FPC, retention force of FPC may decrease.
- This connector has the temporary FPC holding structure with the housing.
For FPC removal, do not pull out the FPC other than in the vertically direction
of the PCB (Example 23).



Example 21)

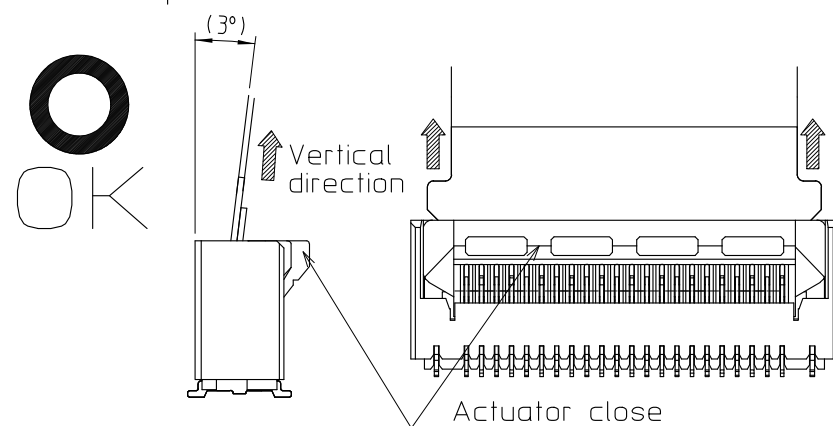


Example 22)

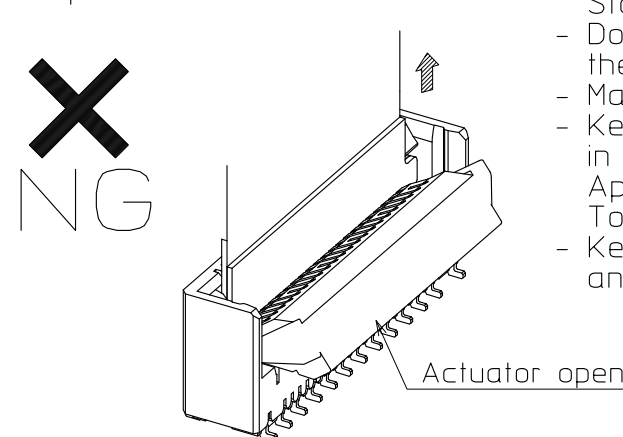


Example 23)

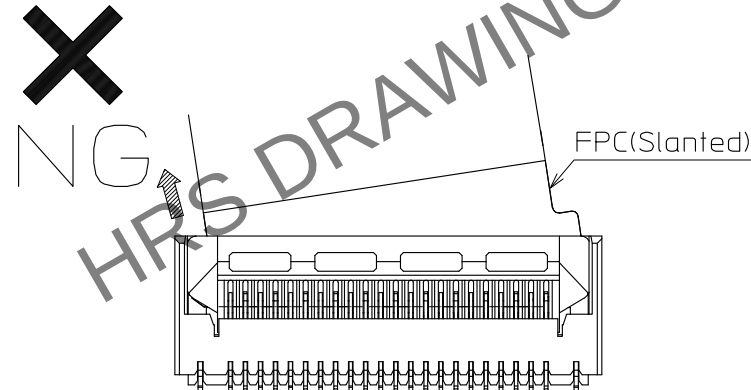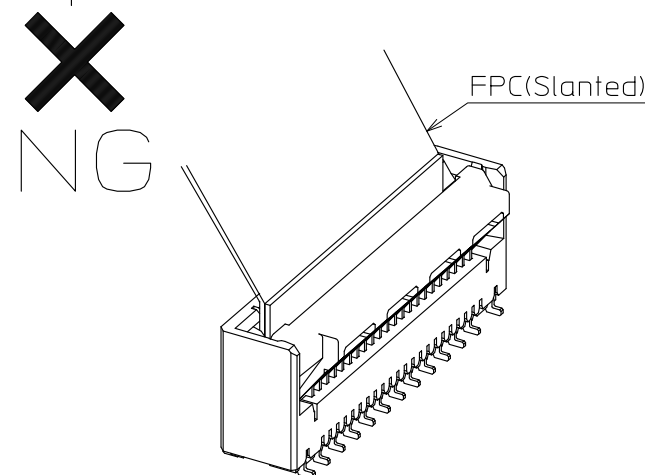


Example 24)

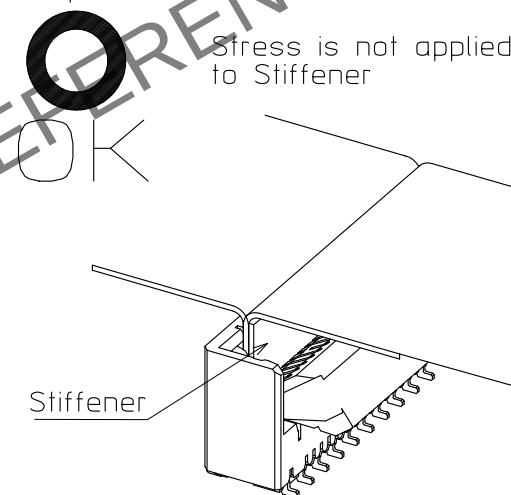


Example 25)

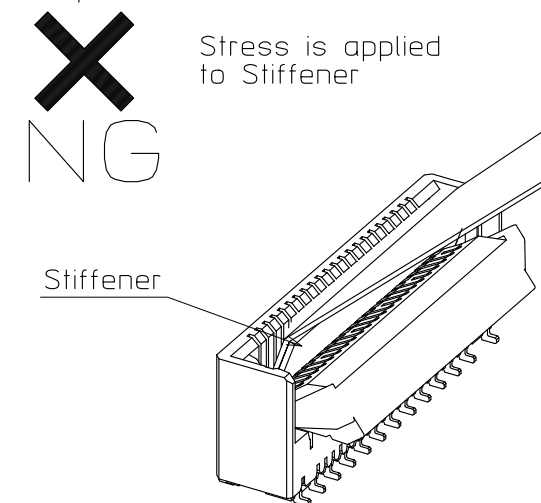

Example 26)

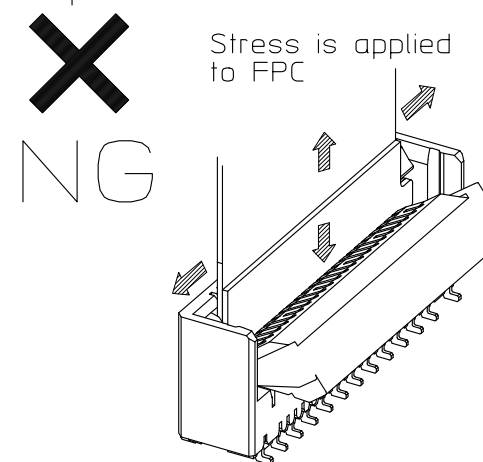

Example 27)

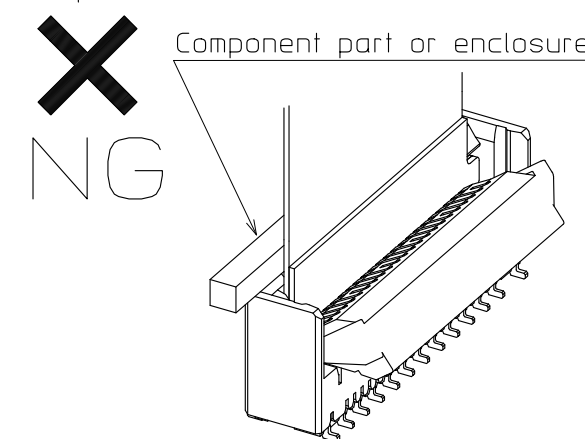

[Precautions for component layout]

Depending on a FPC routing, a load is applied to the connector,
and a contact failure may occur.
To prevent a failure, take the following notes into a consideration during mechanism design.

[Caution]

- When fixing FPC after FPC cabling, avoid pulling FPC, and route the wire FPC with slack.
In this regard, the stiffener is vertical to the PCB (Example 24).
- Avoid applying forces to FPC in vertical or horizontal directions.
Do not bend the FPC excessively near the connector during use,
or it may cause contact failure of FPC breakage.
Stabilizing the FPC is recommended (Example 25, 26)
- Do not mount other components or enclosure touching to the FPC underneath
the FPC stiffener (Example 27).
- Make adjustments with the FPC manufacturer for FPC bending performance and wire breakage.
- Keep a sufficient FPC insertion space in the stage of the layout
in order to avoid incorrect FPC insertion.
Appropriate FPC length and component layout are recommended for assembly ease.
Too short FPC length makes assembly difficult.
- Keep spaces for the locking lever movement and its operation for PCB design
and component layout.

<Instruction manual (3)>

Mar.1.2024 Copyright 2024 HIROSE ELECTRIC CO., LTD. All Rights Reserved.
In case of consideration for using Automotive equipment / device which demand high reliability, kindly contact our sales window correspondents.

【Instructions for mounting on the PCB】

Follow the instructions shown below when mounting on the PCB.

【Caution】

- Refer to recommended layouts on the page 1 for PCB and Stencil pattern.
- Shorter pattern width than the recommended PCB dimension, could cause solder wicking and/of flux penetration.
- Larger pattern than the recommended stencil dimension, could cause solder wicking and/of flux penetration.
- Clearance underneath the contact lead and the housing is very small. In case solder resist and/or silk screening are applied on PCB underneath the connector, verify the thickness, or it could push up the connector bottom and may cause soldering defect and/or insufficient fillet formation.
- Apply reflow temperature profile within the specified conditions. In individual applications, the actual temperature may vary, depending on solder paste type, volume/thickness and PCB size/thickness. Consult your solder paste and equipment manufacturer for specific recommendations.
- Prevent warpage of PCB, where possible, since it can cause soldering failure : even with 0.1 mm max coplanarity.
- When mounting on the flexible board, please make sure to put a stiffener on the backsides of the flexible board. We recommend a glass epoxy material with the thickness of 0.3mm min.
- Do not add 1.0N or greater external force when unreel or pick and place the connector etc, or it may get broken.


【Instructions for PCB handling after mounting the connector】

Follow the instructions shown below when mounting on the PCB.

【Caution】

- Splitting a large PCB into several pieces
 - Screwing the PCB
- During the handling described above, do not exert an excessive force on the PCB. Otherwise, the connector may become defective.
- The warp of a 100mm wide PCB should be 1.0mm or less. The warp of PCB suffers stress on connector and the connector may become defective(Example 27).

Example 27)

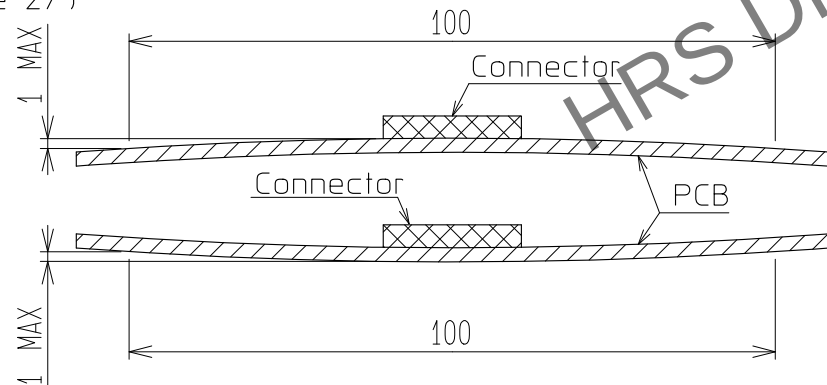


【Instructions on manual soldering】

Follow the instructions shown below when soldering the connector manually during repair work, etc.

【Caution】

- Do not perform manual soldering with the FPC inserted into the connector.
 - Do not heat the connector excessively. Be very careful not to let the soldering iron contact any parts other than connector leads. Otherwise, the connector may be deformed or melt.
 - Do not supply excessive solder (or flux).
- If excessive solder (or flux) is supplied on the terminals, solder or flux may adhere to the contacts, resulting in poor contact. Supplying excessive solder to the metal fittings may hinder locking lever rotation, resulting in breakage of the connector.

【Recommended reflow temperatur profile】

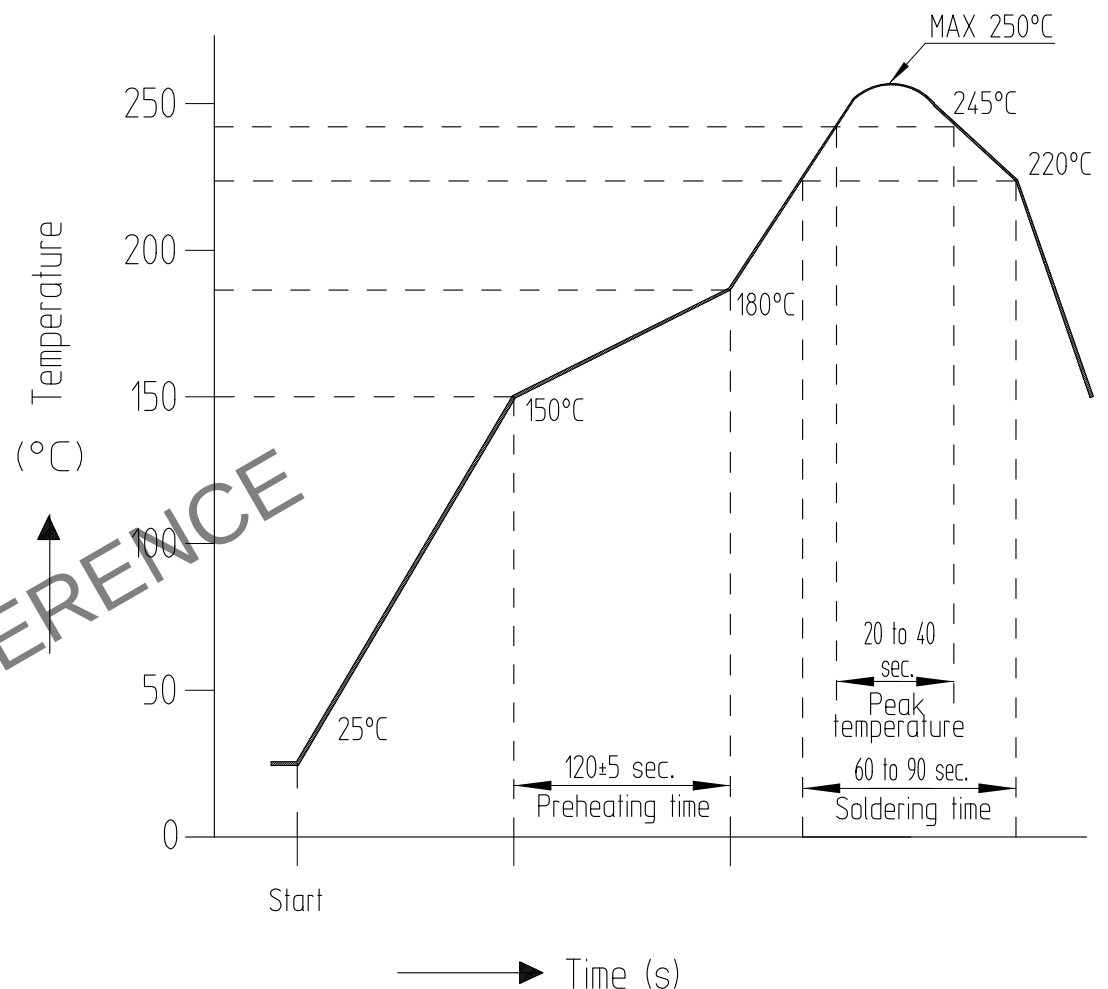

【Applicable conditions】

Reflow method : IR/Hot air
Solder : Paste type Sn/3.0Ag/0.5Cu

Test PCB :

- Material : Glass epoxy
- Land size : Recommended Pattern

Metal Mask :

- Thickness & Opening size : Recommended Pattern

This temperature profile is based on the above conditions. It may vastly depending on solder paste type, manufacturer, PCB size and mounting materials. Please use only after checking the mounting conditions.

<Instruction manual (4)>

HRS HIROSE KOREA CO.,LTD.

PART NO.

TF38-SERIES

△

7/7