


## DF58 Series Mating / Unmating Operation Instruction


## Mating


① By positioning the convexity of the socket sides to the header concavity, align the centers of the socket and the header in pitch direftion.

② Slightly press the socket down at the center of the socket.

3 Press down at the lever side with stabilizing the cable side to insert. Mating completes.

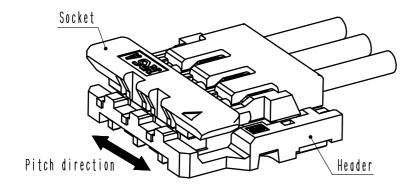


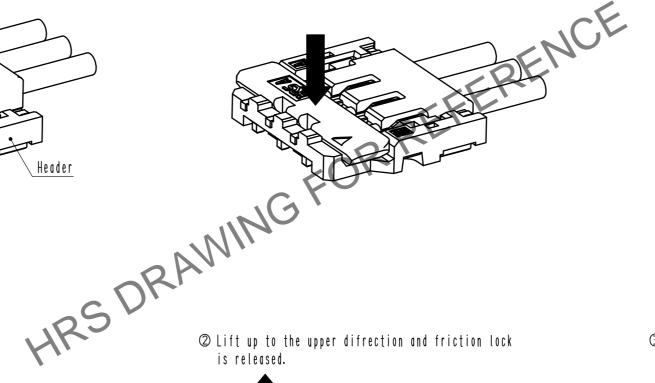

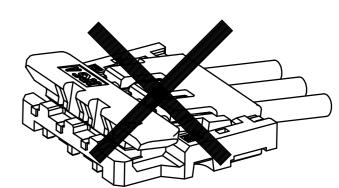


Unmating


① Hook the lever with finger nail. (Possible with one side)

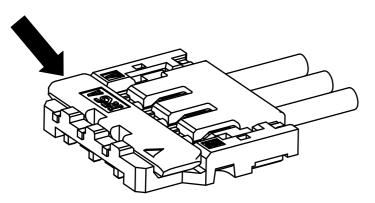

② Lift up to the upper difrection and friction lock

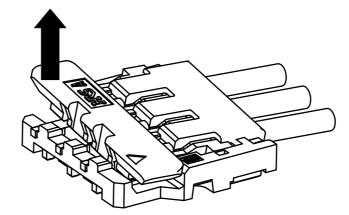

③ Lift it up to the upper direction more. and removal completes.

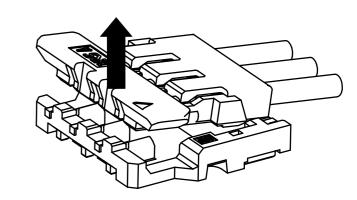

		DRAWING NO.	EDC-371175-00-00	)
HRS		PART NO.	DF58-*P-1.2V(21)	
		CODE NO.	CL666-	3/3