 


DF57 Series Mating / Unmating Operation Instruction


Mating

①By positioning the convexity of the socket sides to the header concavity, align the centers of the socket and the header in pitch direftion.



②Slightly press the socket down at cable side to tilted angle.

@Press down at the lever side with stabilizing t he cable side to insert. Mating completes.

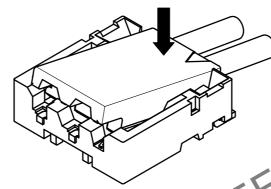



HRS DRAWING FOR REFERENCES

Unmating


Pitch direction

⊕Hook the lever with finger nail.

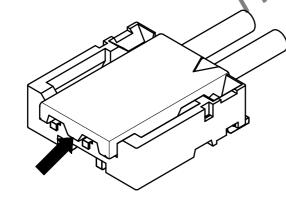

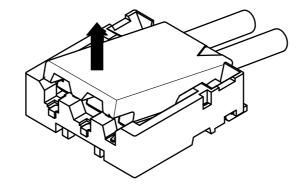

③Lift up to the upper direction and positive lock is released. Removal completes.

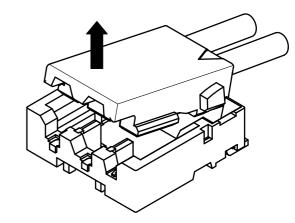

_	_	NO.		
! ⁼		CODE NO.	CL666-0112-0-00	2/3
]	HRS	PART NO.	DF57AH-2S-1.2C	
		DRAWING NO.	EDC-362936-00-00)

FORM HC0011-5-8_AN