



1. This tool is to help insertion / extraction operation of U.FL(A)-LP(P)-*** Plug to / from U.FL-R-SMT-* Receptacle. Refer to the figure on the right for the operation instructions.


- 2 At the time of plug insertion, align the mating axes of the plug and the receptacle. Confirm that the plug is positioned to be guided (The both axes are aligned and the plug is positioned stably.). Then insert the plug as straight as possible. Avoid an angled insertion.
- 3 Extract the plug as shown in the right bottom figure. Take a caution not to pull at the cable. Pulling at the cable can damage the connectors.
- 4 The tool tips are structurally vulnerable to deformation. The tips are likely to be deformed when the tool is dropped. Handle carefully
- 5 Modify the tool opening dimensions of the insertion tip for the operator's comfort, if necessary. Check that the tool does not scratch U.FL(A)-LP(P)-*** Plug.

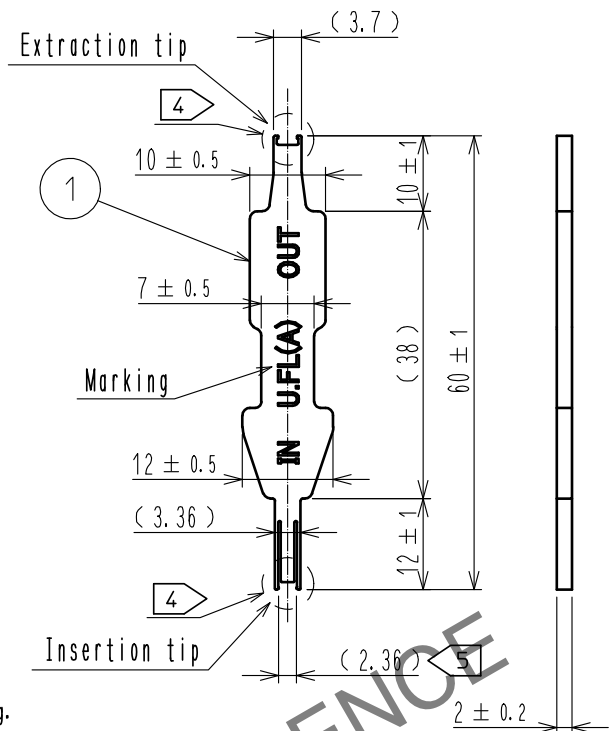

2 How to insert plug (FREE)

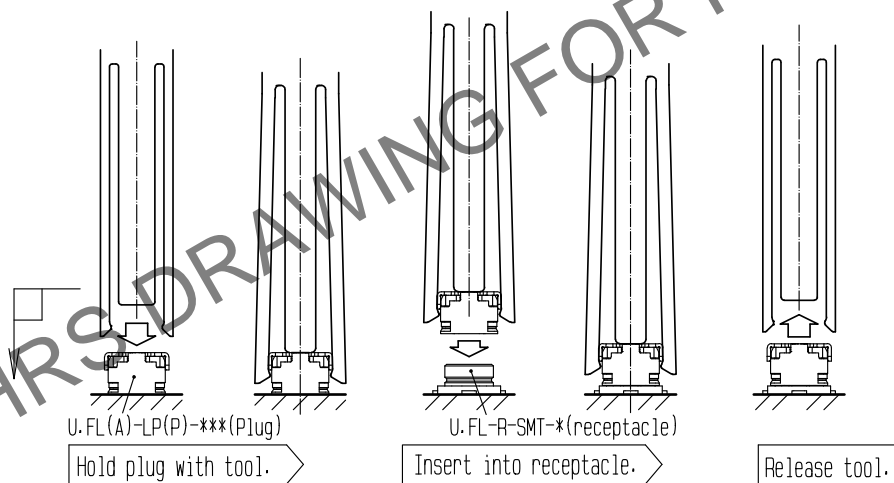

3 How to extract plug (FREE)

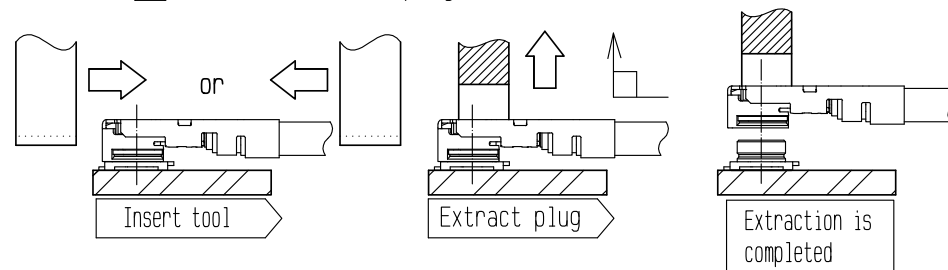

1	STAINLESS STEEL	DEGREASING						
NO.	MATERIAL	FINISH . REMARKS	NO.	MATERIAL	FINISH . REMARKS			
UNITS mm		SCALE 1 : 1	COUNT 	DESCRIPTION OF REVISIONS	DESIGNED	CHECKED	DATE	
HIROSE ELECTRIC CO., LTD.		APPROVED	TS. NOBE	20181112	DRAWING NO.	EDC-370607-00-00		
		CHECKED	MH. TSUCHIDA	20181112	PART NO.	U. FL(A)-LP-IN. OUT		
		DESIGNED	AH. MIYAZAKI	20181112	CODE NO.	CL331-2401-0-00		
		DRAWN	AH. MIYAZAKI	20181112				1/1