



Apr.1.2024 Copyright 2024 HIROSE ELECTRIC CO., LTD. All Rights Reserved.
In case of consideration for using Automotive equipment / device which demand high reliability, kindly contact our sales window correspondents.

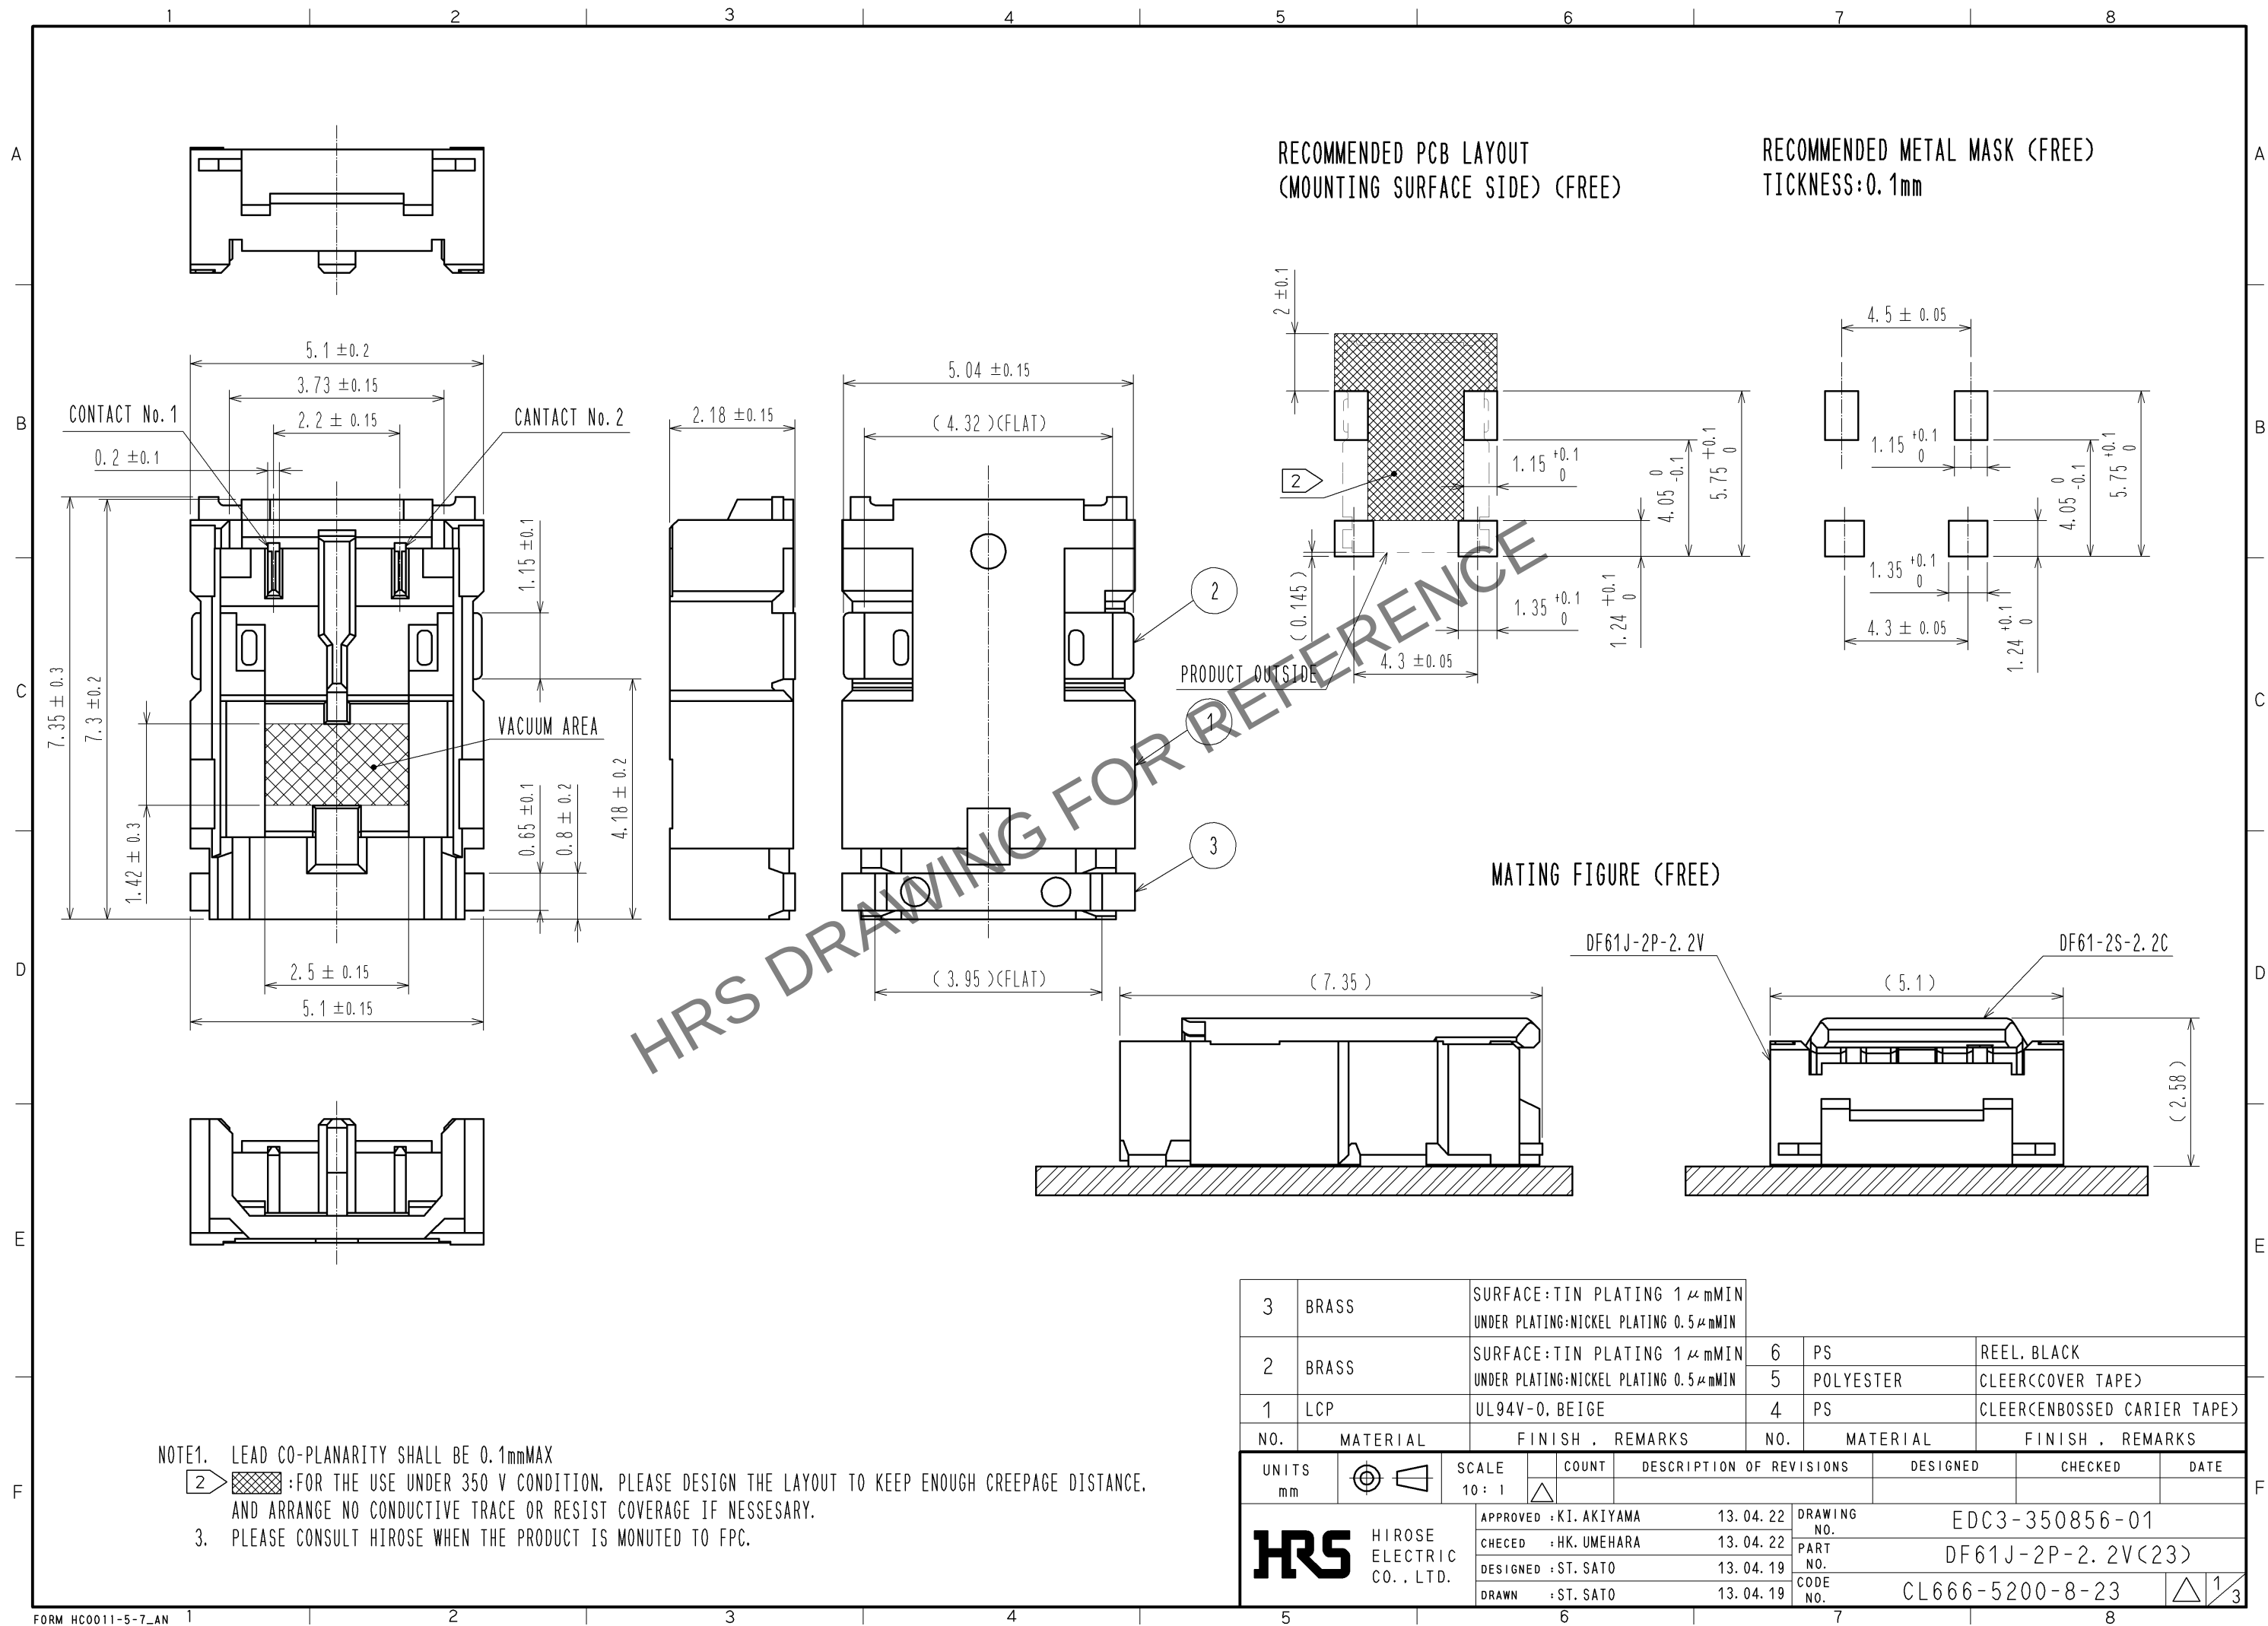


Apr.1.2024 Copyright 2024 HIROSE ELECTRIC CO., LTD. All Rights Reserved.
In case of consideration for using Automotive equipment / device which demand high reliability, kindly contact our sales window correspondents.

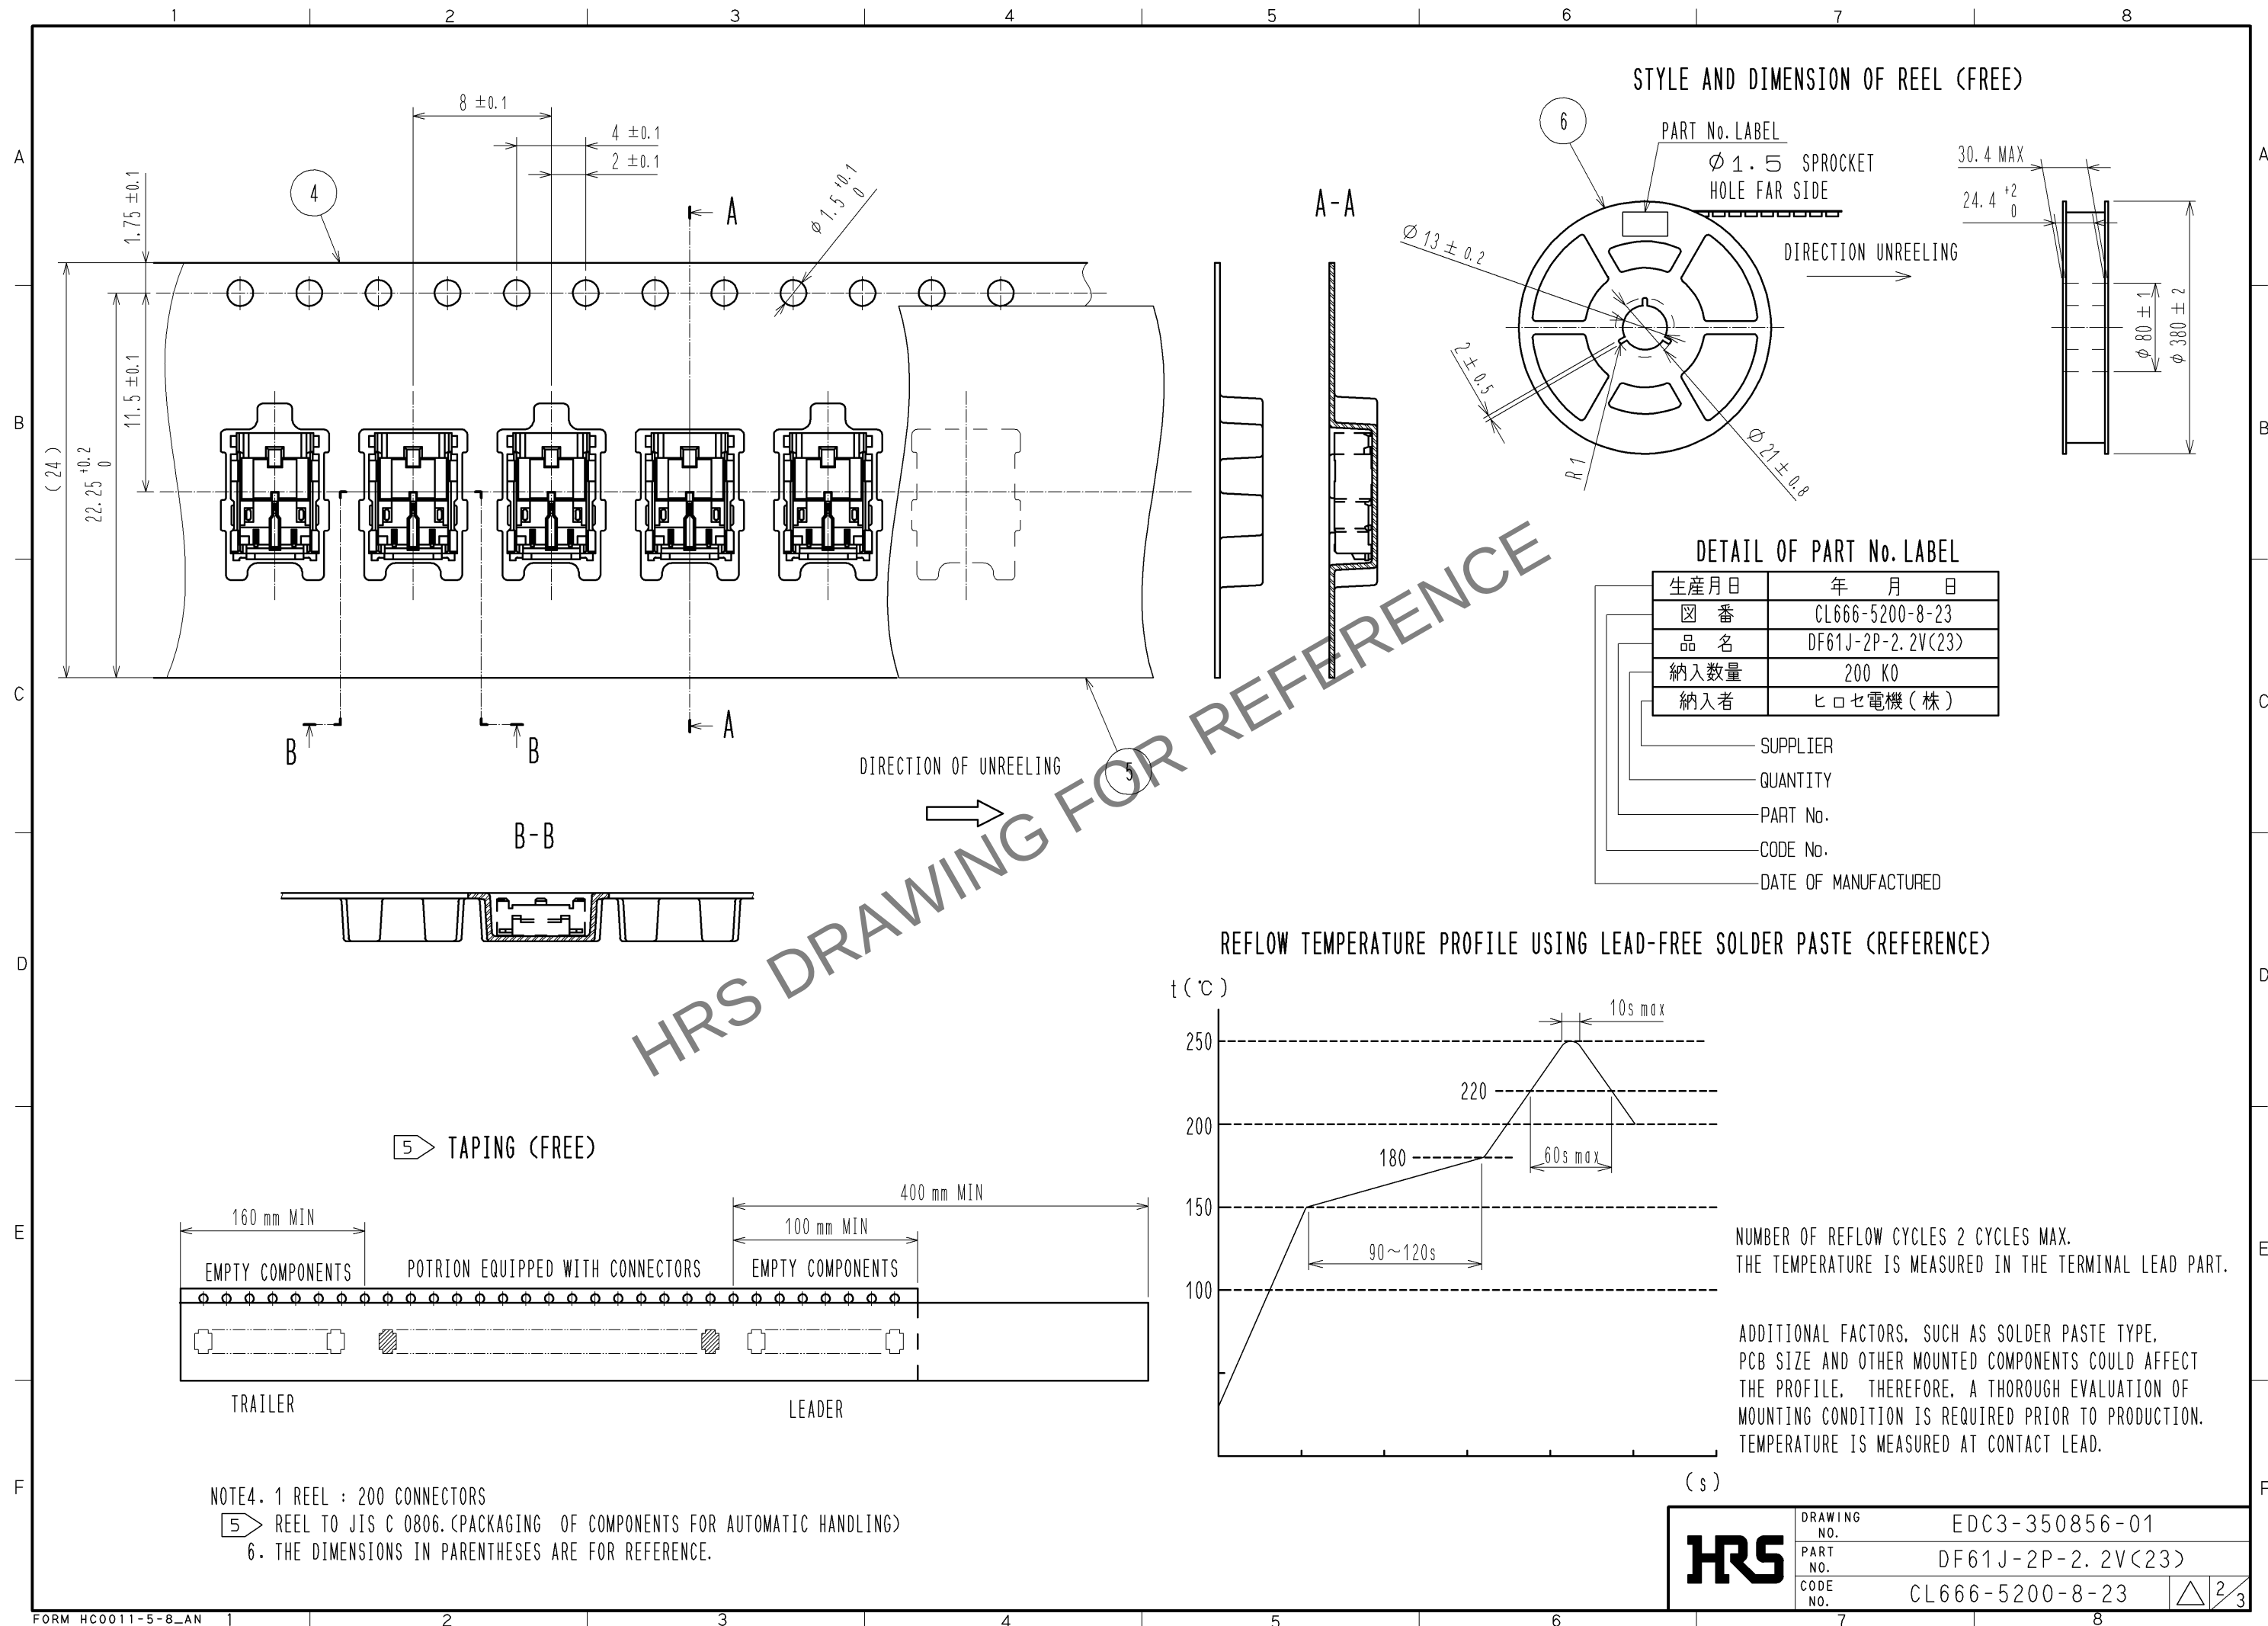


Apr.1.2024 Copyright 2024 HIROSE ELECTRIC CO., LTD. All Rights Reserved.
In case of consideration for using Automotive equipment / device which demand high reliability, kindly contact our sales window correspondents.

Test Instruction by DF61J Series


① By positioning the convexity of the socket sides to the header concavity, align the centers of the socket and the header in pitch direction.

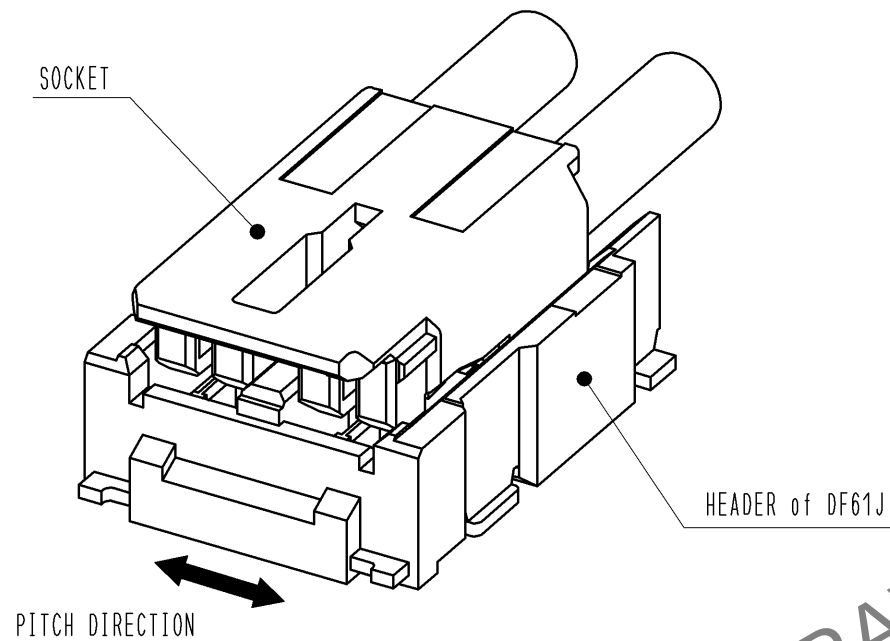

② Press the socket down for mating.
Keep pressing the socket to avoid unmating while testing.

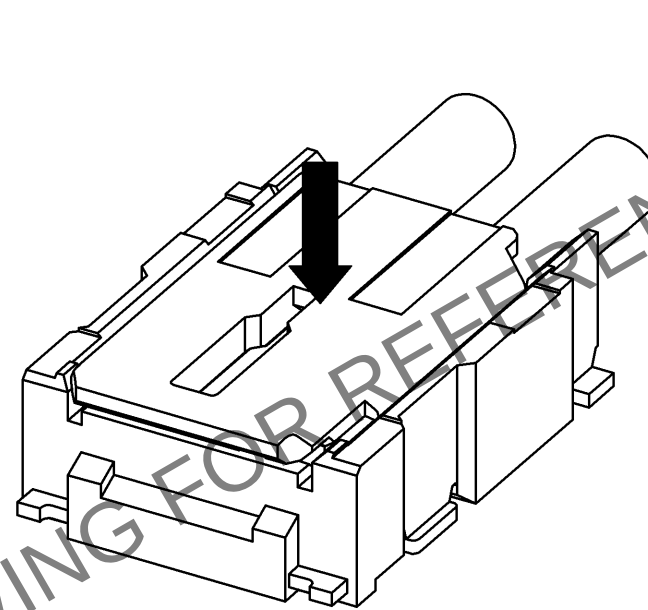


③ Remove the socket.

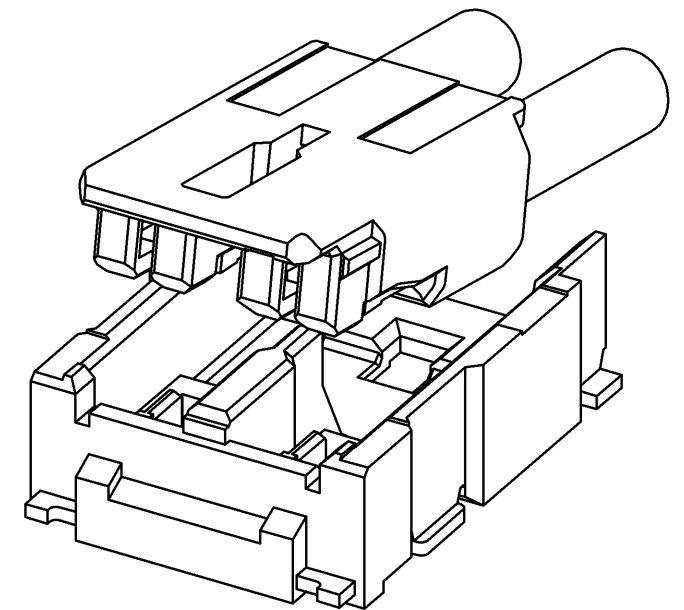


HRS DRAWING FOR REFERENCE

ELECTRICAL SHOCK HAZARD

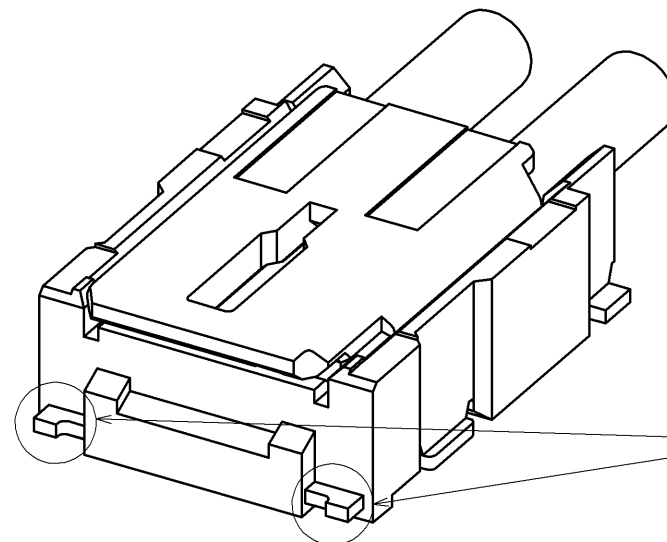

DO NOT TOUCH THIS PART !

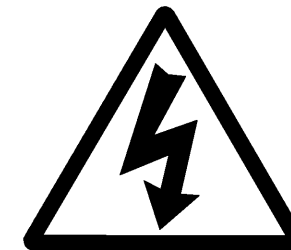

HRS	DRAWING NO.	EDC3-350856-01
	PART NO.	DF61J-2P-2.2V(23)
	CODE NO.	CL666-5200-8-23