



Apr.1.2024 Copyright 2024 HIROSE ELECTRIC CO., LTD. All Rights Reserved.
In case of consideration for using Automotive equipment / device which demand high reliability, kindly contact our sales window correspondents.

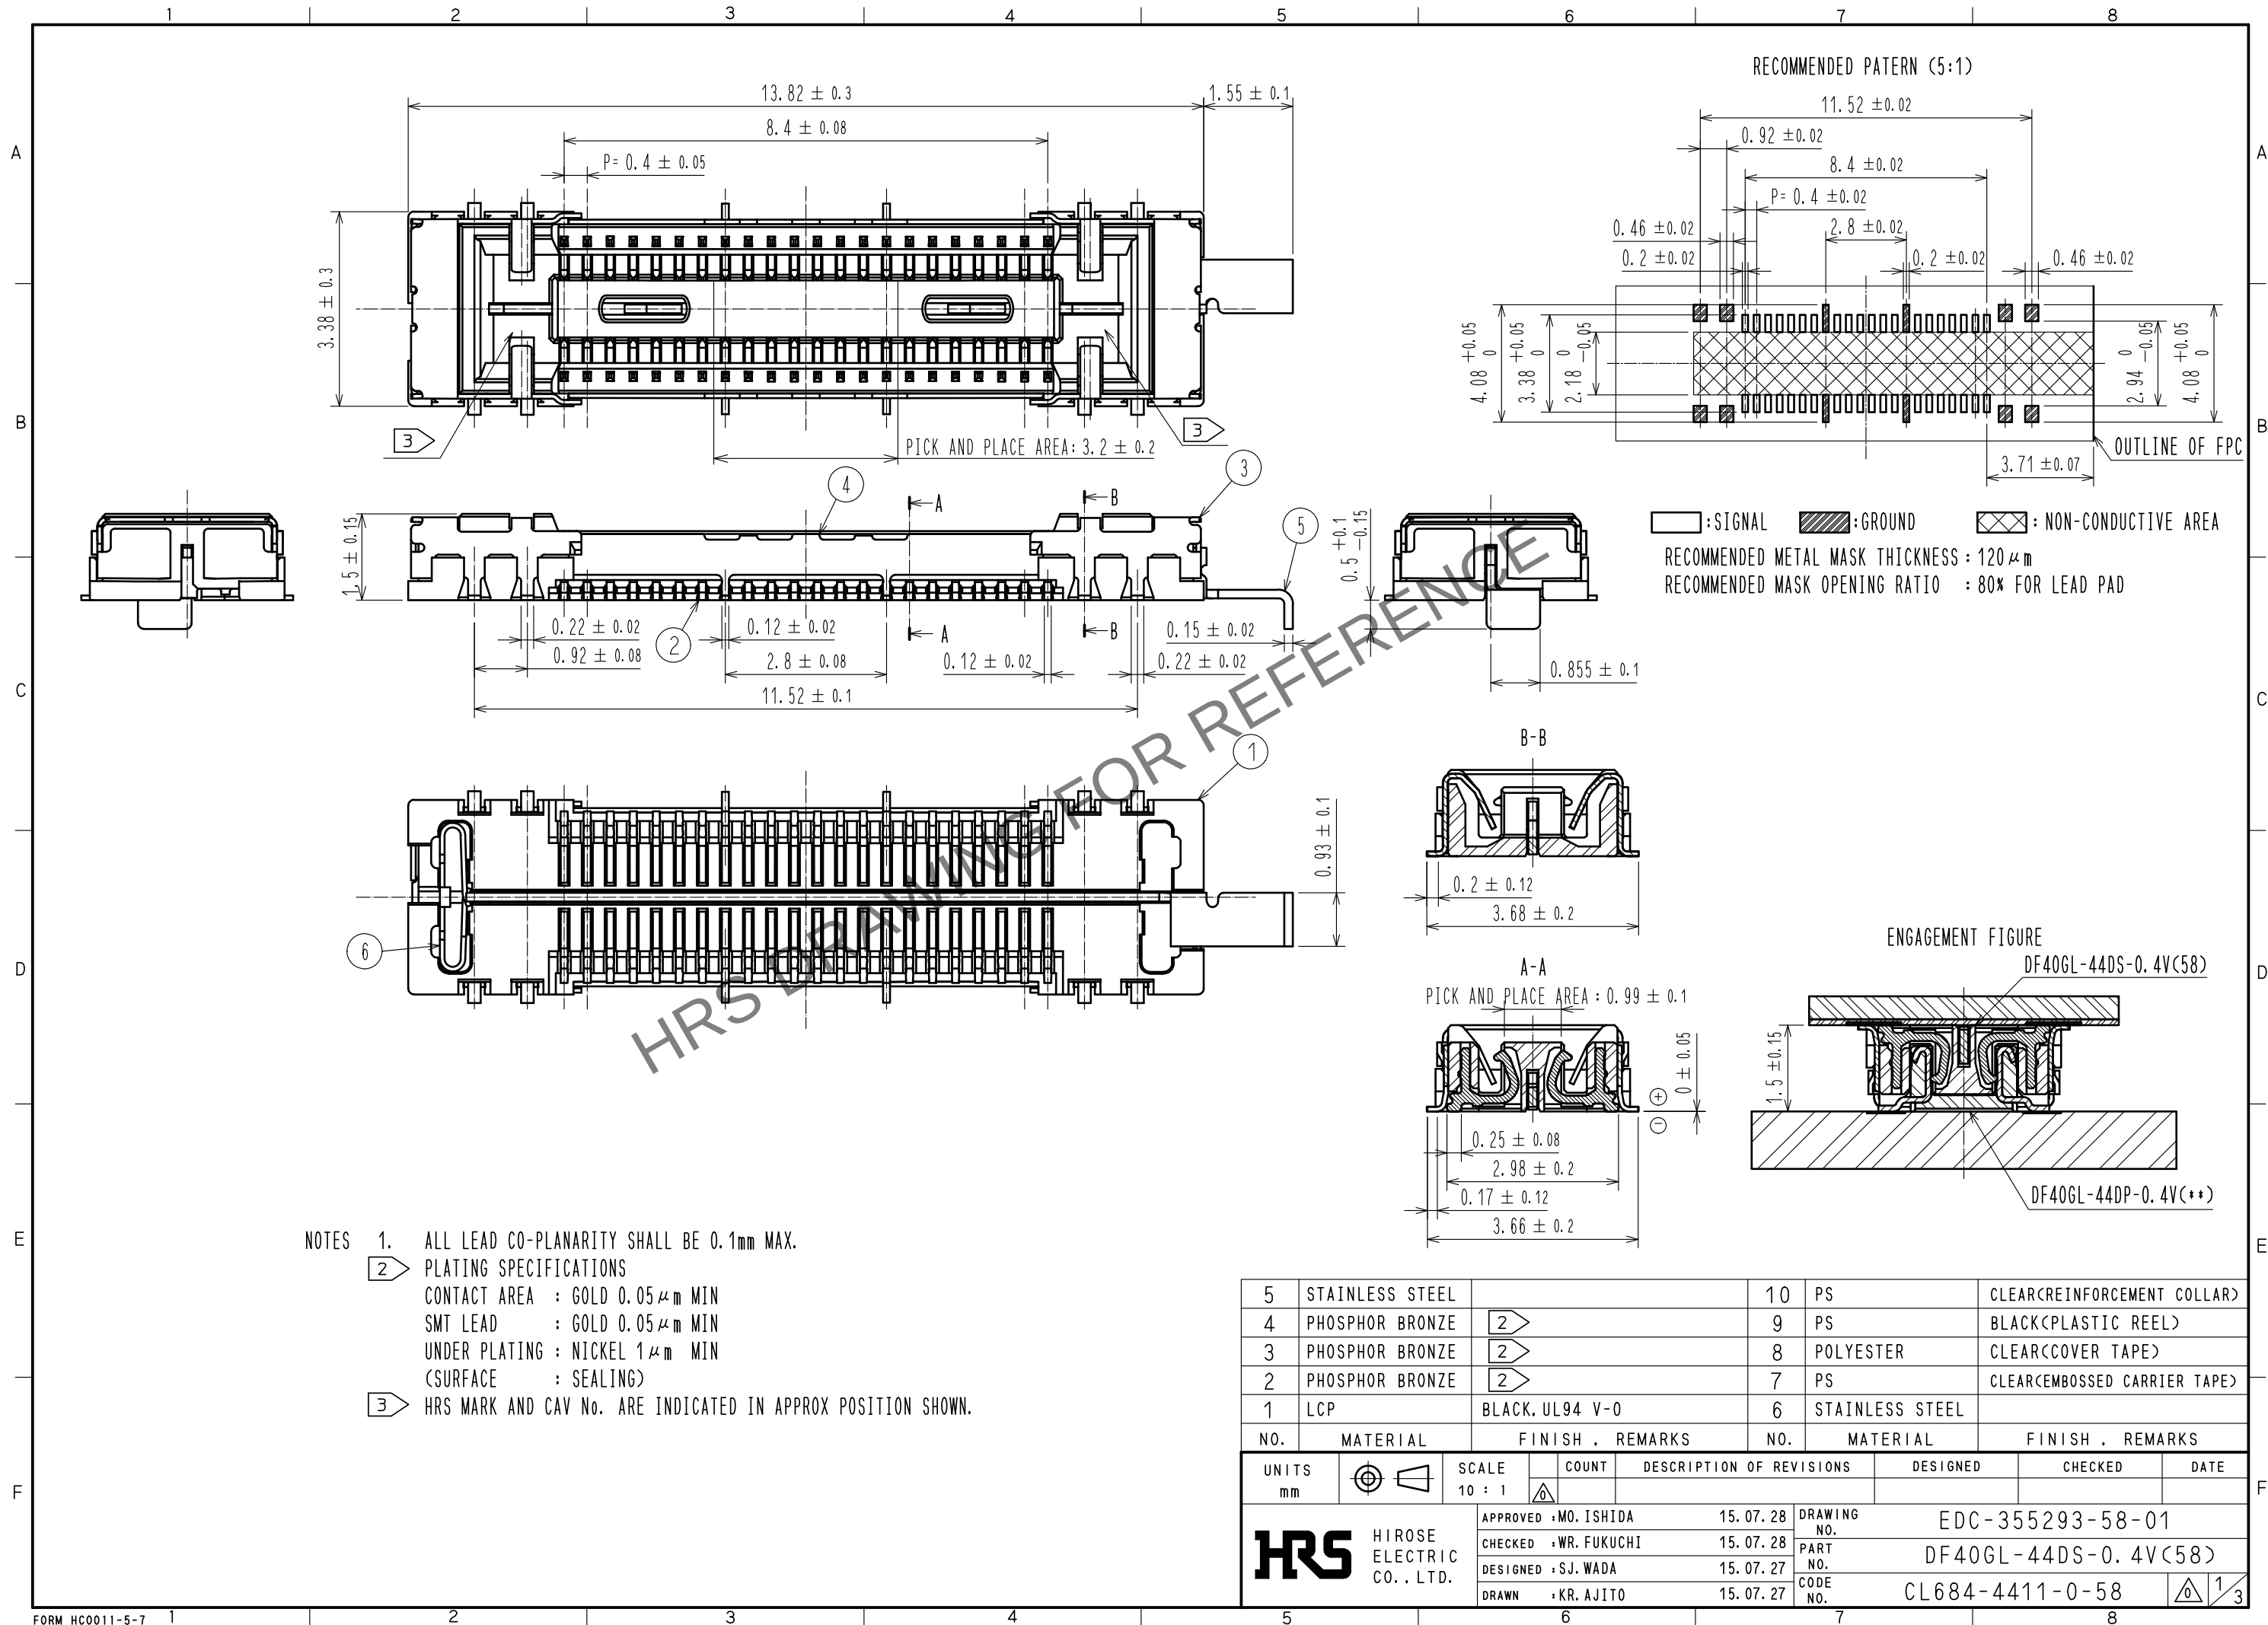


Apr.1.2024 Copyright 2024 HIROSE ELECTRIC CO., LTD. All Rights Reserved.
In case of consideration for using Automotive equipment / device which demand high reliability, kindly contact our sales window correspondents.

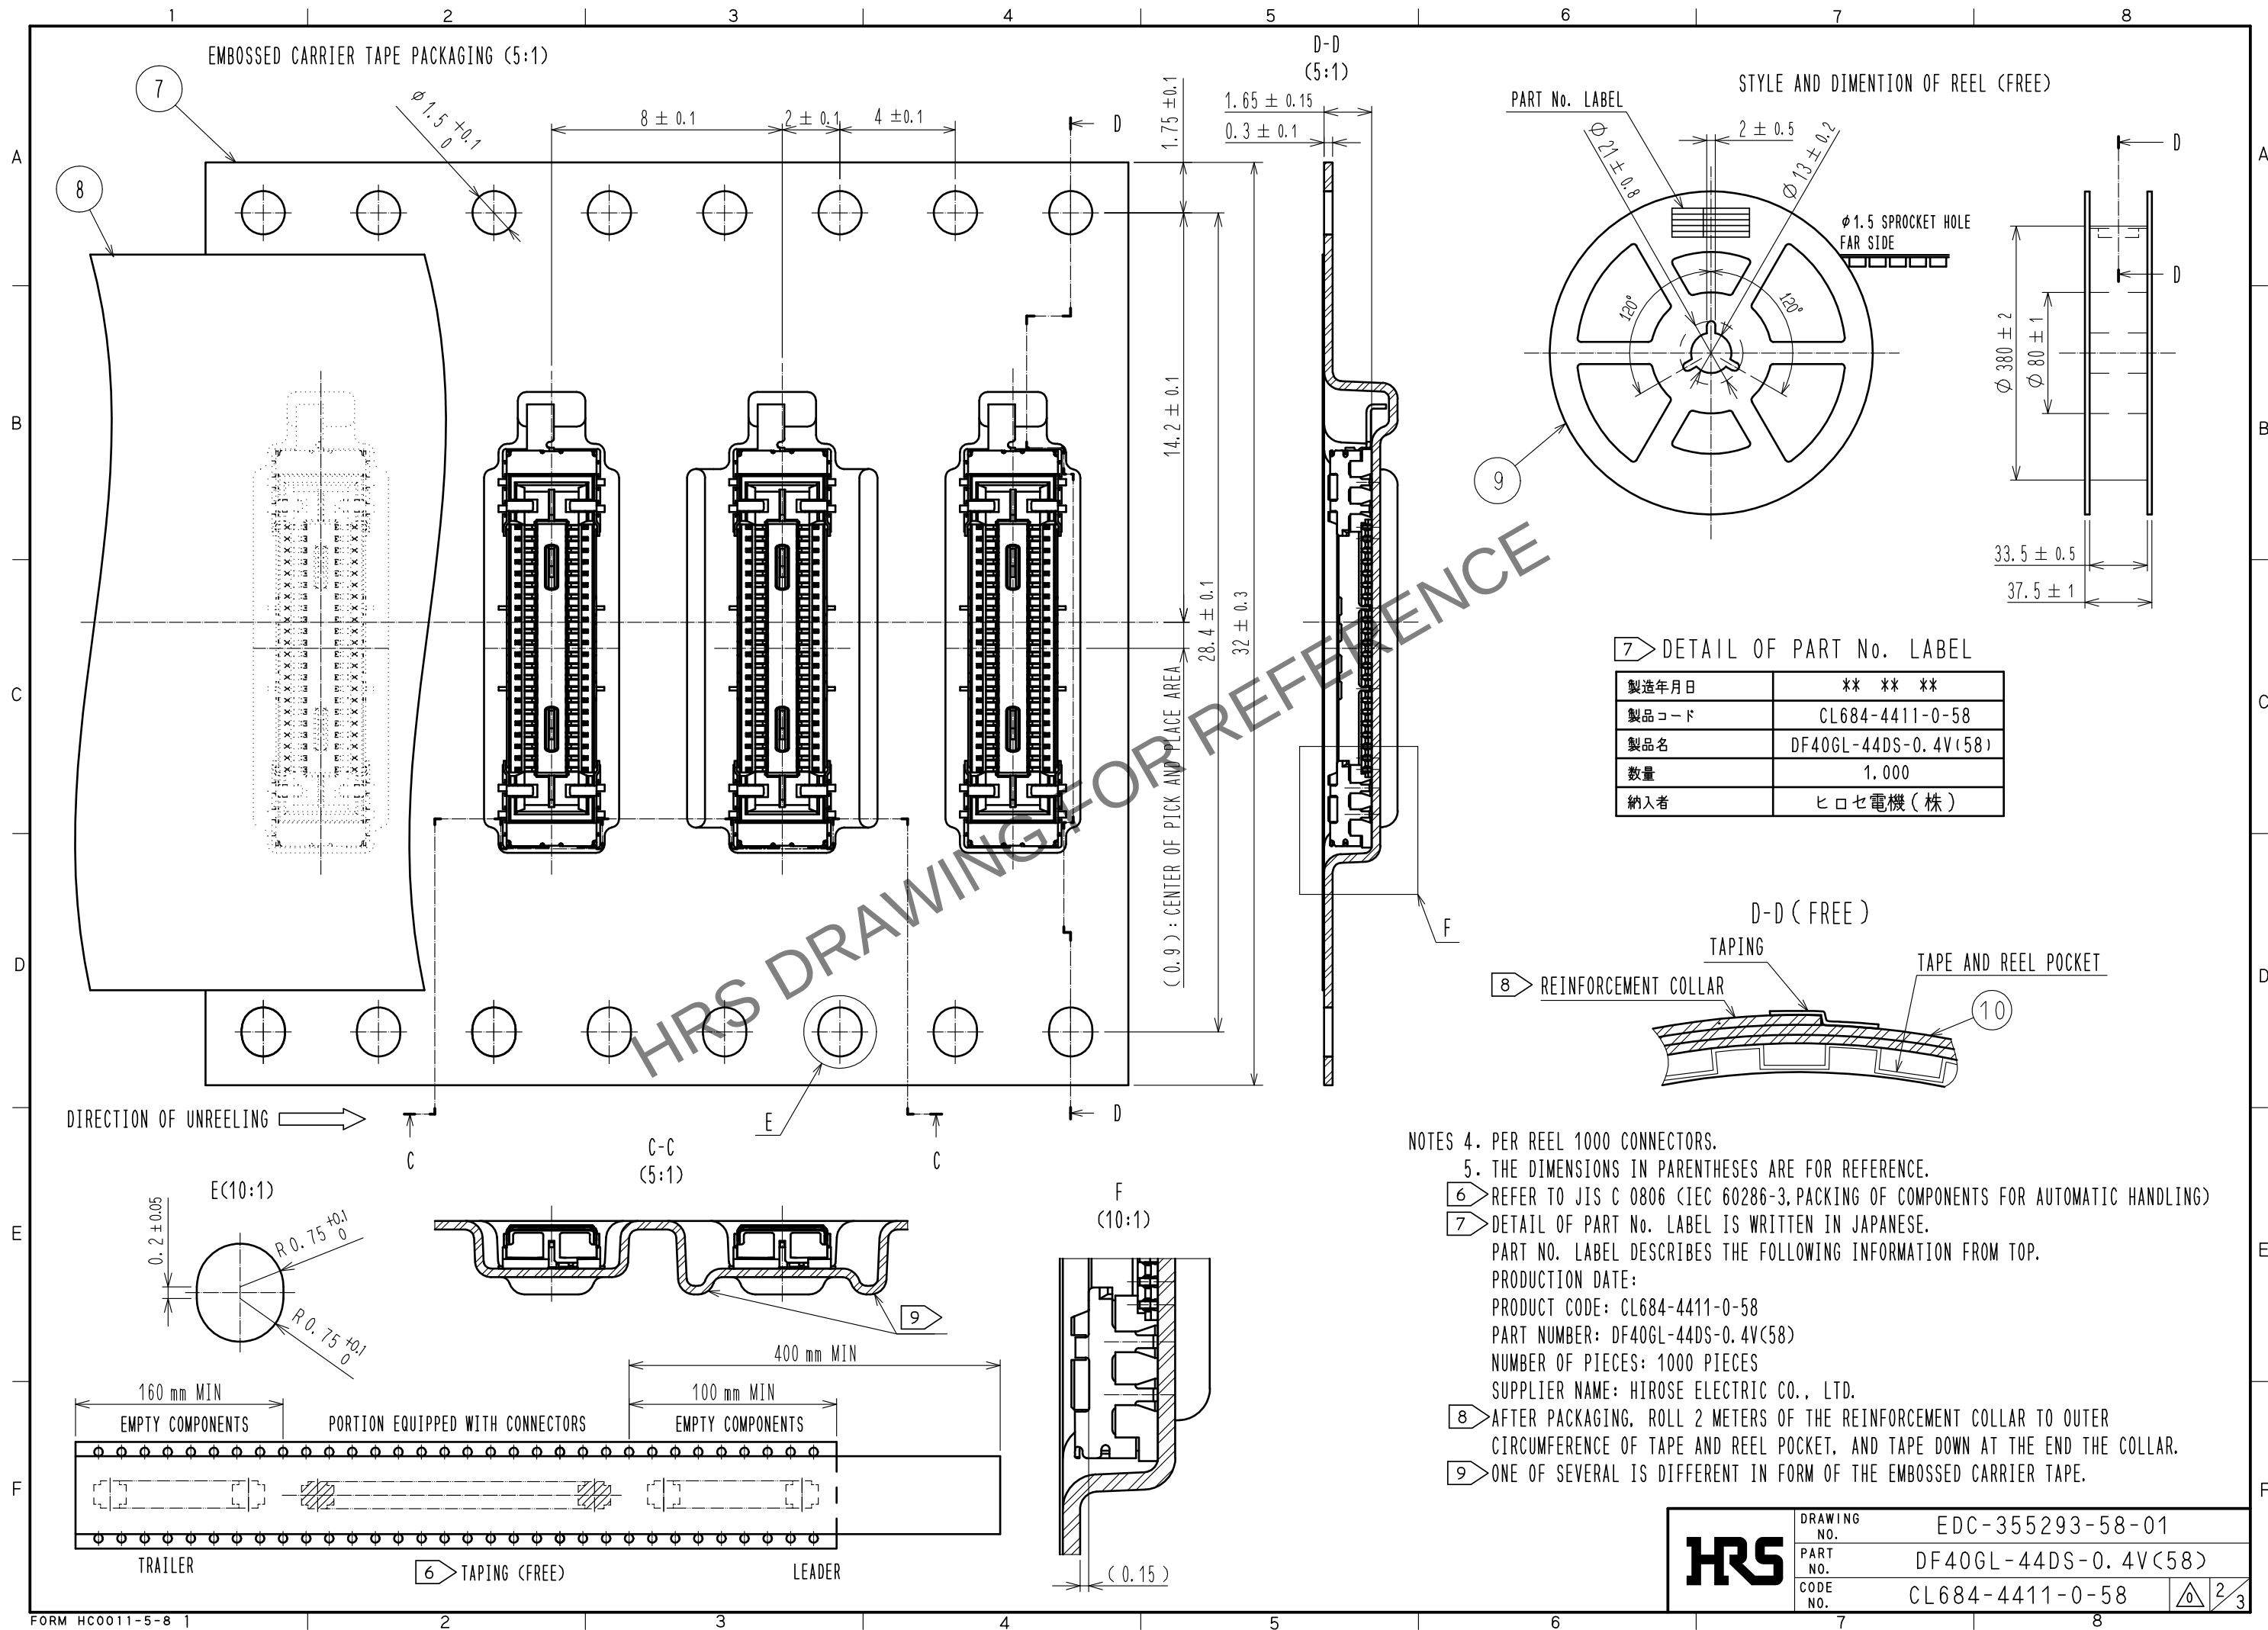


Apr.1.2024 Copyright 2024 HIROSE ELECTRIC CO., LTD. All Rights Reserved.
In case of consideration for using Automotive equipment / device which demand high reliability, kindly contact our sales window correspondents.


Handling Instruction

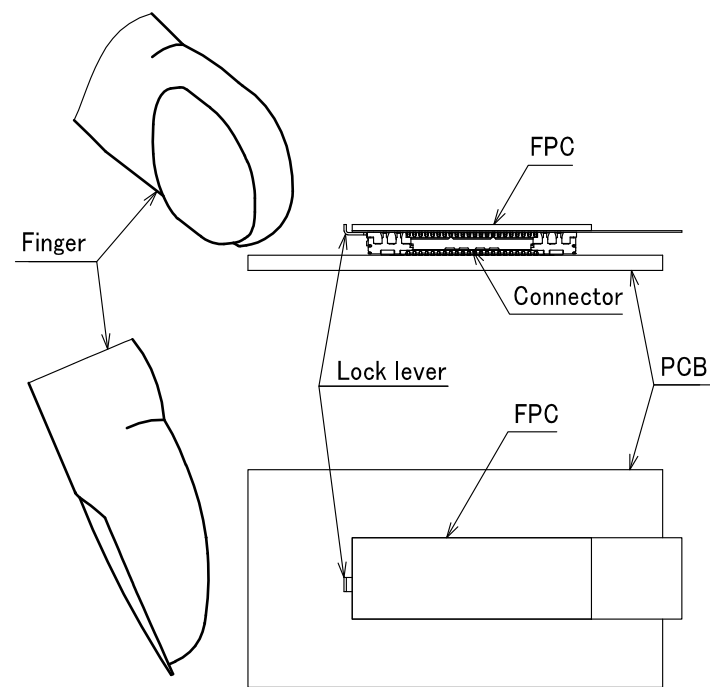

STEP 1 Press the lever to release the lock


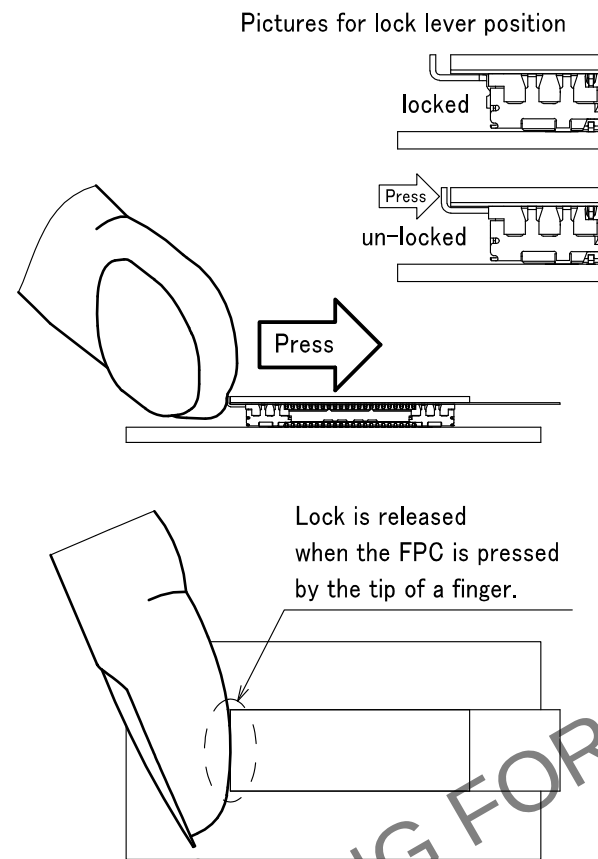


STEP 2 While maintaining the unlocked position, lift the FPC up in the direction shown on illustration.

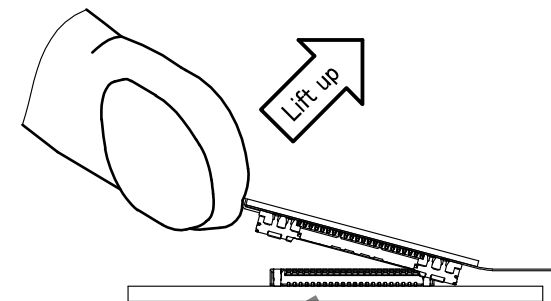


Precaution

Do not attempt to un-mate without un-locking since there is a risk for connector breakage when un-mated without releasing the lock.

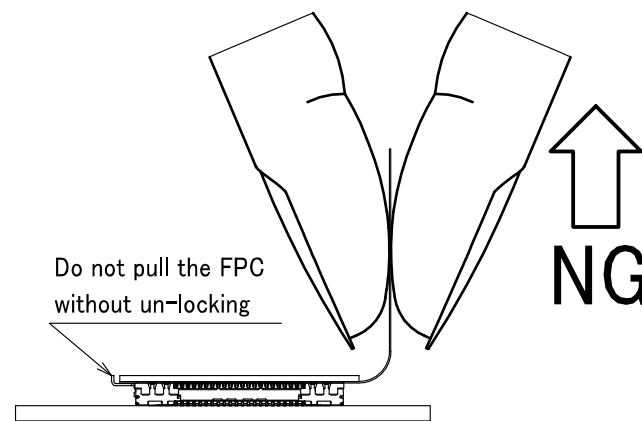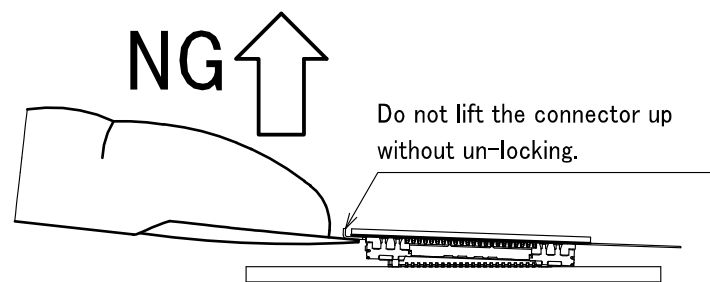

Do not un-mate in the depth direction to avoid contact or housing damage even when the lock is released.

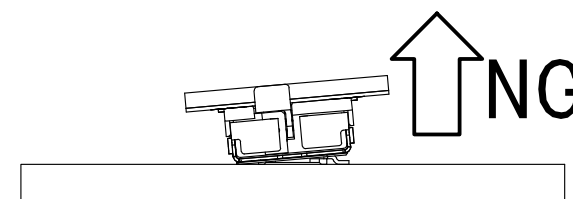

HRS

DRAWING NO.	EDC-355293-58-01
PART NO.	DF40GL-44DS-0. 4V<58>
CODE NO.	CL684-4411-0-58

3/3