


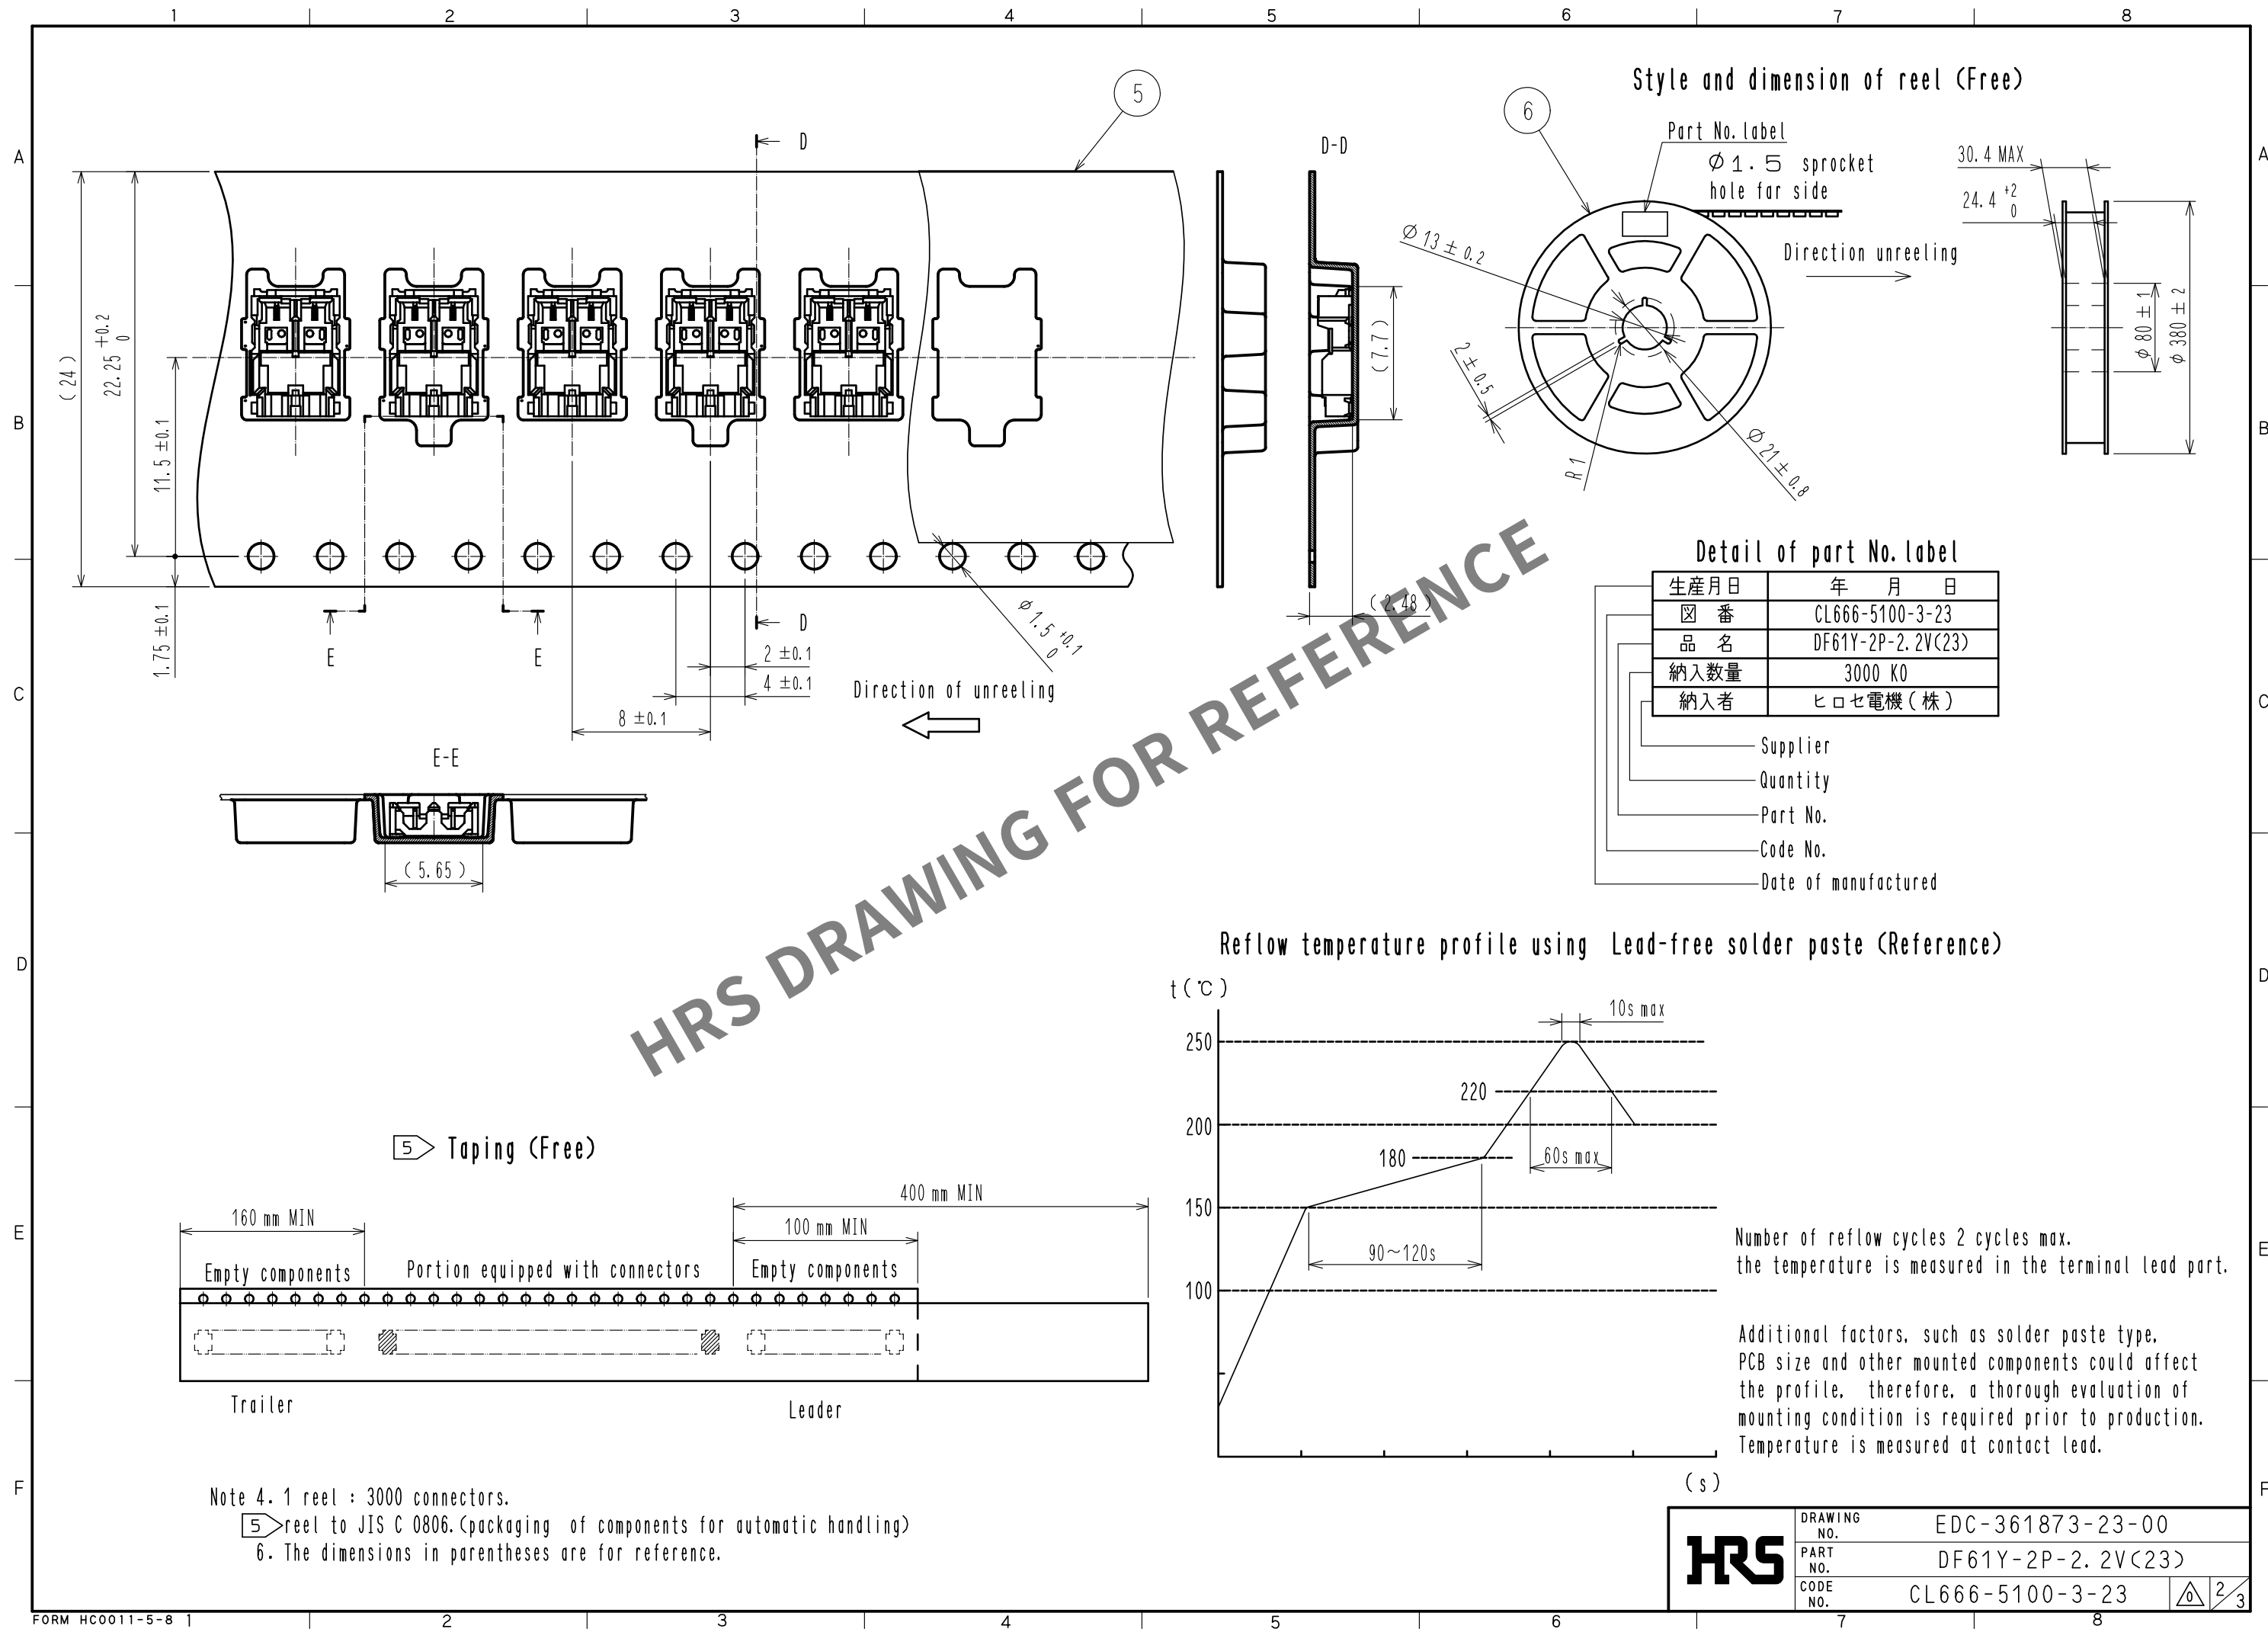




May.1.2024 Copyright 2024 HIROSE ELECTRIC CO., LTD. All Rights Reserved.
In case of consideration for using Automotive equipment / device which demand high reliability, kindly contact our sales window correspondents.


DF61Y Series Mating / Unmating Operation Instruction

Mating


- ① By positioning the convexity of the socket sides to the header concavity, align the centers of the socket and the header in pitch direction.

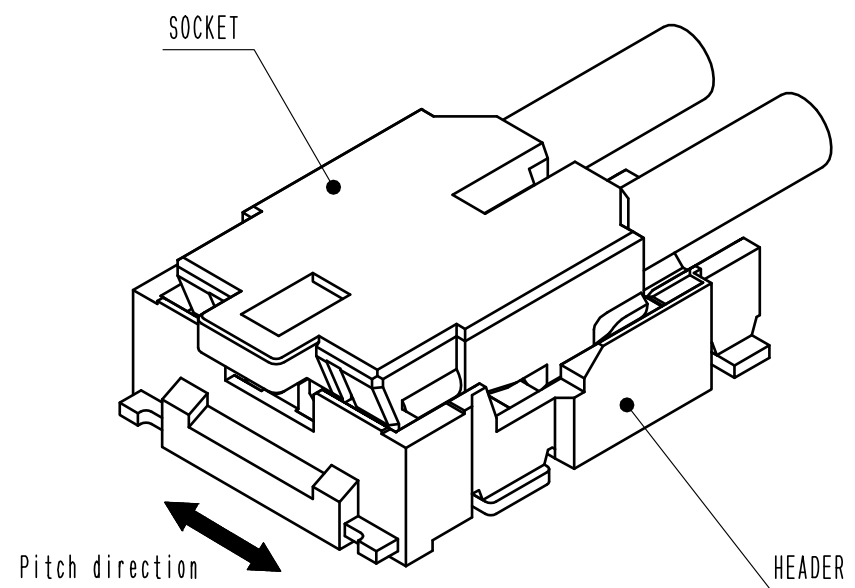

- ② Slightly press the socket down at the center of the socket.

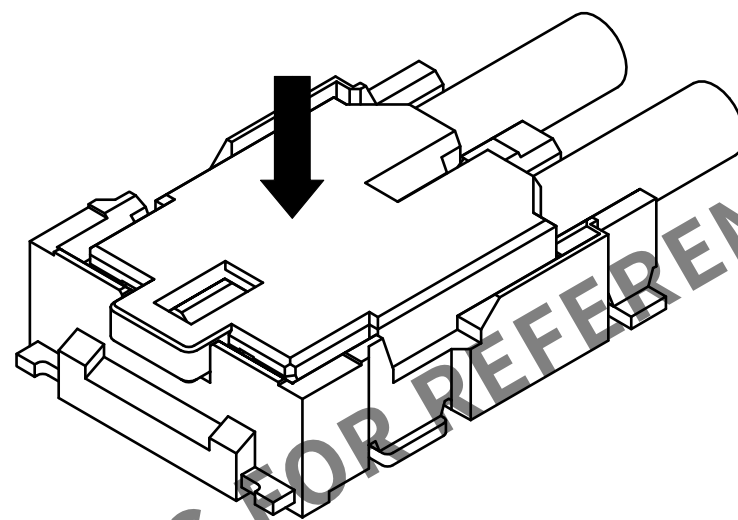


- ③ Press down at the lever side with stabilizing the cable side to insert. Mating completes.

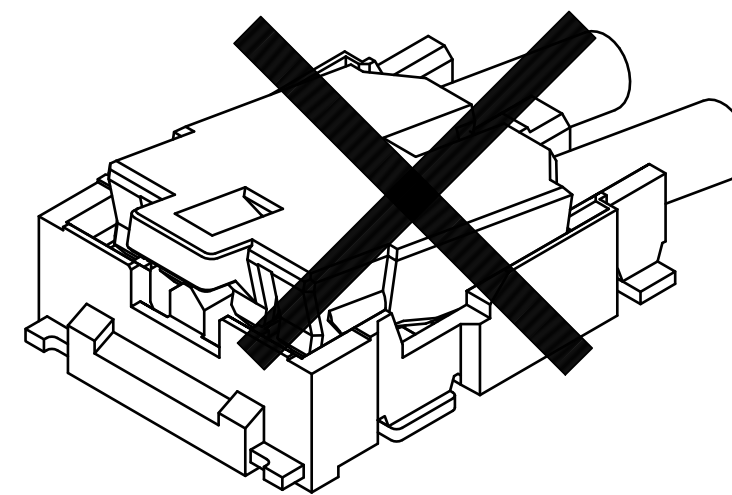


Unmating

- ① Hook the lever with finger nail.

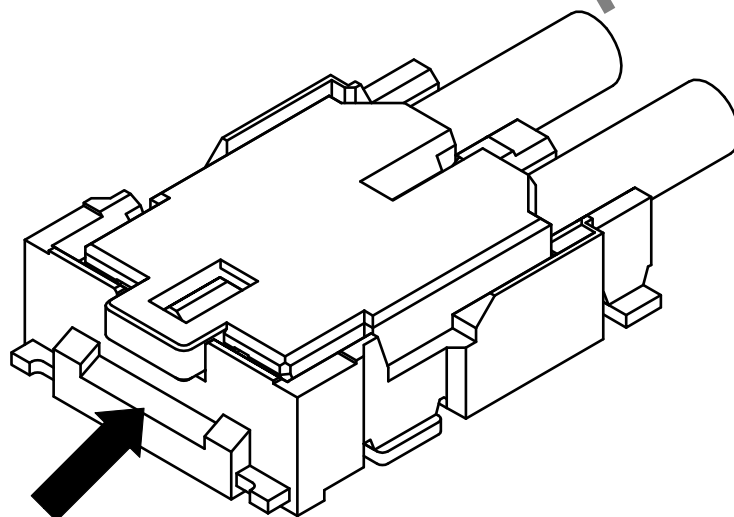

- ② Lift up to the upper direction and friction lock is released.

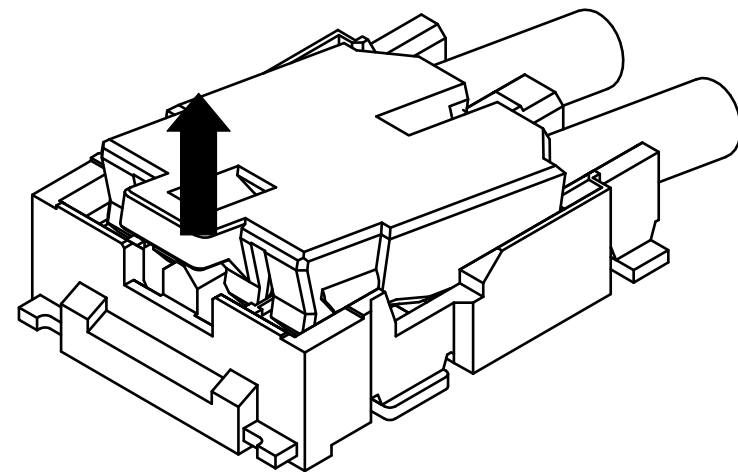

- ③ Lift it up to the upper direction more, and removal completes.

