



## DF57 Series Mating / Unmating Operation Instruction


①By positioning the convexity of the socket sides to the header concavity, align the centers of the socket and the header in pitch direftion.

②Slightly press the socket down at cable side to tilted angle.

@Press down at the lever side with stabilizing t he cable side to insert. Mating completes.

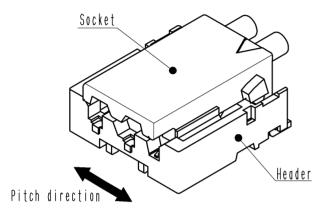


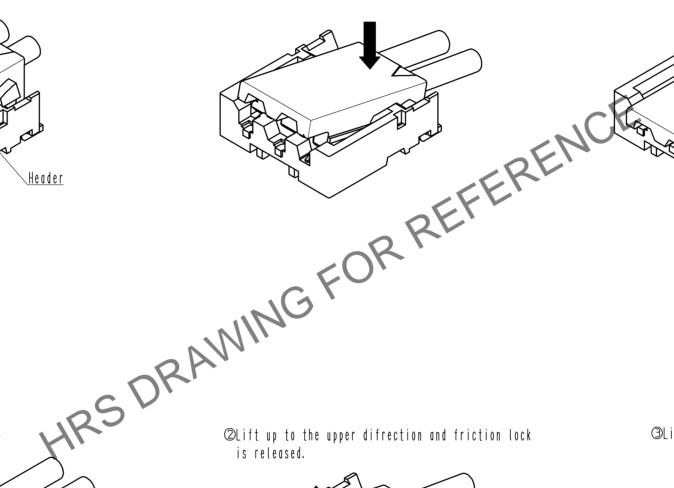


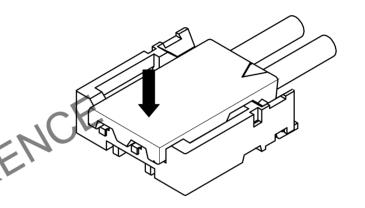


Unmating

①Hook the lever with finger nail.

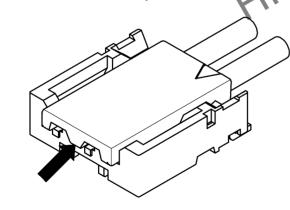

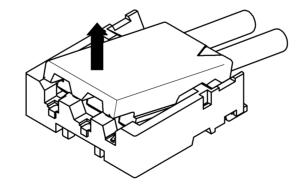

③Lift up to the upper direction and positive lock is released. Removal completes.

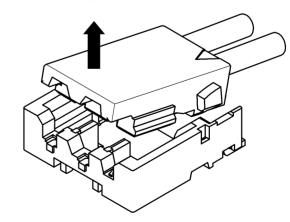

<b>K</b> 5	DRAWING NO.	EDC3-344680-01
	PART NO.	DF57H-2P-2.4V(23)
	CODE NO.	CL666-0109-0-23 🛕 3

FORM HC0011-5-8\_AN