


## DF57 Series Mating / Unmating Operation Instruction


## Mating

①By positioning the convexity of the socket sides to the header concavity, align the centers of the socket and the header in pitch direftion.

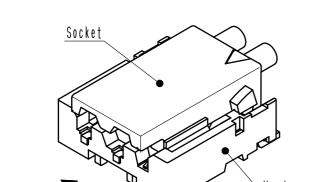

②Slightly press the socket down at cable side to tilted angle.


©Press down at the lever side with stabilizing the cable side to insert. Mating completes.

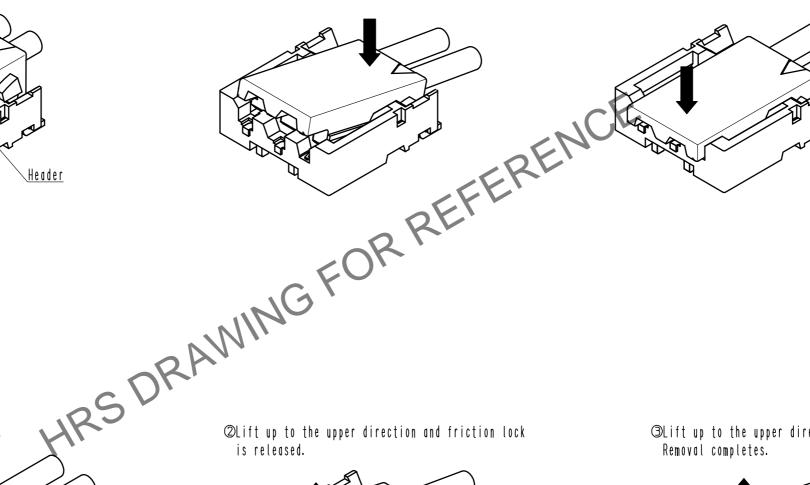


Unmating


Pitch direction

⊕Hook the lever with finger nail.

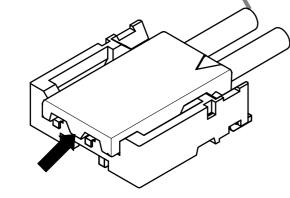

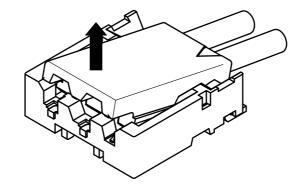

Dlift up to the upper direction and positive lock is released. Removal completes.

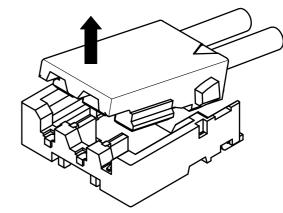

ĸ	DRAWING NO.	EDC-343906-51-02	
	PART NO.	DF57H-4P-1.2V(51)	
	CODE NO.	CL0666-0106-2-51	3/

FORM HC0011-5-8