

DF57 Series Mating / Unmating Operation Instruction

Mating


①By positioning the convexity of the socket sides to the header concavity, align the centers of the socket and the header in pitch direftion.

Socket



②Slightly press the socket down at cable side to tilted angle.

③Press down at the lever side with stabilizing the cable side to insert. Mating completes.

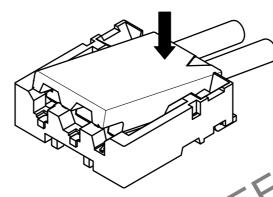



HRS DRAWING FOR REFERENCES

Unmating


Pitch direction

⊕Hook the lever with finger nail.

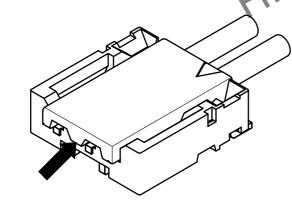

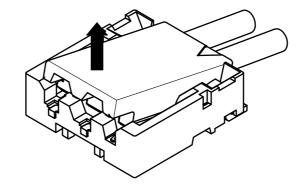

Dlift up to the upper direction and positive lock is released. Removal completes.

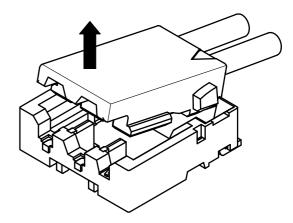

жs	DRAWING NO.	EDC-343907-21-01	
	PART NO.	DF57H-5P-1.2V(21)	
	CODE NO.	CL666-0107-5-21 3	/.

FORM HC0011-5-8_AN