



Operation Procedures for Floating Socket


[Mating]

1. Hold part A on the floating socket, and place it on the receptacle so that part A matches to part B. 2. Align the floating socket edge on the side of friction lock to receptacle housing edge in a line. (Forcible mating without above alignment process could cause contact deformation.)


3. Press down at the center surface of the floating socket. (Press down until the floating socket touches to the receptacle.)

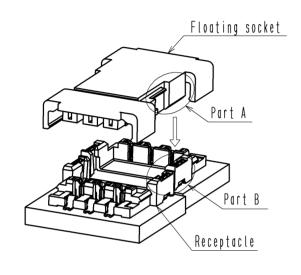


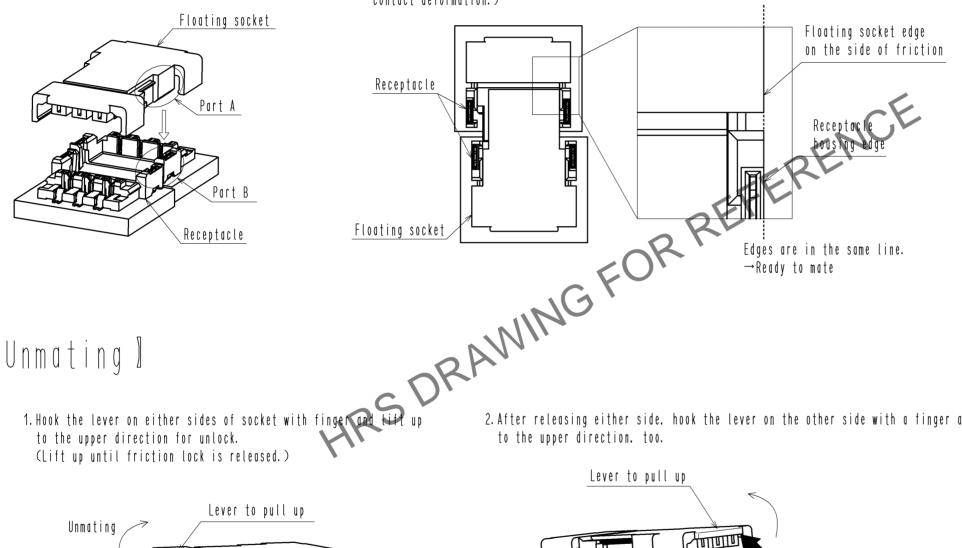


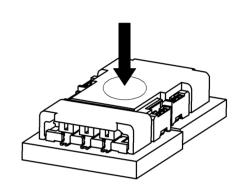

[Unmating]



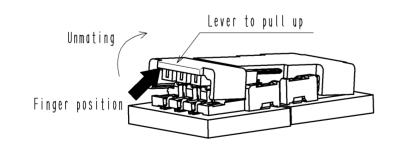

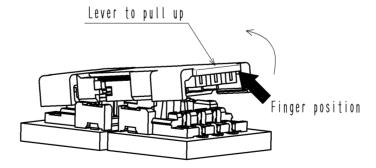

EDC3-330594-01 DF59-3P-2FC(50) CL667-0007-7-50

FORM HC0011-5-4_AN