
## Operation Procedures for Crimp Socket

## [ Mating ]

1. By positioning the convexity of the crimp socket sides to the receptacle concavity. align the centers of the crimp socket and the receptacle in pitch direction.


2. Keep pressing down at the cable side and also apply force to the lever side to mate. (If the cable side floats before mating is finished, the lock may not work.)

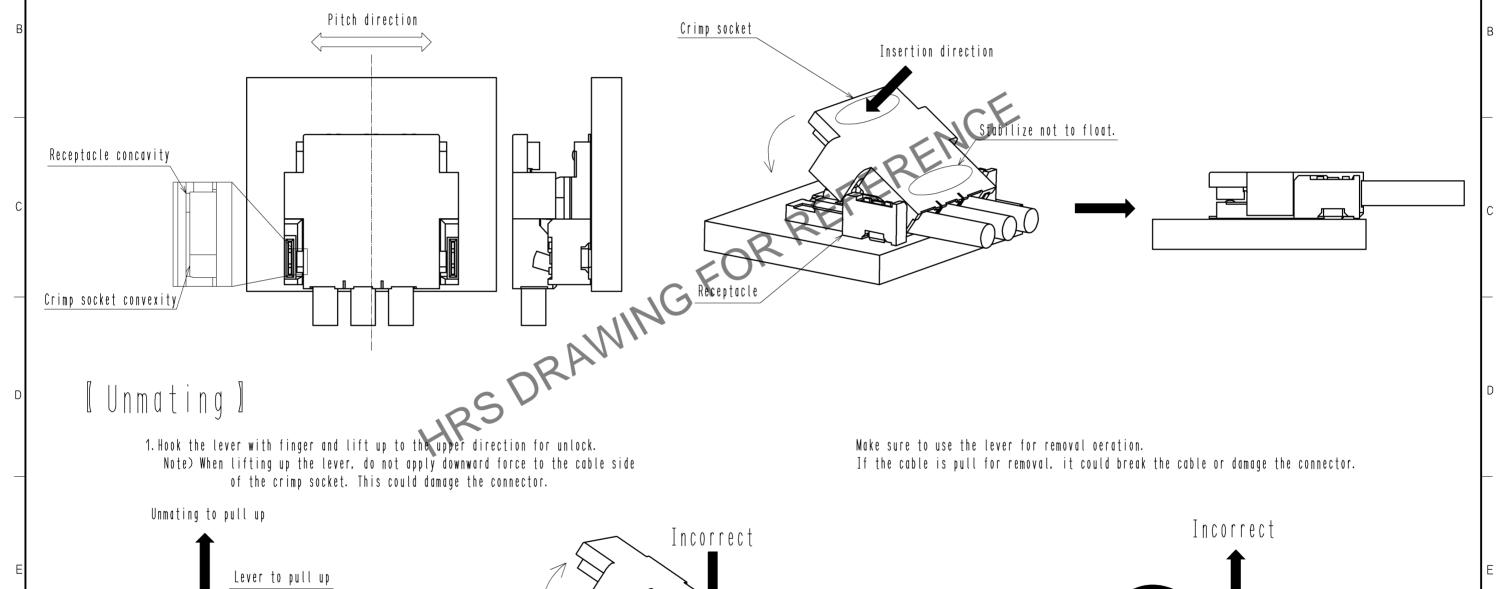


[ Unmating ]

FORM HC0011-5-4\_AN

Make sure to use the lever for removal oeration. If the cable is pull for removal, it could break the cable or damage the connector.

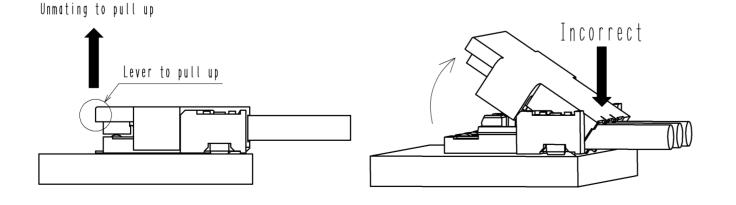

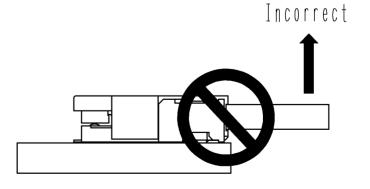

	図番:	EDC3-	-331127 -	01		
]	ਸ <b>र</b> 5	製品名:	D	F59-3P-	2 C	
		製品 コード	CL667-0	0012-7-0	0 (	2/2
		7			8	