## 1. Scope

This document specifies the cable assembly procedures of crimping the crimp contact to the cable (AWG#22 to 28) and inserting the contact to the crimp socket for DF61 Series.

## 2. Part Number

Part No.	Description
DF61-****SCF(##)	Crimp contact
DF61-2S-2.2C(##)	Crimp socket

\*: Applicable wire size (##): Peculiar specification number

# 3. Cable Assembly Procedure

#### 3.1. Cable Stripping


Follow the Crimping Quality Standard (ATAD-H0520), and strip the cable jacket. Make sure that there is no damage on the center conductor of the cable.


#### 3.2. Crimping Process


Crimp the contact by using the applicator (AP105-DF61-2226S, AP105-DF61-2628S). Confirm that the crimp height and configuration meet the crimp condition and Crimping Quality Standard (ATAD-H0520).

## 3.3. Crimped Contact Insertion to Crimp Socket

Hold the cable of crimped contact and insert to each contact cavity of the crimp socket. (Insertion direction is as shown below.)

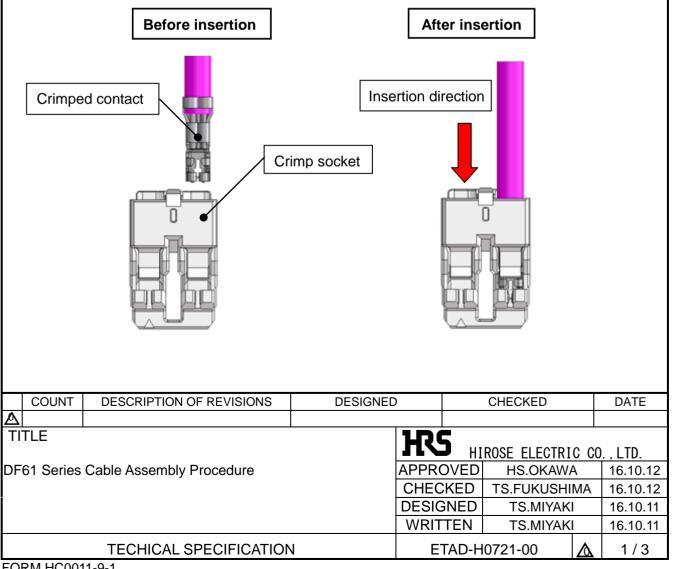

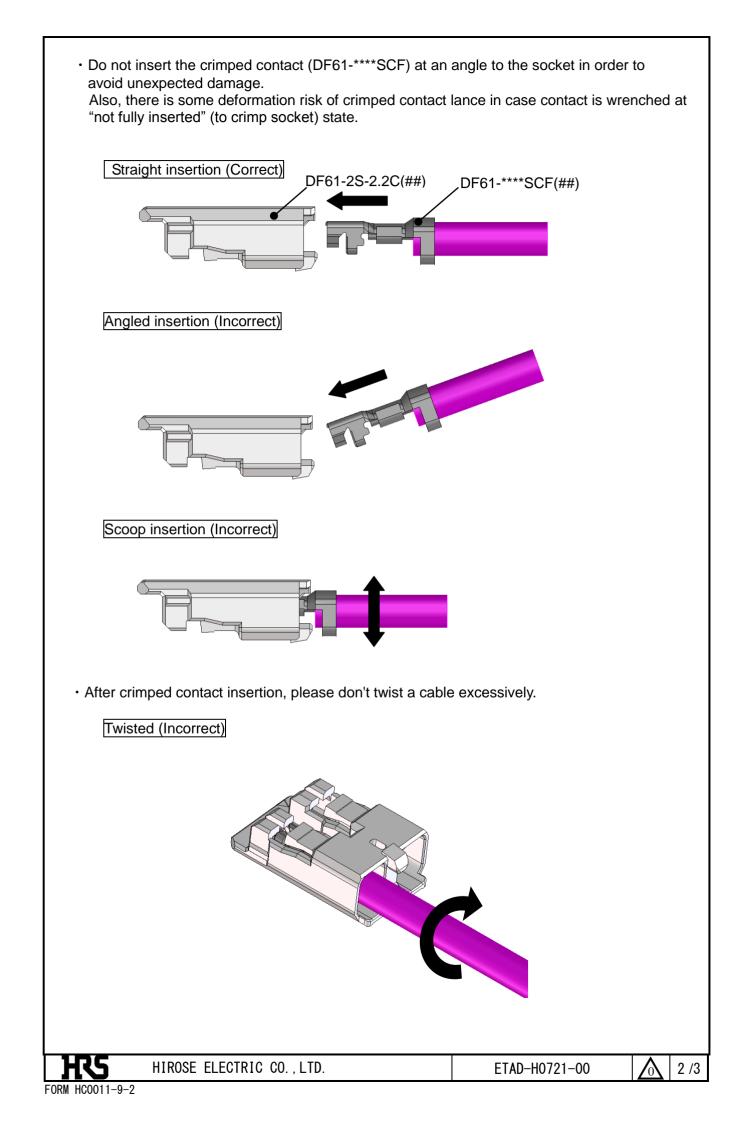

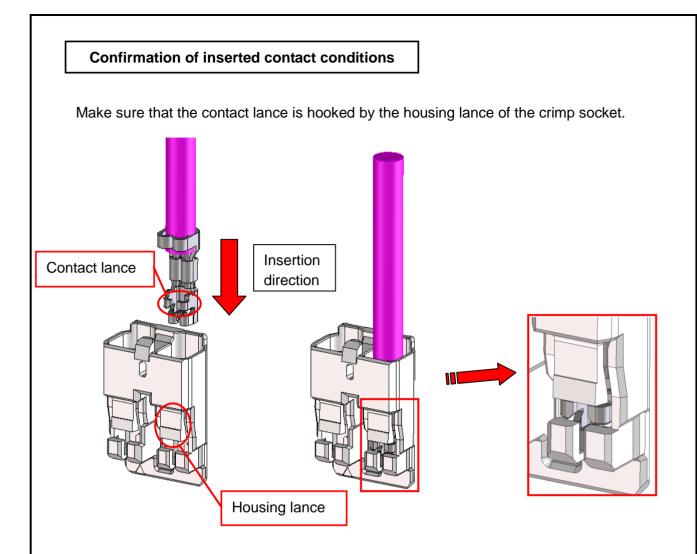

## NOTE: Repairing the crimp contact

For removing the inserted contact form socket, lift up the housing lance by using DF-C-PO(B) or a pointed needle, and pull out the cable simultaneously. The repair operation could make the lance strength lower, therefore, please do not reuse the repaired crimp socket and replace it to a new one.

