## Scope

This document specifies the steps from crimping the DF62W-series crimped terminals to cables (AWG20 to AWG30) to inserting the terminals to crimping sockets, and inserting the terminal into the crimp case, and the procedure for mounting the panel of the DF62WP series.

## **Connectors**

Crimping cases

DF62W # - \* EP - 2.2 C

234 6 6

Name: DF62W

2 Wire seal

#=None or A to E

No. of poles: 2 to 9

4 Connector types

S: Socket EP: In-line plug

**5** Contact pitch: 2.2 mm

6 Shape of connection/terminal

C : Crimping case

☐ Crimping cases (Panel waterproof type)

DF62WP - \*/\*/\* EP - 2.2 C

0

2

8

- Name: DF62WP
- 2 No. of poles: 2 to 9

" /" Indicates that the connector is a composite connector with a number of poles separated by it.

- Connector types EP: In-line plug
- 4 Contact pitch: 2.2 mm
- Shape of connection/terminal

C: Crimping case

■ Water proof pin

<u>DF62W</u> - <u>WP</u>

Application

WP: Waterproof pin

	COUNT	DESCRIPTION OF REVISIONS	ESCRIPTION OF REVISIONS DESIGNED		CHECKED			DATE
4	12	DIS-H-00006326	KI.SUGAWAR	A.	ST.WADA			20201006
TI	TLE		HIROSE ELECTRIC CO.,LTD.					
DF62W Series Cable Assembly Procedure				APPROVED		KI.AKIYAMA		20140215
4					KED	OM.MIYAMOTO		20140214
DF62WP series panel installation procedure				DESIGNED		KT.ISHII		20140213
					TEN	KT.ISHII		20140213
Т	TECHICAL SPECIFICATION				ETAD-H0760			1 / 17

- Crimped terminals
  - <u>DF62W EP 2226 PCF A</u>
    - 0 9 8 4
  - Application

EP: In-line

2 Compatible cables

2022: AWG20 to 22 2226: AWG22 to 26

2830: AWG28 to 30

Shape/packing

SCF: Socket terminal, reeled SC: Socket terminal, separate PCF: Plug terminal, reeled PC: Plug terminal, separate

Plating

A : Gold plating Blank : Tin plating

H

### 3. Steps for harnessing

## 3.1. Cable stripping

Strip cables in accordance with Crimping Quality Standards (ATAD-H0762/0763). In so doing, make sure there is no scratch on cable cores.

## 3.2. Crimping


Crimped terminals to cables using an applicator (AP105-DF62W-\*\*), and check the crimping height and shape in accordance with the Table of crimping conditions and Crimping Quality Standards (ATAD-H0762/0763). (\*\* = 2022, 2226, 2830)

## 3.3. Insertion to crimping terminal sockets

#### Insertion to DF62W-\*EP-2.2C and DF62W-\*S-2.2C

Hold the cable of a crimped terminal, and insert it to each terminal hole of crimping sockets. (Insert the terminal in the direction of arrows below.)

\*The figures show insertion to DF62W-2poles connector.

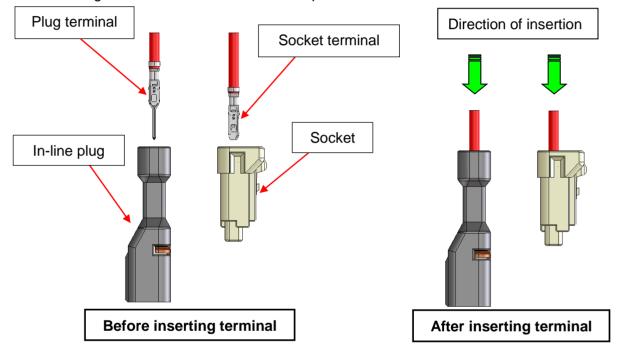

For insertion, place the crimped terminal and crimping socket lock in the following direction.


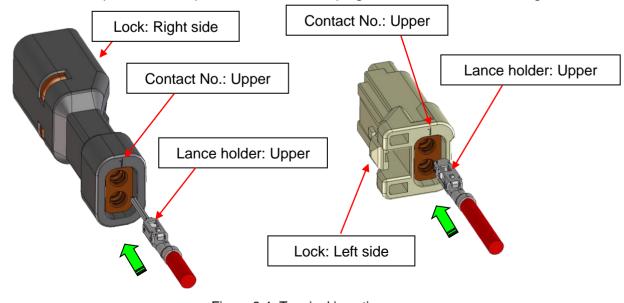


Figure 3-1. Terminal insertion

HIROSE ELECTRIC CO.,LTD.


ETAD-H0760

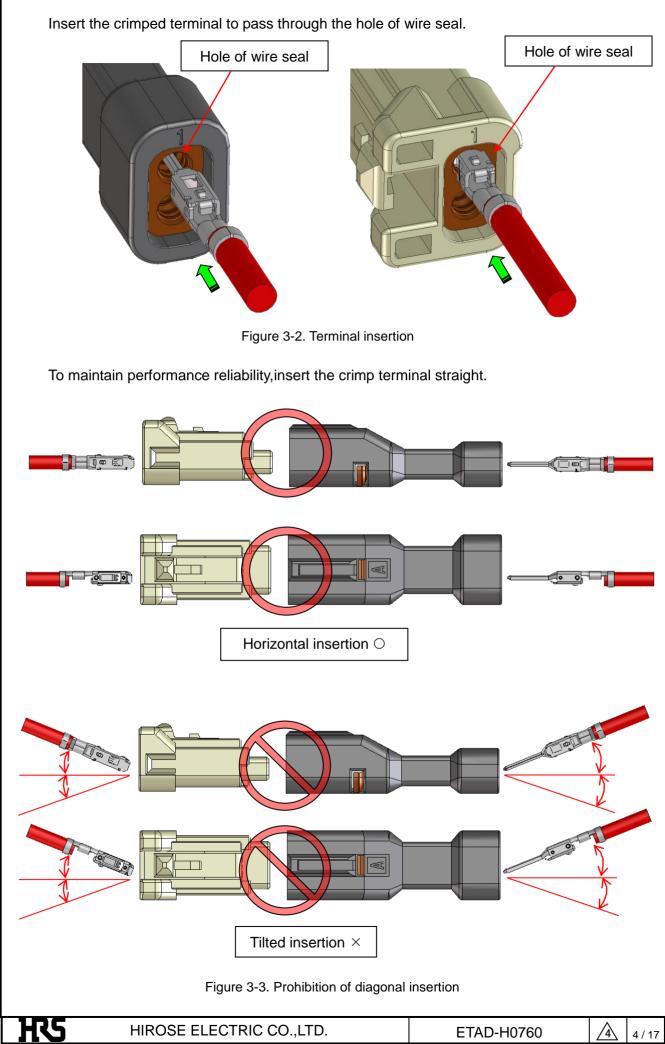

Check that the lance of a crimping socket has been caught at the lance holder of a crimped terminal.

(Slightly pull the terminal to check.)

\*To remove the crimped terminal halfway through insertion, pull the cable while pressing wire seal to prevent coming off.

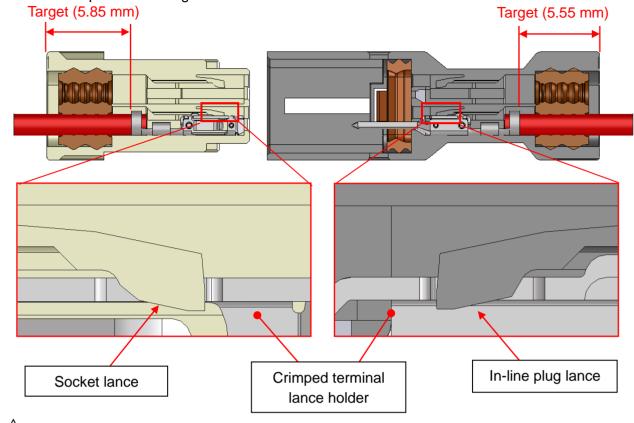

### Insertion to DF62WP series

/4\

\*The figures show insertion to DF62WP-3/4/6/2EP-2.2C

Hold the cable of a crimped terminal, and insert it to each terminal hole of crimping sockets. (Insert the terminal in the direction of arrows below.)

Figure 3-4. Checking the lance

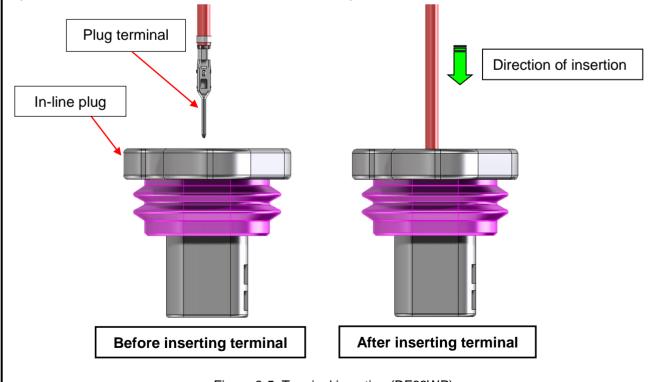


Figure 3-5. Terminal insertion (DF62WP)

HIROSE ELECTRIC CO.,LTD.

ETAD-H0760

4

5 / 17

For insertion, place the crimped terminal and crimping socket lock in the following direction.

Lock: Right side

Figure 3-6. Terminal orientation (DF62WP)

Lance holder: Upper

To maintain performance reliability, insert the crimp terminal straight.

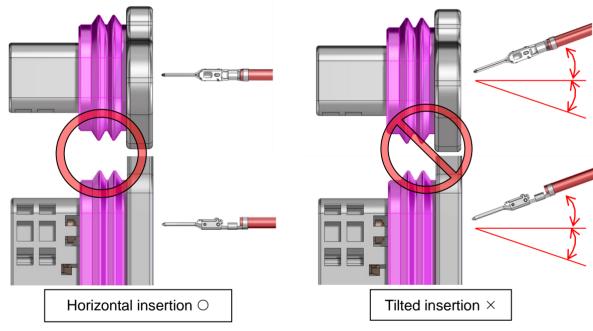


Figure 3-7. Prohibition of diagonal insertion (DF62WP)

Do not mistake the terminal hole. (Insert the terminal in the direction of arrows below.)

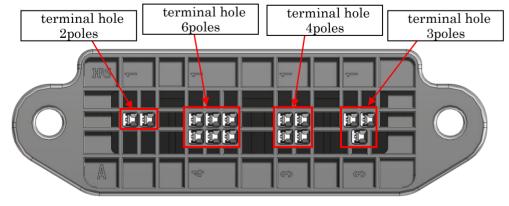


Figure 3-8. Terminal hole position (DF62WP)

HIROSE ELECTRIC CO.,LTD.

ETAD-H0760

4

6 / 17

FORM HC0011-9-2

Check that the lance of a crimping socket has been caught at the lance holder of a crimped terminal.

(Slightly pull the terminal to check.)

\*To remove the crimped terminal halfway through insertion, pull the cable while pressing wire seal to prevent coming off.


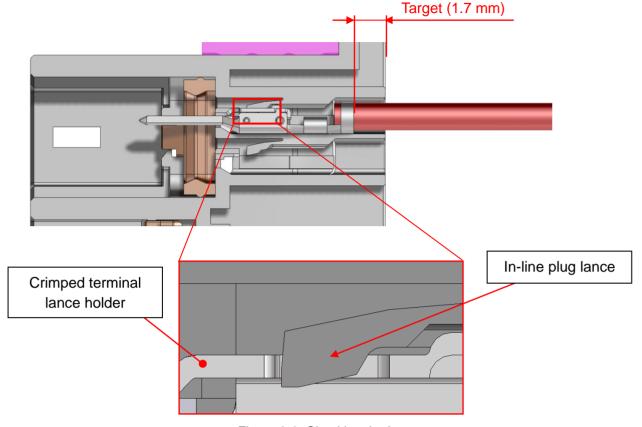


Figure 3-9. Checking the lance


### 3.4. Insertion of waterproof pin

Compatible series : DF62W-\*EP-2.2C , DF62W-\*S-2.2C

If you use waterproof pins, insert them to each holes with designated terminal numbers. (Insertion direction is shown by arrows in the figure below.)

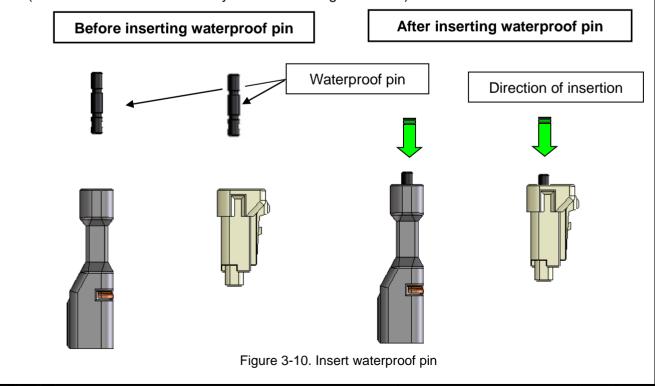

<u>/4\</u>

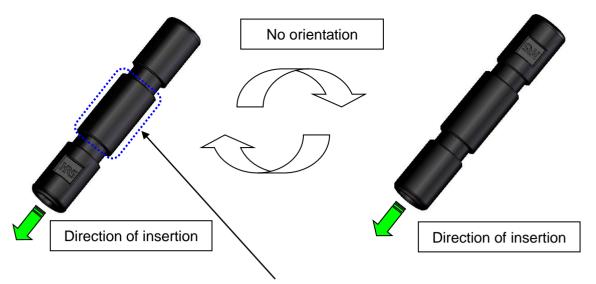

This surface is waterproof surface, so take care not to damage the surface.

Figure 3-11. Orientation of waterproof pins

To maintain performance reliability, insertion insert the waterproof pin straight.

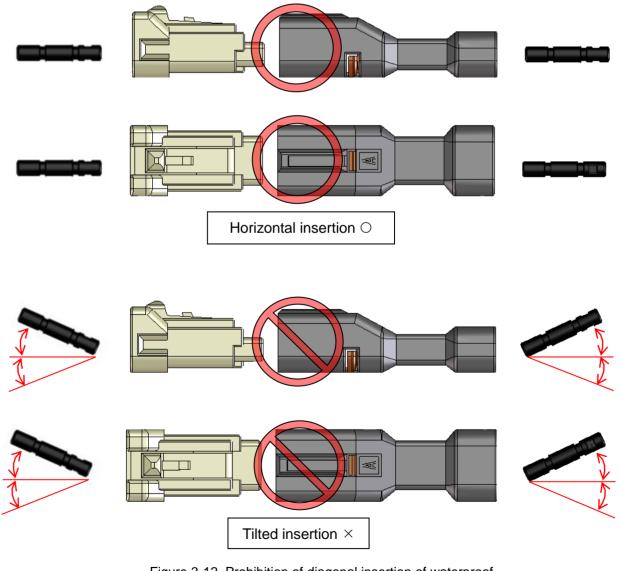


Figure 3-12. Prohibition of diagonal insertion of waterproof

HIROSE ELECTRIC CO.,LTD.

ETAD-H0760

<u> 4</u> 8

Insert a waterproof pin until it touches crimping socket.

- \*Insertion more than the target dimension could cause degradation of waterproof performance.
- \*To insert the waterproof pin over the target dimension, it has the possibility to fall to a low level of waterproof.

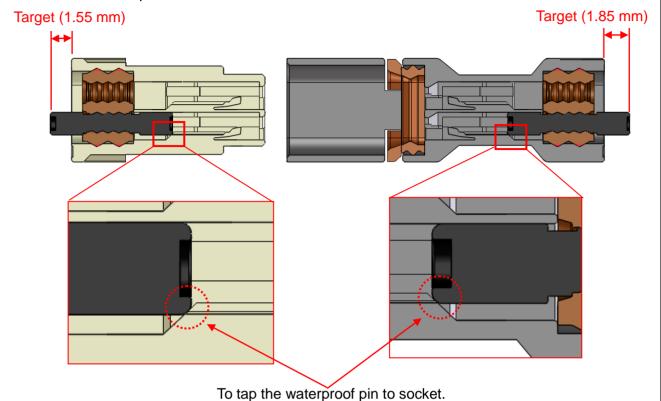



Figure 3-13. Depth of waterproof pin insertion pin



#### 3.5. Repair of crimped terminal

To remove crimped terminals that have been inserted, pull the cable using the dedicated Removing jig (DF62W/RE-MD) while pushing up the crimping socket lance.

Using crimping socket after repair could induce decrease of lance strength and / or wire seal damage. Use new socket to avoid such failures.

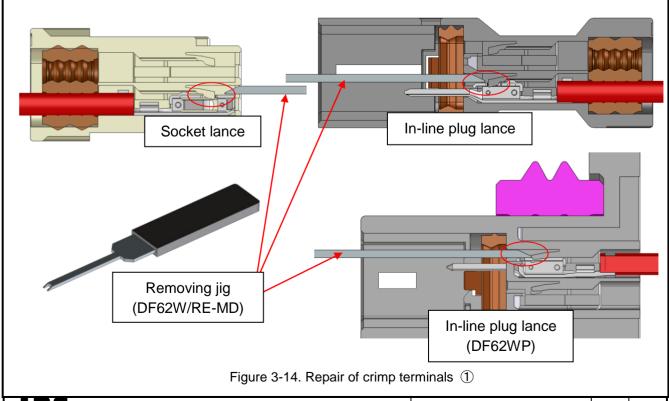

∕4∖

Insert the removing jig along the lance of crimping socket. (Check the appearance with the hand lens.)

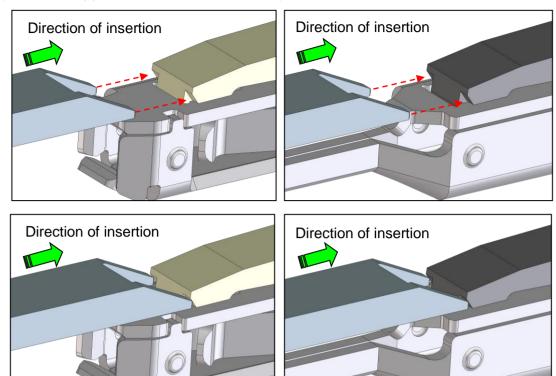


Figure 3-15. Repair of crimp terminals ②

Additionally insert the removing jig to push up the socket lance. Keep the lance position and pull the cable.

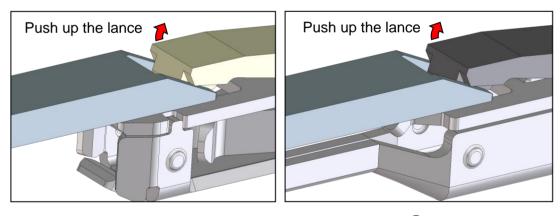


Figure 3-16. Repair of crimp terminals ③

<u>/4\</u>

## 4. Steps for mounting the panel of the DF62WP series.

## 4.1. Mounting the panel

### 4.1-a. Panel insertion

Align the connector using the screw holes on the panel side as a guide. Insert the connector as far as it will go while maintaining the aligned position.

\* The shape of the panel is an example.

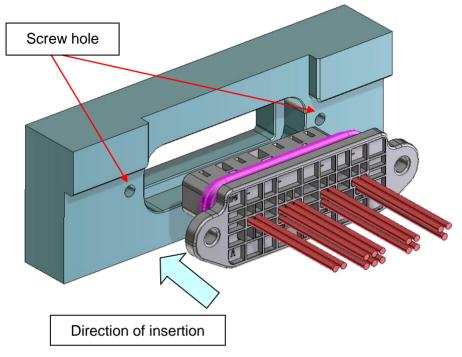


Figure 4-1. Insertion into the panel

If the panel has a shape to prevent reverse mounting, align the orientation with the protrusion shape before inserting.

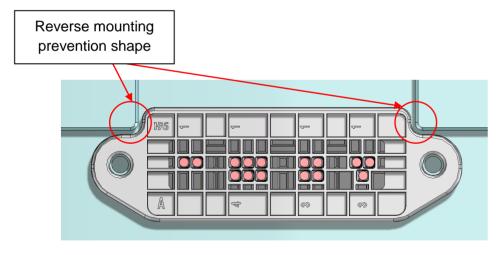


Figure 4-2. Reverse mounting prevention shape

Since the connector may be damaged or the waterproof seal may be broken, insert the connector straight into the panel and attach it.

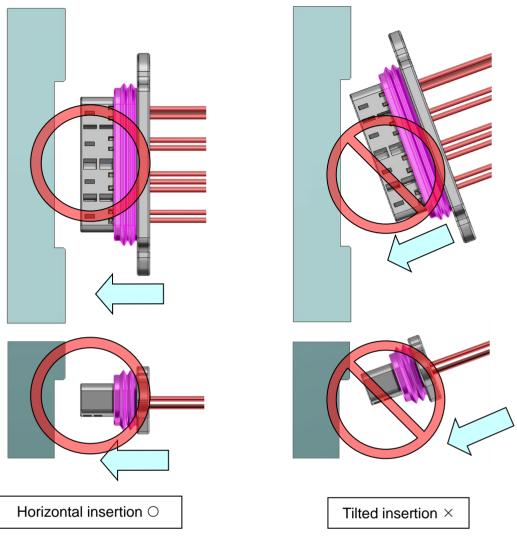


Figure 4-3. Prohibition of diagonal insertion

### 4.1-b. Fixed with screws

Install the screws with the connector fully inserted. At this time, do not fix the screws when the connector is biased in either the vertical or horizontal direction or when an excessive load is applied.

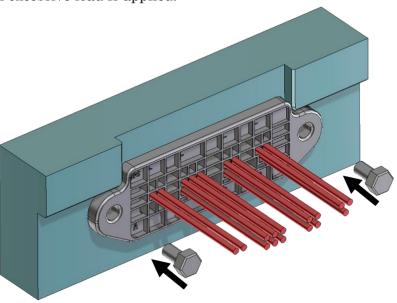


Figure 4-4. Screw fixing

HIROSE ELECTRIC CO.,LTD. ETAD-H0760

## 4.2. Remove from panel

# 4.2-a. Removing screws Remove screws.

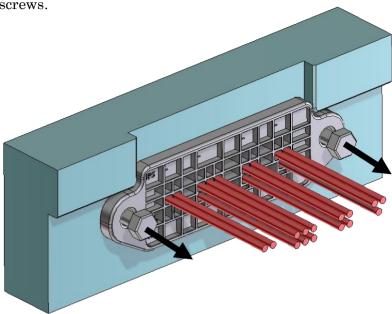


Figure 4-5. Removing Screw

## 4.2-b. Removing the connector

Remove the connector from the panel. At this time, push the connector mating surface side to remove it. Do not pull the cable to remove it as it may cause the terminal to come off.

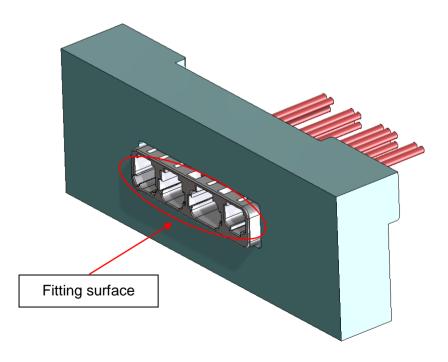


Figure 4-6. Removing from the panel

<u>/4\</u>

13 / 17

HIROSE ELECTRIC CO.,LTD. ETAD-H0760

#### 5. Notes

\*Packing and storage

To pack or store assemblies, make sure overlapped connectors will not apply extreme load to the lack section.

If load is applied to the lock section under high temperature and humidity for a long period of time, the lock section will be deformed which could lead poor fitting.

\*Excessive external force applied to connectors could cause failure or damage. Therefore, avoid forced insertion or removal, dropping impact, cable wiring (pull, twist) and such.

- Note) Breaking strength of lock is approx. 30 N when connector is pulled in straight direction. Please avoid excessive force is applied to the connector.
- Note) Retention force is approx. 7 N / Pin. Please avoid excessive force is applied to particular cable.
- \*When wiring the cable inside the device, make sure that the cable is routed with a margin so that it will not be in a stretched state or in a state where excessive tension is applied.
- 4\(\text{ \*Check with the cable manufacturer for cable flexibility.}
  - \*If the rubber seal is damaged, the connector is deteriorated water resistant performance. Therefore, do not use the connector whose rubber seal is damaged.
- \*When using the DF62WP series, use the screws shown in the drawing for the fixing screws.



## Cable bending

When bending the cable, provide a straight part from the end face of the connector as shown in the figure below and bend it.

(It depends on the flexibility of the cable, but please bend it at the position of 30 mm as a guide.)

Do not bend sharply from the end face of the connector or stretch the base of the cable because it will put a load on the terminal contact part and the terminal crimping part and cause contact failure and waterproof failure.

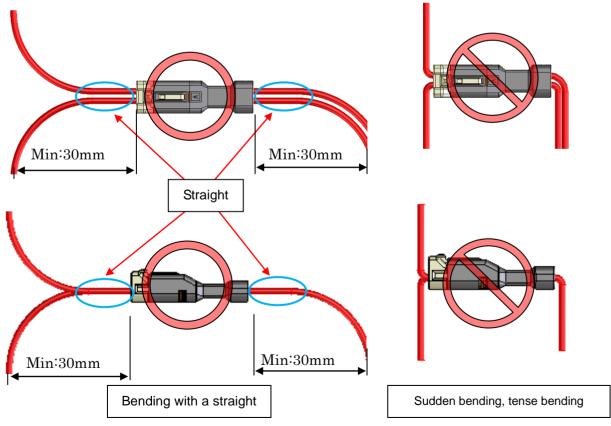


Figure 5-1. Cable bending

HIROSE ELECTRIC CO.,LTD. ETAD-H0760 (14/17)


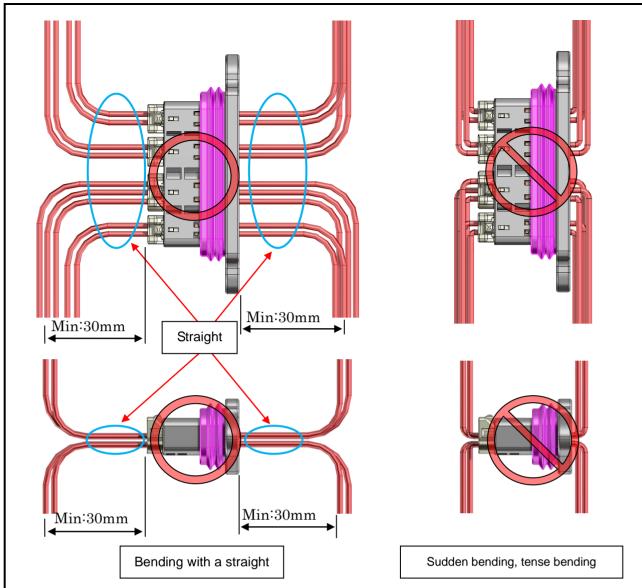


Figure 5-2. Cable bending (DF62WP)

## <u>∕4</u> **Cable bunding**

When bundling cables, prepare a part that is straight from the end face of the connector as shown in the figure below, and tie it at least 30 mm away from the end face of the connector.

Do not bind near the end face of the connector because it will put a load on the terminal contact part and the terminal crimping part and cause contact failure and waterproof failure.

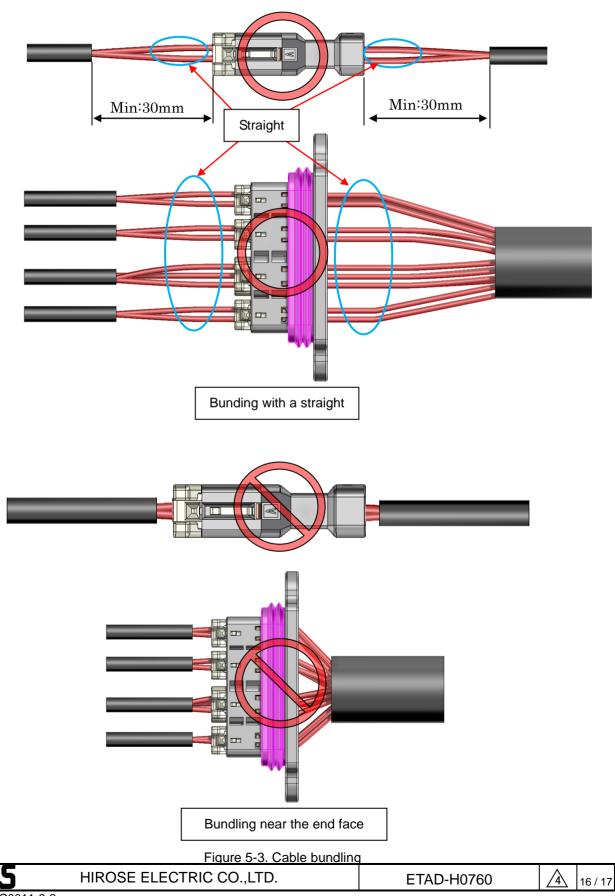

Please crimp with the terminal direction aligned.

If the terminal direction is not allinged, it is necessary to rocate the terminal and insert into the crimping case. It could cause loosing the contact by stress

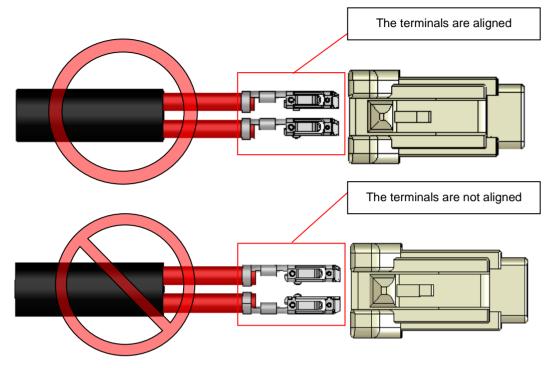


Figure 5-4. Terminal binding direction



## Repair of waterproof seal (DF62WP series)

The waterproof seal may shift by inserting or removing the connector from the panel. In that case, please use it after returning the waterproof seal to the normal position.

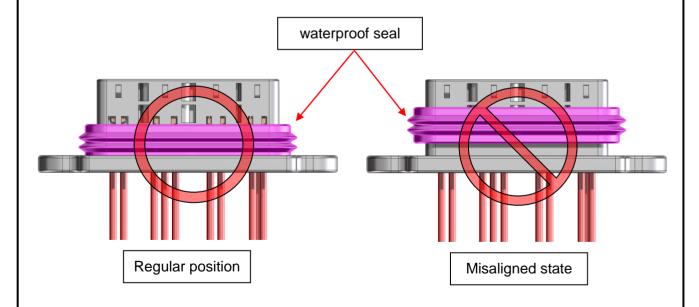


Figure 5-5. Repairing the waterproof seal

HIROSE ELECTRIC CO.,LTD.

ETAD-H0760