1. Scope

This document specifies the steps from crimping the DF62-series crimped terminals to cables (AWG22 ~ AWG30) to inserting the terminals to crimping sockets.

2. Connectors

■ Crimping cases

DF62 - *EP - 2.2 C

0 00 00

Name: DF62

3 Connector types S: Socket EP: In-line plug

4 Contact pitch: 2.2 mm

5 Shape of connection/terminal

C: Crimping case

■ Crimped terminals

DF62 - EP 2428 PCF A

0 0 0 0

Application

EP: In-line

2 Compatible cables

22 : AWG22 2428: AWG24 ~ 28 30 : AWG30

Shape/packing

SCF: Socket terminal, reeled SC: Socket terminal, separate PCF: Plug terminal, reeled PC: Plug terminal, separate

Plating

A : Gold plating Blank : Tin plating

3. Steps for harnessing

3.1. Cable stripping

Strip cables in accordance with Crimping Quality Standards (ATAD-H0642/0643). In so doing, make sure there is no scratch on cable cores.

	COUNT	DESCRIPTION OF REVISIONS	DESIGNED		CHECKED			DATE
Λ	4	DIS-H-008108	TH.YOSHIZAV	HIZAWA		MN.KENJO		13.08.22
TIT	ΓLE		HS HIROSE ELECTRIC CO.,LTD.					
DF62 Series Cable Assembly Procedure					ROVED KI.AKIYAMA		Α	13.04.23
					CKED HK.UMEHARA		RA	13.04.23
					GNED TS.KUMAZAWA		WA	13.04.23
					TEN TS.KUMAZAWA		WA	13.04.23
TECHICAL SPECIFICATION					ETAD-H0593		1	1/5

3.2. Crimping


Crimp terminals to cables using an applicator (AP105-DF62-**), and check the crimping height and shape in accordance with the Table of crimping conditions and Crimping Quality Standards (ATAD-H0642/0643).

(** = 22, 2428 or 30)


3.3. Insertion to crimping terminal sockets

Hold the cable of a crimped terminal, and insert it to each terminal hole of crimping sockets. (Insert the terminal in the direction of arrows below.)


↑ *The figures show insertion to DF62B-2EP-2.2C and DF62B-2S-2.2C.

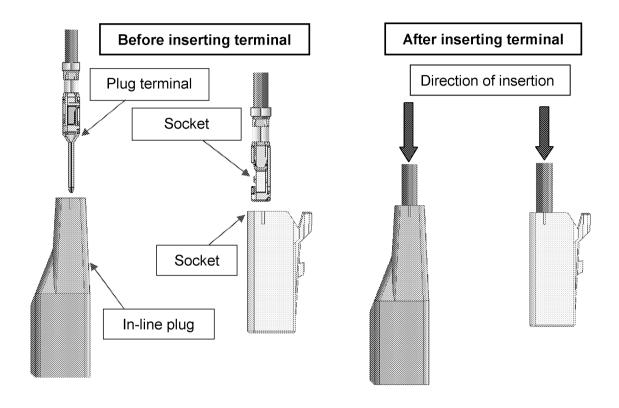


• For insertion, place the crimped terminal lance and crimping case lock in the following direction:

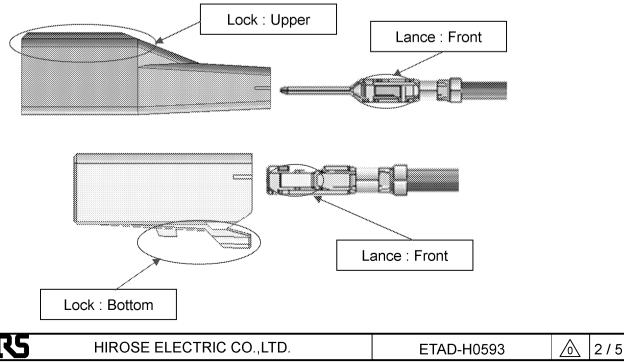


• See below for the terminal numbers of crimping cases:

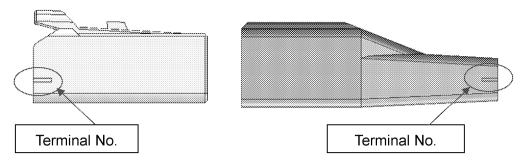

 \uparrow_1 terminal numbers (Common to socket and in-line plug)

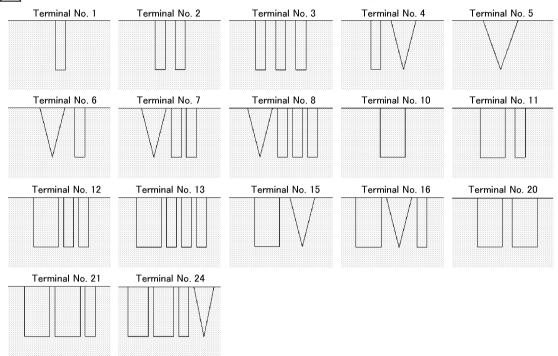


• To maintain performance reliability, do not tilt crimped terminals for insertion.

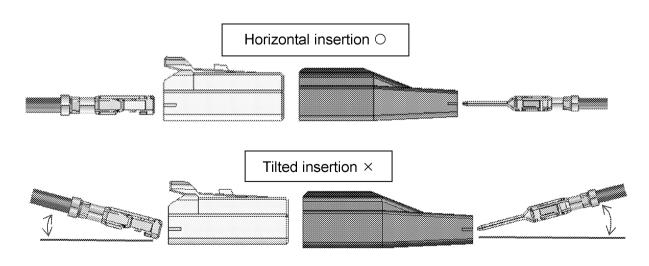

HU


HIROSE ELECTRIC CO.,LTD.

ETAD-H0593

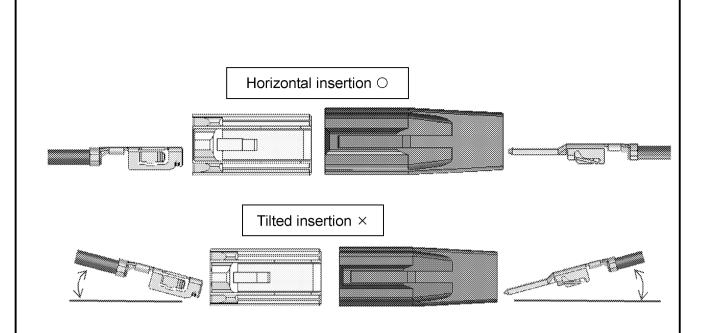

Check how terminals have been inserted

 Check that the lance of a crimped terminal has been caught at the lance holder of the crimping case.
(Slightly pull the terminal to check.)

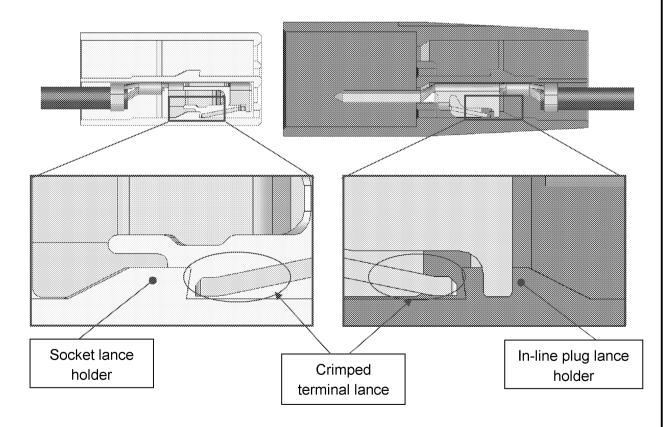


HU


HIROSE ELECTRIC CO.,LTD.

ETAD-H0593

*Repair crimped terminals

To remove crimped terminals that have been inserted, pull the cable using the dedicated removing jig while pushing up the crimped terminal lance.

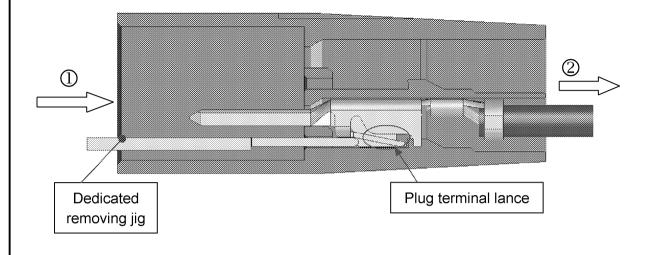

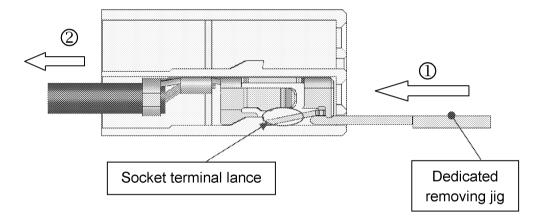

4. Precautions for handling

*Packing and storage

To pack or store assemblies, make sure overlapped connectors will not apply extreme load to the lock section.

If load is applied to the lock section under high temperature and humidity for a long period of time, the lock section will be deformed which could lead poor fitting.

᠕