




Procedures for using the Crimp Terminal Extracting Tool

Extracting Tool Name	DF-C-PO(A)		
Applicable Crimp Terminals	■ DF1B-****SCF(A)	■ DF3-****SC(F)(C)	
	■ DF1B-R**PR(F)	■ DF3-EP2428PC(F)(A)	

■ Procedures (e. g.) DF3-*S-2C, DF3-2428SCF

Insert the tip of the extraction tool along the lance groove of the housing until it hits the terminal lance. Hold both the tool and wire and pull them out together.

(Note 1) Please note that forcibly inserting or prying the tool may damage the housing lance or deform the terminals.

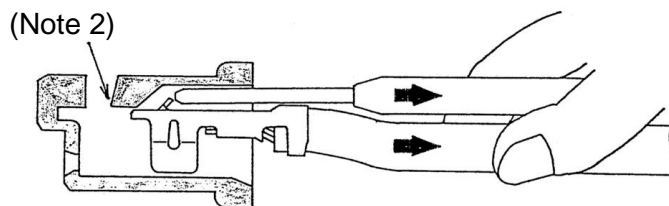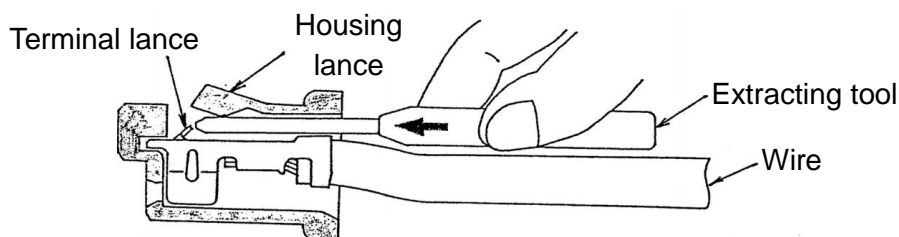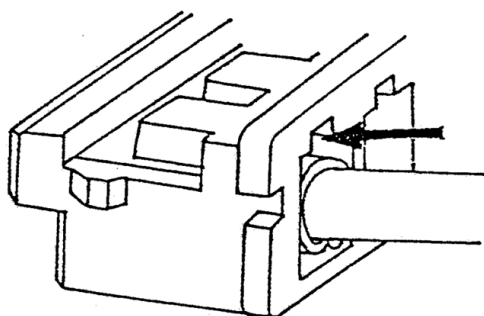

(Note 2) If you notice that the tip of the housing lance has scraped away when you pulled the terminal out, do not reuse the connector.

(Note 3) After you remove the terminal, the housing lance remains lifted and does not go back then, do not reuse the connector.

	COUNT	DESCRIPTION OF REVISIONS	DESIGNED	CHECKED	DATE												
△	0																
TITLE			<div style="display: flex; align-items: center; justify-content: center;"> HIROSE ELECTRIC CO., LTD. </div> <table border="1" style="width: 100%; border-collapse: collapse; margin-top: 5px;"> <tr> <td style="width: 30%;">APPROVED</td> <td style="width: 30%;">S.J. OKAMURA</td> <td style="width: 40%;">20210413</td> </tr> <tr> <td>CHECKED</td> <td>SZ. ONO</td> <td>20210413</td> </tr> <tr> <td>DESIGNED</td> <td>SN. MIWA</td> <td>20210413</td> </tr> <tr> <td>WRITTEN</td> <td>KT. NUMATA</td> <td>20210413</td> </tr> </table>			APPROVED	S.J. OKAMURA	20210413	CHECKED	SZ. ONO	20210413	DESIGNED	SN. MIWA	20210413	WRITTEN	KT. NUMATA	20210413
APPROVED	S.J. OKAMURA	20210413															
CHECKED	SZ. ONO	20210413															
DESIGNED	SN. MIWA	20210413															
WRITTEN	KT. NUMATA	20210413															
DF-C-PO(A)																	
Procedures for Using the Crimp Terminal Extracting Tool																	
TECHICAL SPECIFICATION																	
			ETAD-H1019-00	△	1 / 1												