



May.1.2024 Copyright 2024 HIROSE ELECTRIC CO., LTD. All Rights Reserved.
In case of consideration for using Automotive equipment / device which demand high reliability, kindly contact our sales window correspondents.

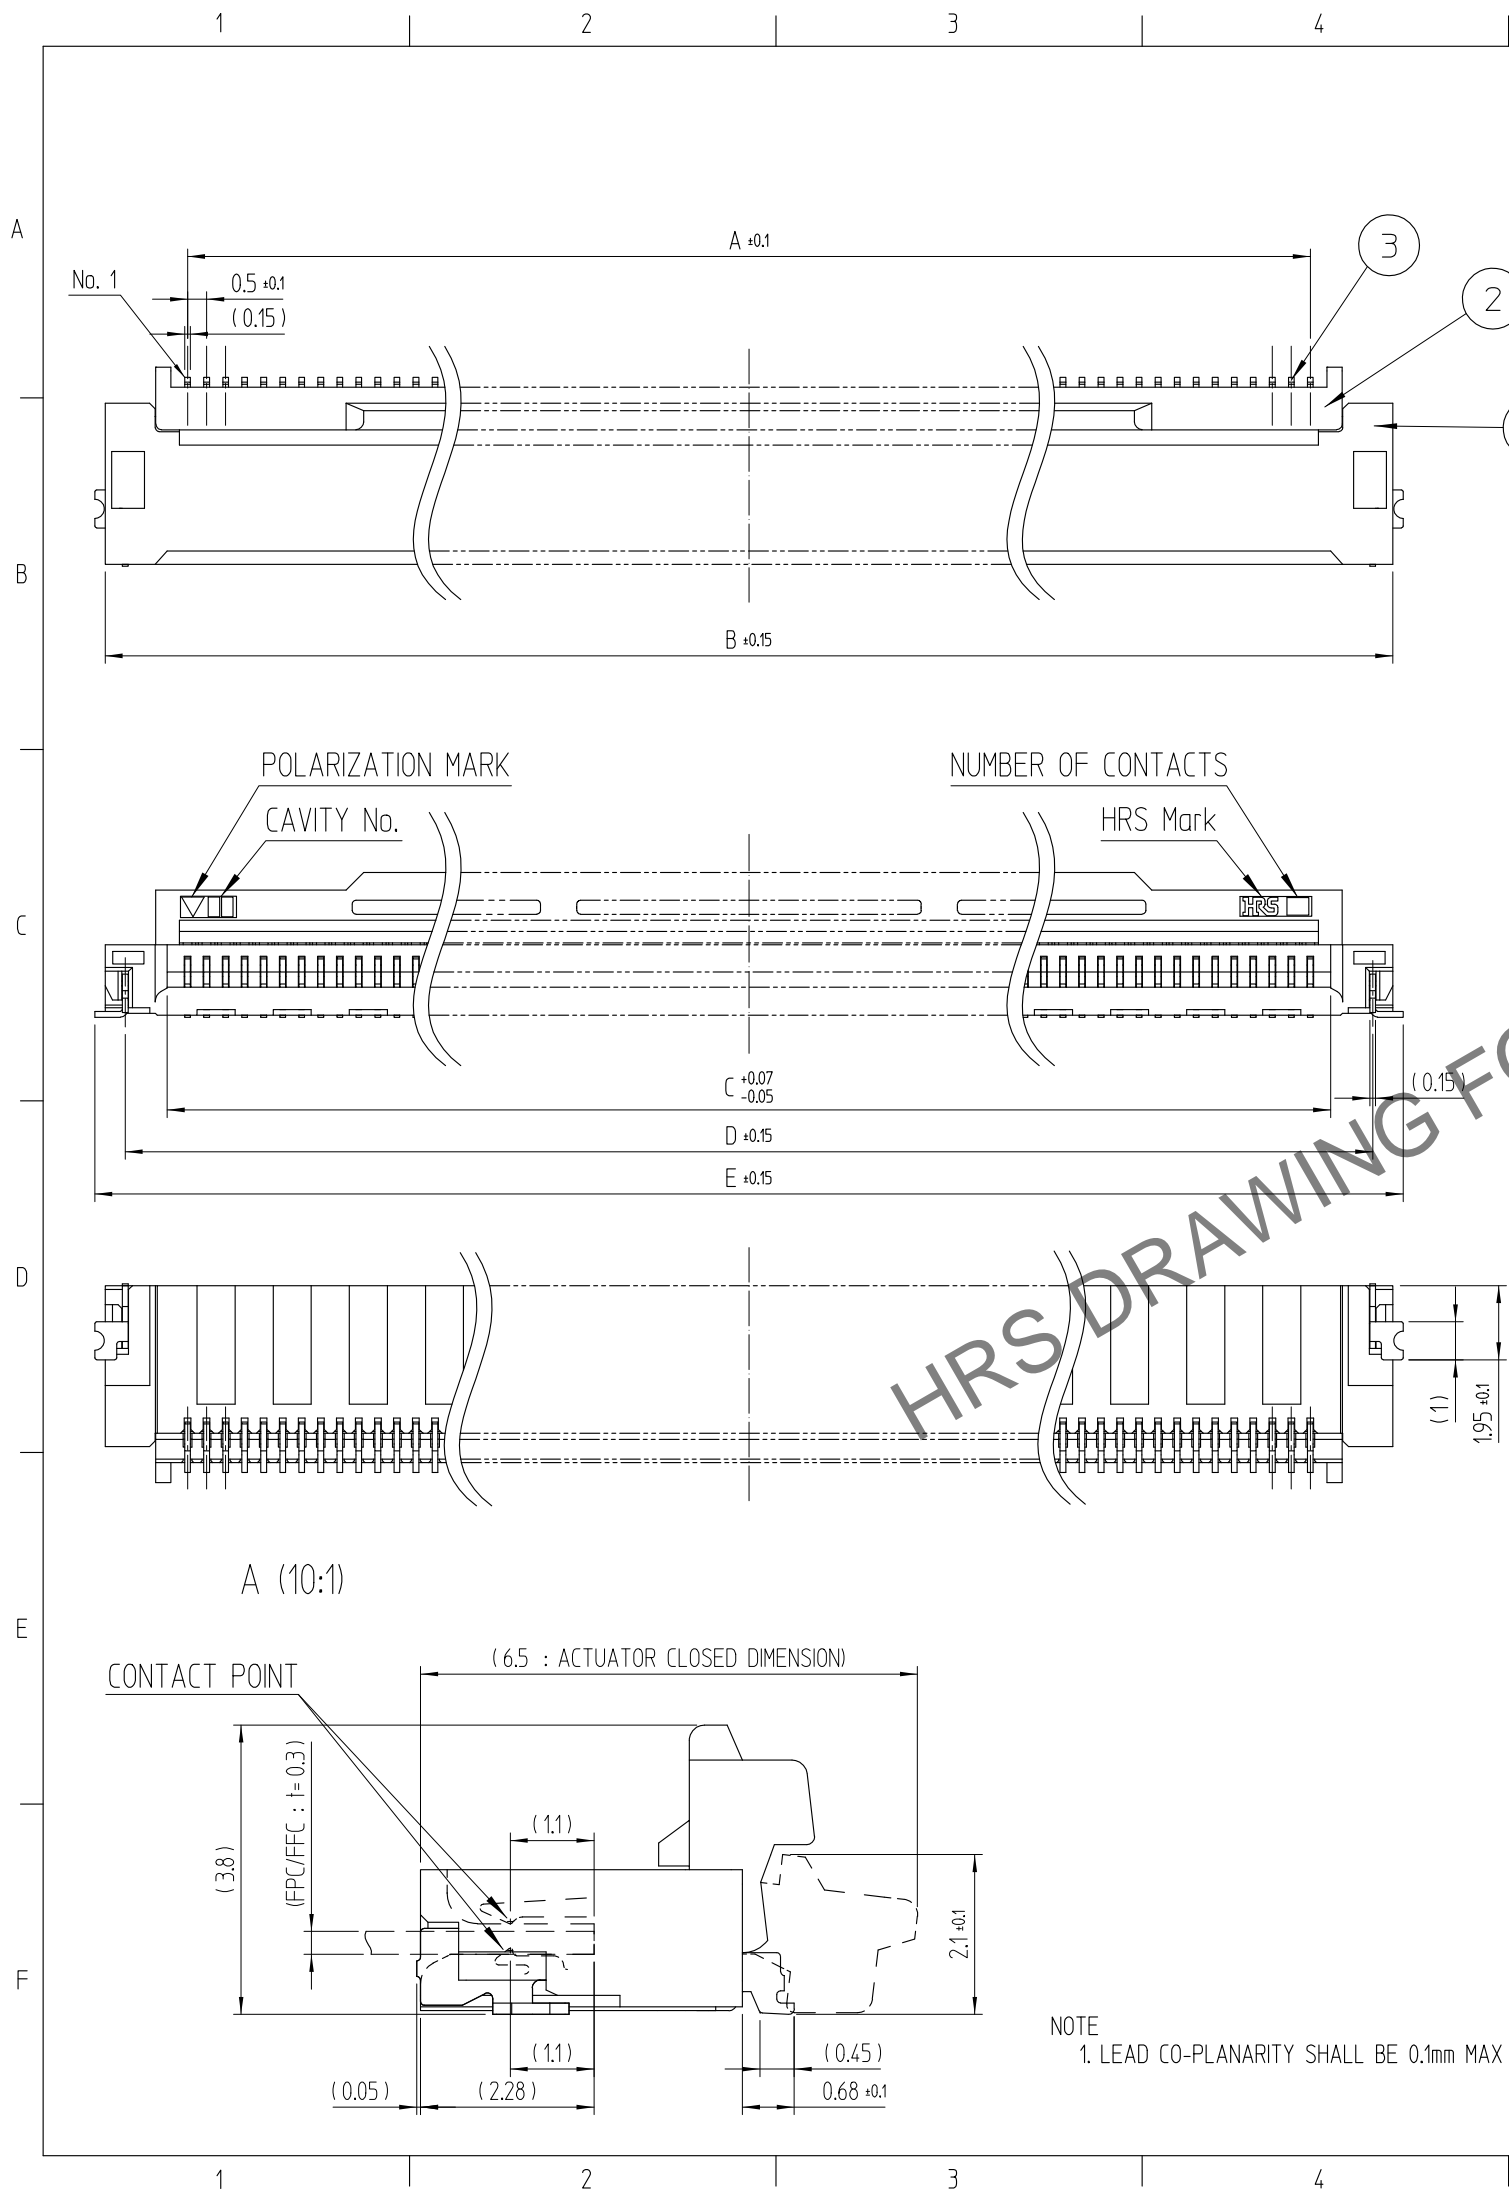


△數 COUNT	訂正事項 DESCRIPTION OF REVISIONS	擔當 B Y	檢圖 CHKD	年月日 DATE	△數 COUNT	訂正事項 DESCRIPTION OF REVISIONS	擔當 B Y	檢圖 CHKD	年月日 DATE
△					△				
△					△				
△					△				

RECOMMENDED LAND PATTERN, METAL MASK
METAL MASK t=0.12mm

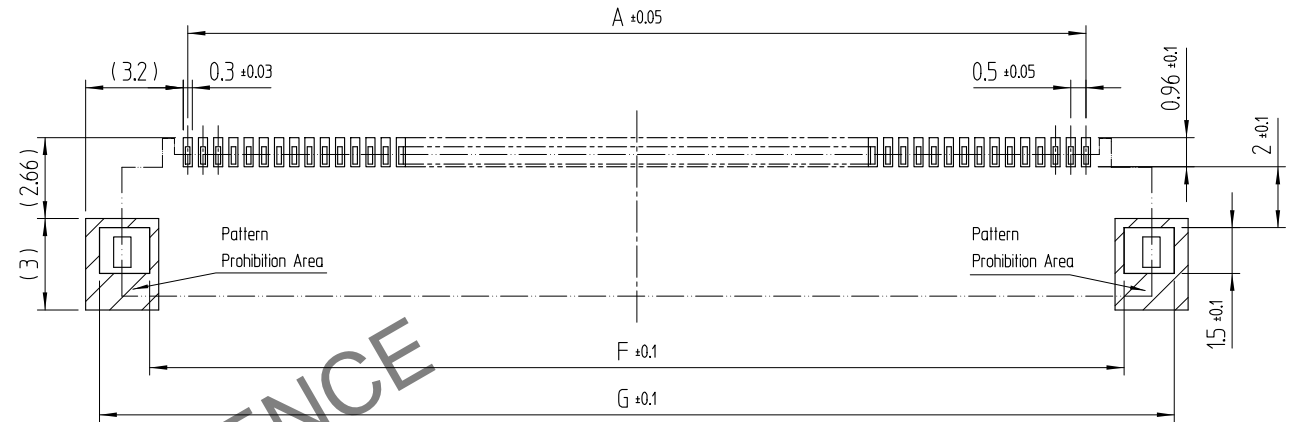


RECOMMENDED FFC/FPC PATTERN

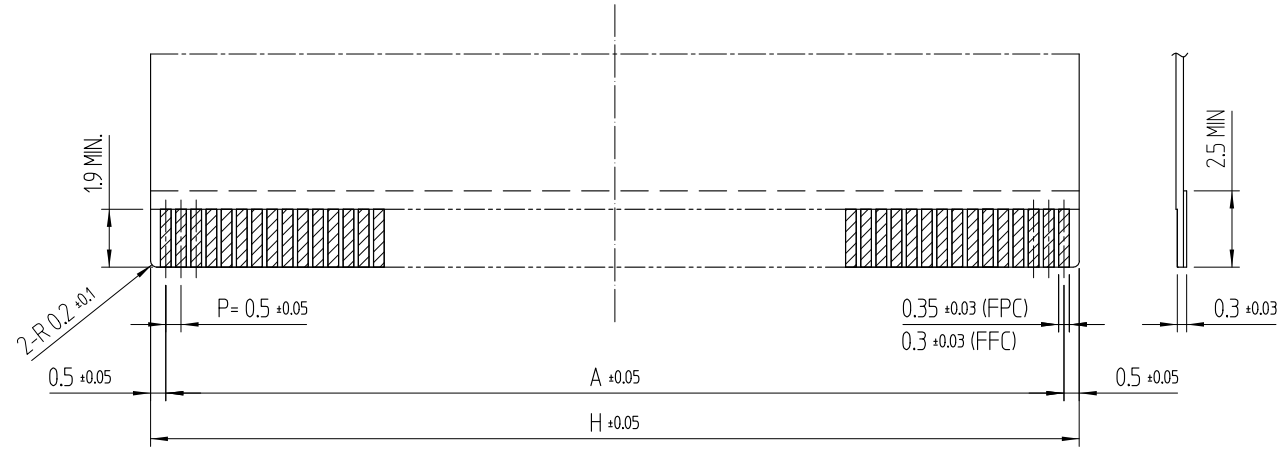

4	PHOSPHOR BRONZE	TIN PLATING 1μm MIN.OVER NICKEL 1μm MIN.			
3	PHOSPHOR BRONZE	(CONTACT) GOLD PLATING 0.03μm MIN.OVER NICKEL 1μm MIN. (LEAD) GOLD PLATING 0.03μm MIN.OVER NICKEL 1μm MIN. (OTHER) NICKEL PLATING 1μm MIN.	8	(CONNECTOR)	
2	LCP	UL94V-0 , BLACK	7	POLYSTYRENE	
1	LCP	UL94V-0 , BEIGE	6	POLYESTER	
			5	POLYSTYRENE	
NO.	MATERIAL	FINISH,REMARKS	NO.	MATERIAL	FINISH,REMARKS
CODE NO. (OLD)			DRAWN	DESIGNED	CHECKED
			Y.H.CHOI	Y.H.CHOI	D.H.CHO
			23.09.25	23.09.25	23.09.25
			APPROVED	RELEASED	
			D.H.CHO	23.09.25	
			ENG 23.10.13 DEPT		
DRAWING NO. EDC3-632756-80			PART NO. TF07V-**S-0.5SH (800)		
SCALE 5:1 UNITS mm			CODE NO CL 6588-0028-0-800		
HRS HIROSE KOREA CO.,LTD.			1/5		

May.1.2024 Copyright 2024 HIROSE ELECTRIC CO., LTD. All Rights Reserved.
In case of consideration for using Automotive equipment / device which demand high reliability, kindly contact our sales window correspondents.

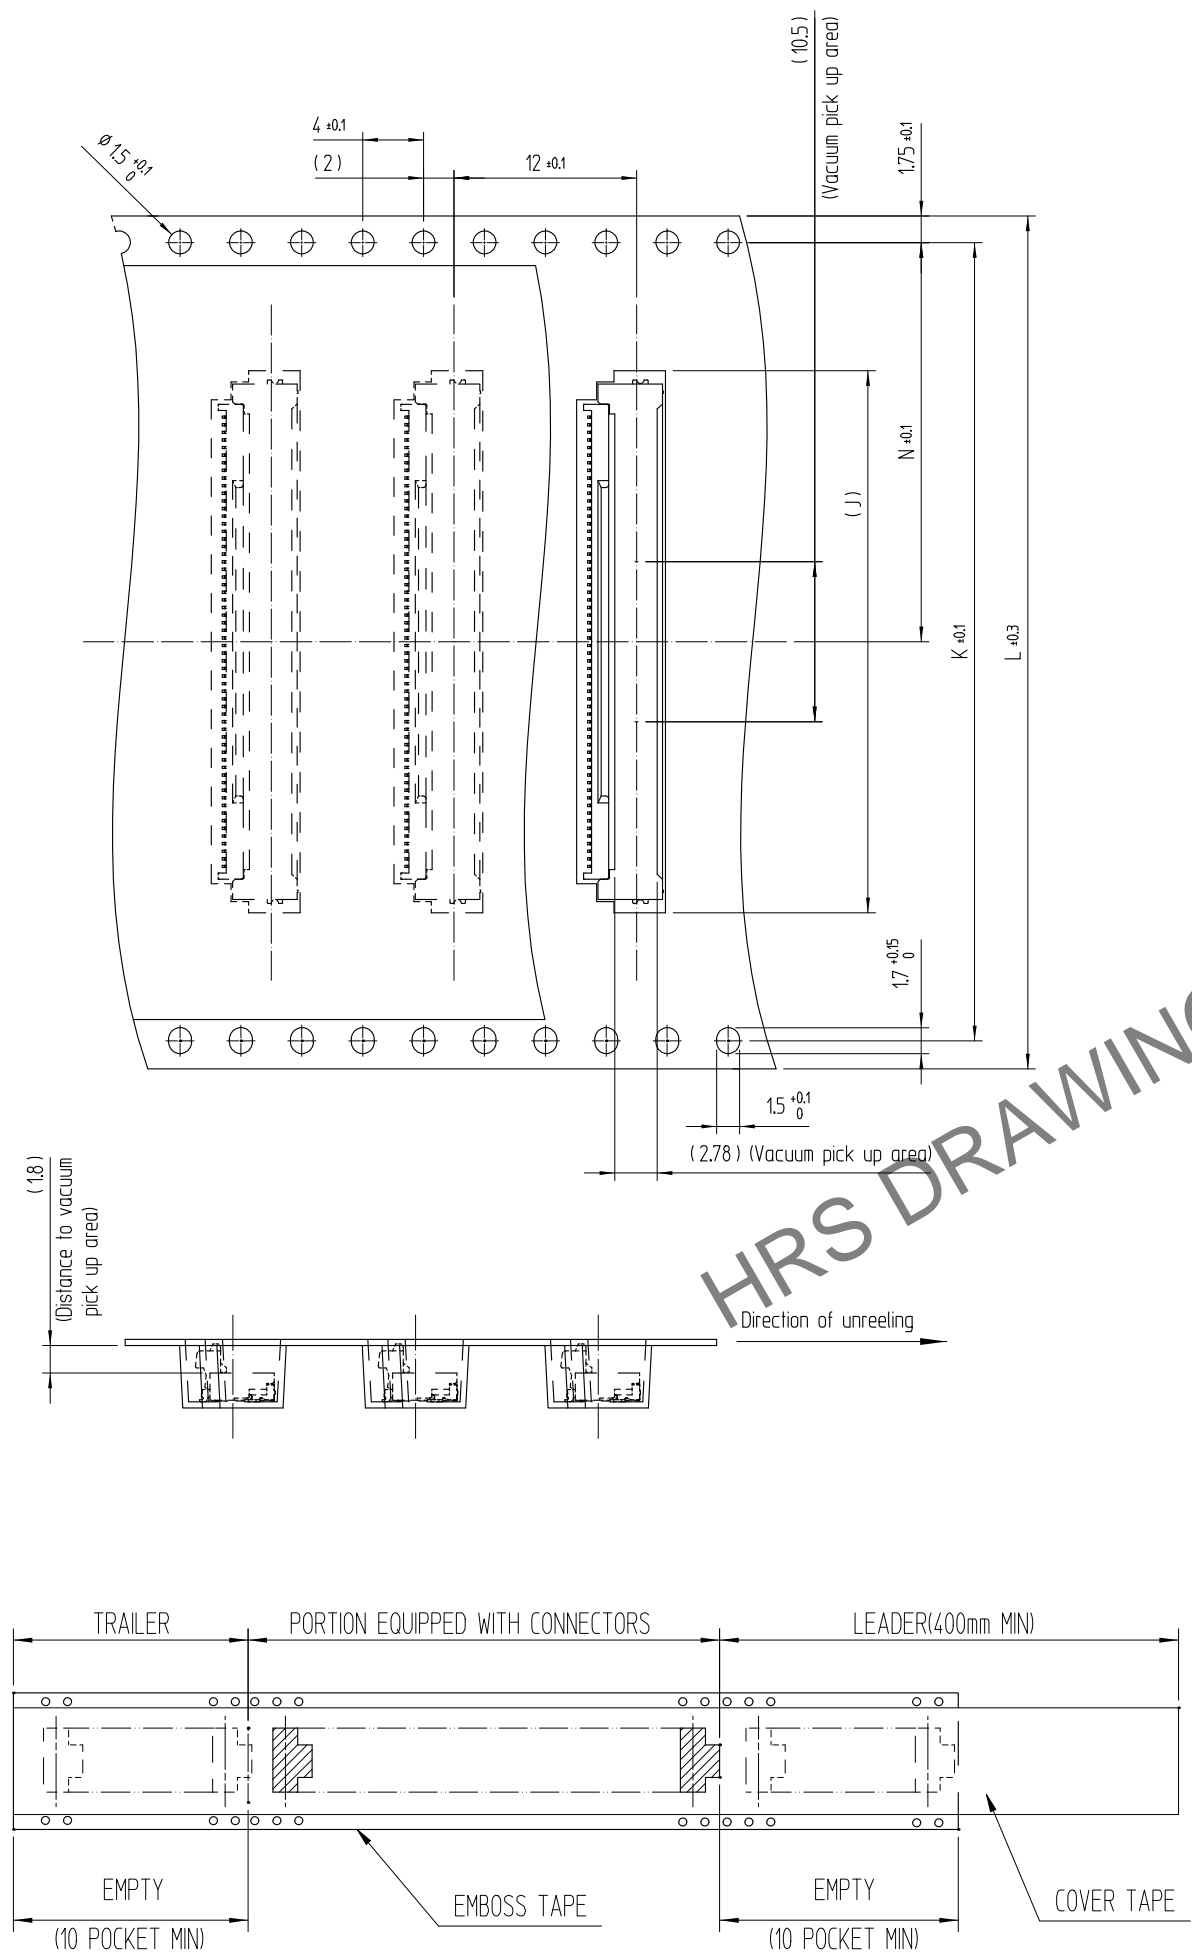

REEL DIMENSION (FREE)

NOTE 1. 1REEL : 1,500EA CONNECTORS

May.1.2024 Copyright 2024 HIROSE ELECTRIC CO., LTD. All Rights Reserved.
In case of consideration for using Automotive equipment / device which demand high reliability, kindly contact our sales window correspondents.

PART NUMBER	NUMBER OF CONTACTS	DIMENSION OF CONNECTOR/ FPC, PCB MOUNTING PATTERN								DIMENSION OF PACKING				
		A	B	C	D	E	F	G	H	J	K	L	M	N
TF07V-30S-0.5SH (800)	30	14.5	18.83	15.57	17.775	19.375	17	20.3	15.5	20.6	28.4	32	32.5	14.2
TF07V-40S-0.5SH (800)	40	19.5	23.83	20.57	22.775	24.375	22	25.3	20.5	25.6	40.4	44	44.5	20.2
TF07V-50S-0.5SH (800)	50	24.5	28.83	25.57	27.775	29.375	27	30.3	25.5	30.6	40.4	44	44.5	20.2
TF07V-60S-0.5SH (800)	60	29.5	33.83	30.57	32.775	34.375	32	35.3	30.5	35.6	52.4	56	56.5	26.2

HRS DRAWING FOR REFERENCE

This connector features small, thin and back flip design, requiring delicate and careful handling.
Read through the instructions shown below and handle the connector properly.

[Operation and Precautions]

1. Initial condition


Actuator does not have to be operated before inserting FPC.
as the connector is delivered with the actuator opened. [See Fig. 1]

[Caution]

-Do not close the actuator before inserting FPC
Closing the actuator without FPC could make the contact gap smaller, which could increase the FPC insertion force. [See Fig. 2]

[Fig. 1]


Actuator Open

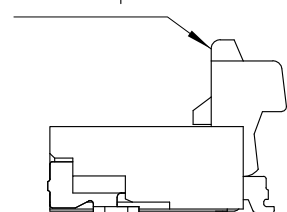

- Open when delivered -

[Fig. 2]

Actuator Close

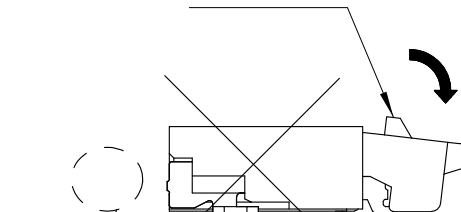

NO FPC

- Improper operation -

2. How to insert FPC


Insert the FPC into the connector opening horizontally to the board plane.
Insert it properly to the very end.

[Caution]

-Insert the FPC with the actuator opened. [See Fig. 3, Fig. 4]
-Twisting the FPC to up and down, right and left or an angle could cause contact deformation and contact failure.

[Fig. 3]


Actuator Open

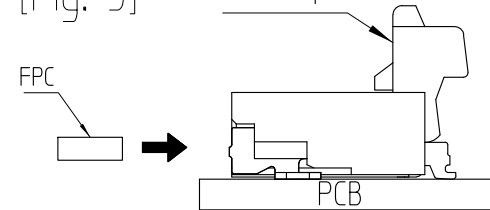

- Proper FPC insertion -

[Fig. 4]

Actuator Close

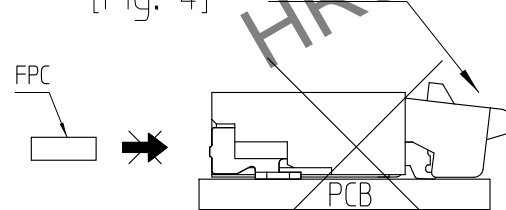


- Improper FPC insertion -

3. How to lock


Apply load to rotate the actuator by 96.7 degree after inserting the FPC. [See Fig. 5]

[Fig. 5]

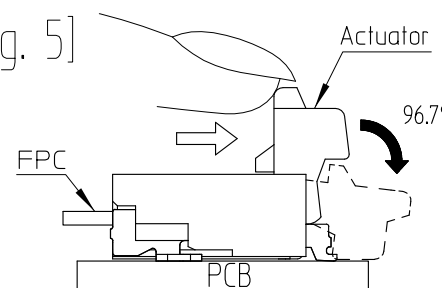

- Proper operation -

[Fig. 6]

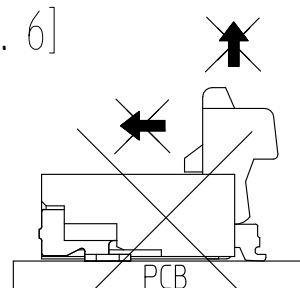

- Improper operation -

[Caution]

-The actuator rotates around the rotational axis. [See Fig. 7]
-Do not rotate the actuator to the counter direction.
Do not pitch or pick the actuator to lift. Otherwise, it may break. [See Fig. 6]
-Apply load to the mid-point on the actuator to rotate it. [See Fig. 8]
-Do not apply excess force to the housing during the operation.


[Prohibited acts]

Do not operate the side end of the actuator, or it may twist the actuator and cause half mating.

-Please operate both ends at the same time when you cannot operate the vicinity of the center part.

[Actuator movable range] (Side view)


[Fig. 7]

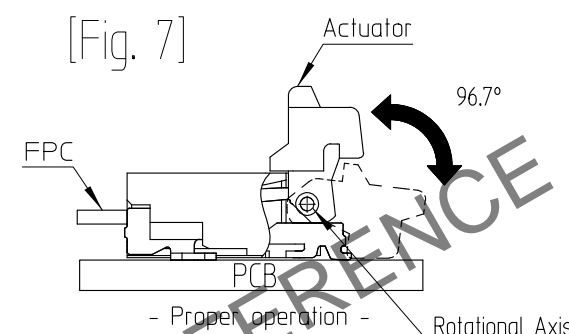

- Proper operation -

[Actuator operation area (lock and release)] (Top view)

[Fig. 8]

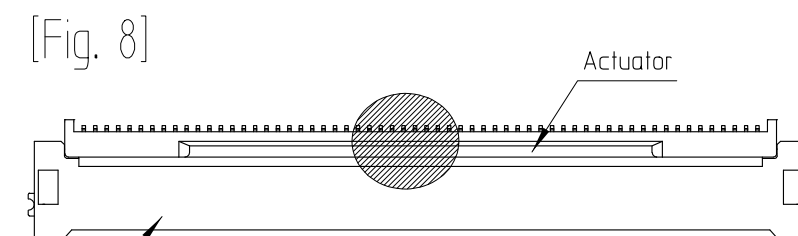

Apply load to the mid-point of the actuator.


4. How to remove FPC (How to unlock)

Slowly flip up the actuator to release the lock and remove the FPC

[Caution]


-The actuator is opened up to the movable limit. 96.7 degree.
Do not open the actuator beyond the specified degree or apply excess force to the actuator. [See Fig. 9]
-To open the actuator operate at the mid-point of the actuator. [See Fig. 8]
-Please note that the connector is back flip style connector, and the opening for FPC insertion and the actuator face the opposite direction. Do not try to lift the actuator at the FPC insertion opening side. [See Fig. 10]

[Fig. 9]

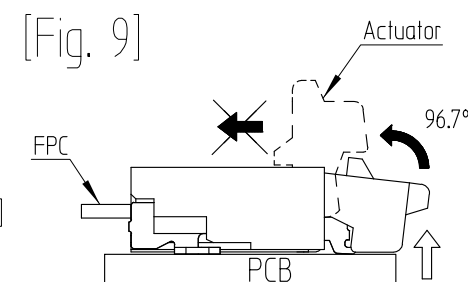

- Proper operation -

[Fig. 10]

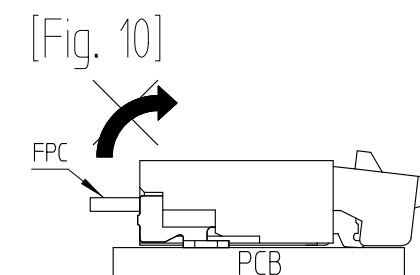

- Improper operation -

[Prohibited acts]

Do not lift up the side end of the actuator, or it may twist the actuator and cause breakage.

- Please operate both ends at the same time when you cannot operate the vicinity of the center part.

[Prohibited acts]

Do not pull out the FPC with the actuator locked.
When FPC is pulled out with the actuator locked, it cause the contact deformation and contact failure.


INSTRUCTION MANUAL<1>

This connector features small, thin and back flip design, requiring delicate and careful handling.
Read through the instructions shown below and handle the connector properly.

[Instructions for mounting on the board]

1. Warp of board
Minimize warp of the board as much as possible.
Lead co-planarity including reinforced metal fittings is 0.1 mm or less.
Too much warp of the board may result in a soldering failure.
2. Load to connector
Do not apply a force of 0.5N or more to the connector before mounting it on the board.
Otherwise, the connector may be broken.
Do not insert the FPC or operate the connector before mounting.
3. Load to board
 - Splitting a large board into several pieces
 - Screwing the boardAvoid the handling described above so that no force is applied on the board during the assembly process
Otherwise, the connector may become defective.
4. Reflow temperature profile
Apply reflow temperature profile within the specified conditions.
In individual applications, the actual temperature may vary,
depending on solder paste type, volume/thickness and board size/thickness.
Consult your solder paste and equipment manufacturer for specific recommendations.
- 5.Amount of bend of board
The bend of a 100mm wide board should be 0.5 mm or less. [See Fig. 11]
The bend of board could apply stress on the connector and it may become defective.


[Fig. 11]

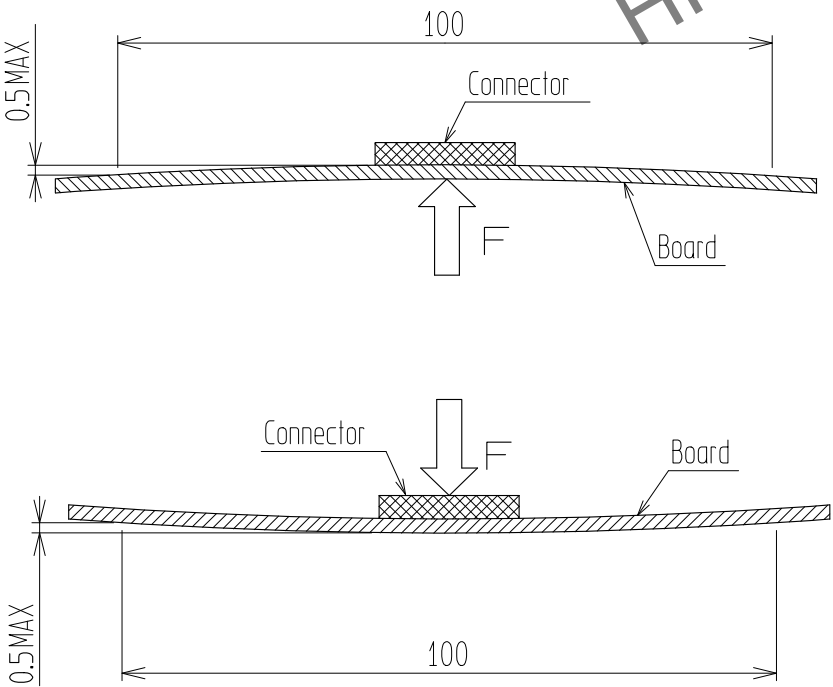

[Precautions for design]

1. During FPC wiring, ensure that stress is not applied directly to the connector
Do not bend the FPC excessively near the connector during use, or it may cause contact failure or FPC breakage. [See Fig. 12]
Stabilizing the FPC is recommended.

[Fig. 12]

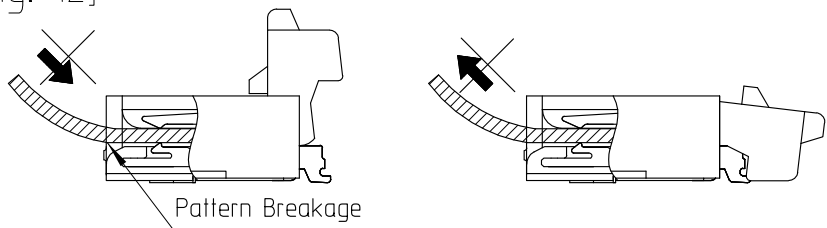

2. Keep a sufficient FPC insertion space in the stage of the layout in order to avoid incorrect FPC insertion
Appropriate FPC length and component layout are recommended for assembly ease.
Too short FPC length makes assembly difficulty.
3. Follow the recommended PCB layout, FPC design and the metal mask opening design.
4. Make adjustments with the FPC manufacturer for FPC bending performance and wire breakage.
5. Keep spaces for the actuator movement and its operation for PCB design and component layout.

[Other instructions]

1. Instructions on manual soldering
Follow the instructions shown below when soldering the connector manually during repair work, etc.

[Prohibited acts]

1. Do not perform manual soldering with the FPC inserted into the connector.
2. Do not heat the connector excessively.
Be very careful not to let the soldering iron contact any parts other than connector leads.
Otherwise, the connector may be deformed or melt.
3. Do not apply excessive solder (or flux).
If excessive solder (or flux) is applied on the terminals, solder or flux may adhere to the contacts or rotating parts of the actuator, resulting in poor contact or a rotation failure of the actuator.
Supplying excessive solder to the metal fitting may hinder actuator rotation, resulting in breakage of the connector.

INSTRUCTION MANUAL<2>