

			NUMBER		DIMENO	יזטו טב פט	NINIECTOD EI	חרו אוח חו	ATTENNI AND) METAL M	ICV			DIMENICION		TNC FOD F		
	PART NUMBER	CODE NUMBER	OF CONTACT	А	B	C	NNECTOR, F	E E	TIERN AND	G METAL MA	H	J	К	T T	OF DRAW	ING FUR F	AUNTINU	Q
	FH36-15S-0.3SHW(50)	CL580-1618-8-50	15	6.1	3.6	4.2	4.83	5.59	6.04	5.6	4.8	4.6	16	-	7.5	6.3	17.4	21.4
	FH36-17S-0.3SHW(50)	CL580-1606-9-50	17	6.7	4.2	4.8	5.43	6. 19	6.64	6.2	5. 4	5.2	16	-	7.5	6.9	17.4	21.4
	FH36-19S-0.3SHW(50)	CL580-1607-1-50	19	7.3	4.8	5.4	6.03	6.79	7.24	6.8	6	5.8	16	-	7.5	7.5	17.4	21. 4
	FH36-25S-0.3SHW(50)	CL580-1619-0-50	25	9.1	6.6	7.2	7.83	8,59	9.04	8.6	7.8	7.6	24	_	11.5	9.3	25.4	29. 4
	FH36-29S-0.3SHW(50)	CL580-1613-4-50	29	10.3	7.8	8.4	9.03	9, 79	10.24	9.8	9	8.8	24	-	11.5	10.5	25.4	29. 4
\triangle	FH36-33S-0,3SHW(50)	CL580-1615-0-50	33	11.5	9	9.6	10.23	10.99	11.44	11	10.2	10	24	-	11.5	11.7	25.4	29. 4
	FH36-35S-0.3SHW(50)	CL580-1604-3-50	35	12.1	9.6	10.2	10.83	11.59	12.04	11.6	10.8	10.6	24	-	11.5	12.3	25. 4	29. 4
	FH36-45S-0.3SHW(50)	CL580-1617-5-50	45	15. 1	12.6	13.2	13.83	14.59	15.04	14.6	13.8	13.6	24	-	11.5	15.3	25.4	29. 4
	FH36-51S-0.3SHW(50)	CL580-1601-5-50	51	16.9	14. 4	15	15.63	16.39	16.84	16. 4	15.6	15. 4	32	28.4	14.2	17. 1	33. 4	37. 4
	FH36-61S-0.3SHW(50)	CL580-1600-2-50	61	19.9	47.4	18	18.63	19. 39	19.84	19. 4	18.6	18.4	32	28.4	14.2	20.1	33. 4	37. 4
FH36-61S-0.3SHW(50) CL580-1600-2-50 61 19.8 13.4 18 18.63 19.39 19.84 19.4 18.6 18.4 32 28.4 14.2 20.1 33.4 37.4																		

 \triangle HRS DRAWING NO.
PART NO.
CODE NO. EDC3-156643-06 FH36-**S-0.3SHW(50) CL580 4/7

FORM HC0011-5-8 1 4

В

D

This connector is small and thin and requires delicate and careful handling. Read through the instructions shown below and handle the connector properly. Each values indicating here are for reference and may differ from standard value.

[INSTRUCTIONS FOR MOUNTING ON THE BOARD]

♦Warp of Board

Minimize warp of the board as much as possible.

Lead co-planarity including reinforced metal fittings is 0.1 mm or less. Too much warp of the board may result in a soldering failure.

Please make sure to put a stiffener on the backside of the flexible board. We recommend a glass epoxy material with the thickness of 0.3mm MIN.


↑ Load to Connector


↑ ♦Flexible board design

Do not add 0.5N or greater external force when unreel or pick and place the connector etc. or it may get broken.

⚠ [INSTRUCTIONS FOR PCB HANDLING AFTER MOUNTING THE CONNECTOR]

FORM HC0011-5-8 1

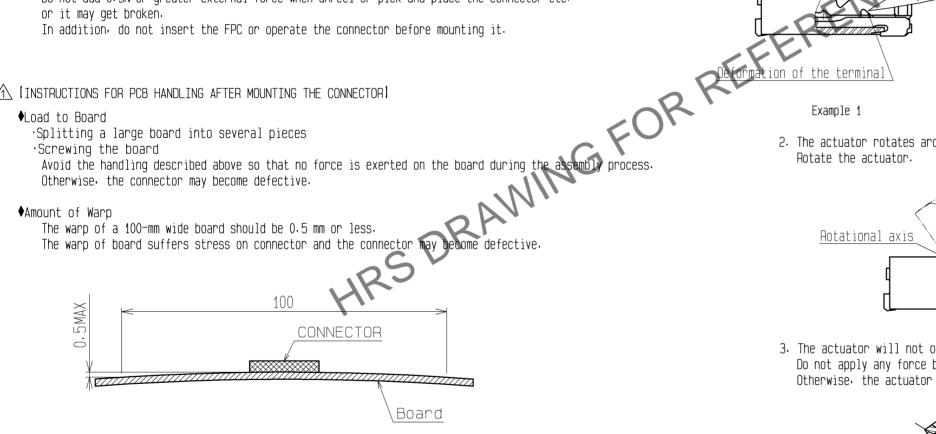


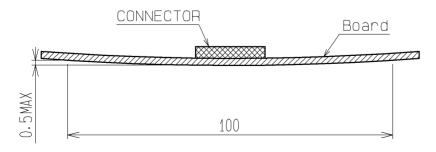

INSTRUCTIONS ON INSERTING FPC AND CONNECTION!


♦ Use of the actuator

1. Be very careful not to apply excessive force when releasing the actuator in the initial position (with no FPC inserted). If you use your nail or finger as shown below, the terminals may be deformed.

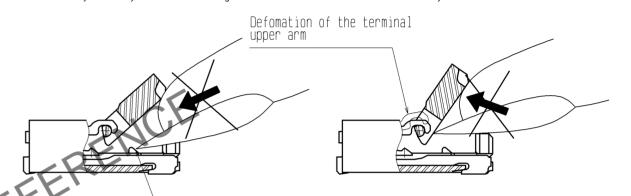


Example 2

2. The actuator rotates around the rotational axis as shown below

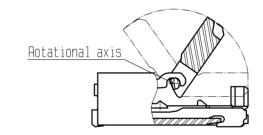


3. The actuator will not open more than 125°. Do not apply any force backward beyond this point. Otherwise, the actuator may come off or break.

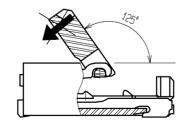


<INSTRUCTION MANUAL 1>

	DRAWING NO.	EDC3-156643-06		
HR5	PART NO.	FH36-**S-0.3SHW(5	0)	
	CODE NO.	CL580	\triangle	5/7

- 4. Move the actuator at approximately the center.
- 5. Do not pinch or pick the actuator to lift it as shown below. Otherwise, it may break. (Do not carry out any operation other than rotating the actuator as shown in 2 above.)

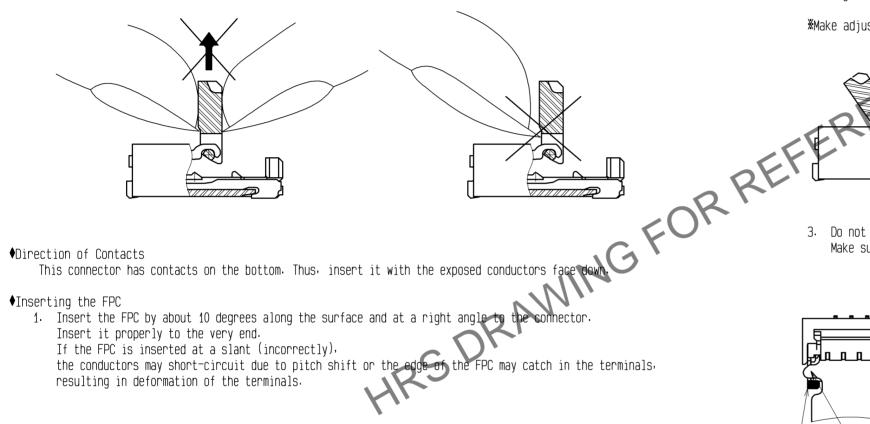

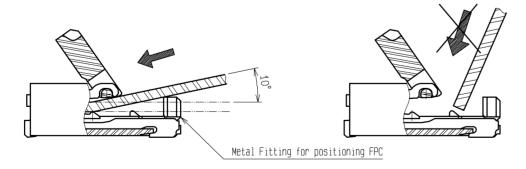


2. Do not insert the FPC diagonally from above.

If the FPC is inserted at a slant (incorrectly) as shown below in the FPC insertion process. the FPC may bend and patterns may break or the FPC may not insert completely. resulting in improper conduction.


*Keep a sufficient FPC insertion space in the stage of the layout in order to avoid incorrect FPC insertion.

Besides, it is not difficult to insert FPC correctly all the way to the end. Design the proper layout of parts.

₩Make adjustments with the FPC manufacturer for FPC bending perfomance and wire breakage.

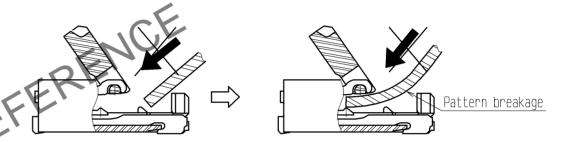

3. Do not rotate the actuator when FPC TAB is on Metal Fittings. Make sure the position of FPC TAB and Metal Fittings before rotate the actuator.

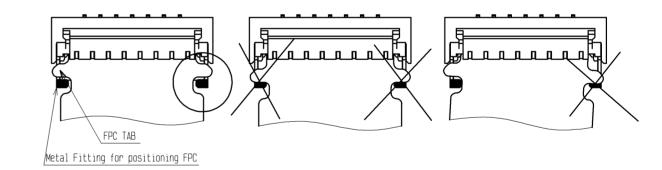

♦Checking the Locking Condition

In the locked condition, make sure that the actuator is horizontal on the board surface. Do not apply excessive force to it near the 0° position of the actuator. Otherwise, the terminals may be deformed. (Allowable force: 1 N or less)

<INSTRUCTION MANUAL 2>


DRA	EDC3-156643-()6
HR5 PAR		N(50)
COD	CL580	1 6 7


FORM HC0011-5-8 1


[INSTRUCTIONS ON FPC LAYOUT AFTER CONNECTION]

♦Load to FPC

Be very careful not to apply any force to the FPC after inserting it. Otherwise, the connector may become unlocked or the FPC may break. Fix the FPC, in particular, when loads are applied to it continuously. Design the FPC layout with care not to bend it sharply near the insertion opening.

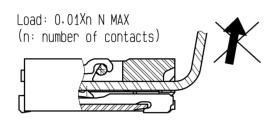

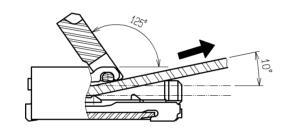

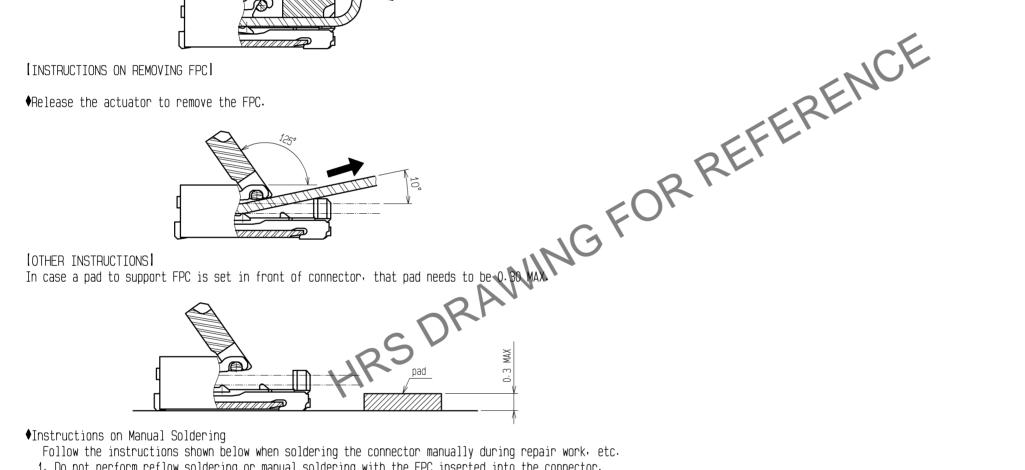

Follow the instructions shown below when soldering the connector manually during repair work, etc.

- 1. Do not perform reflow soldering or manual soldering with the FPC inserted into the connector.
- 2. Do not heat the connector excessively. Be very careful not to let the soldering iron contact any parts other than connector leads. Otherwise, the connector may be deformed or melt.
- 3. Do not use excessive solder (or flux).

If excessive solder (or flux) is used on the terminals, solder or flux may adhere to the contacts or rotating parts of the actuator, resulting in poor contact or a rotation failure of the actuator.

Supplying excessive solder to the reinforcing bracket may hinder actuator rotation. resulting in breakage of the connector.

<INSTRUCTION MANUAL 3>

		DRAWING NO.	ΕD	C3-156643-	06		
HV5		PART NO.	FH36	S-**S-0.3SH	W < 5	0)	
		CODE NO.		CL580		\triangle	7/7
		7		8			

В

D

FORM HC0011-5-8 1